



Engineering Manual

Rexnord MatTop and TableTop Chain – Issue 3

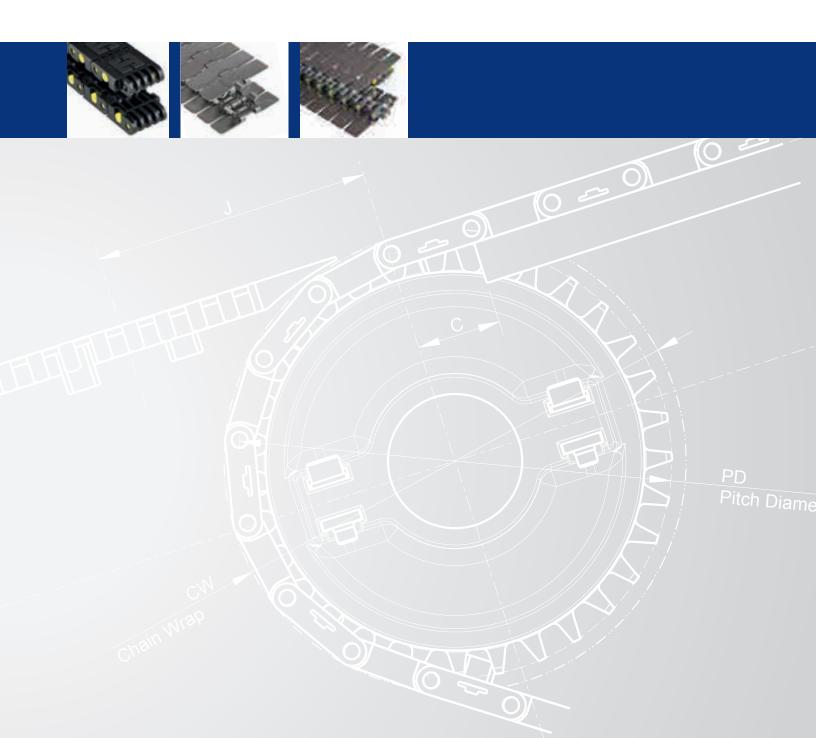

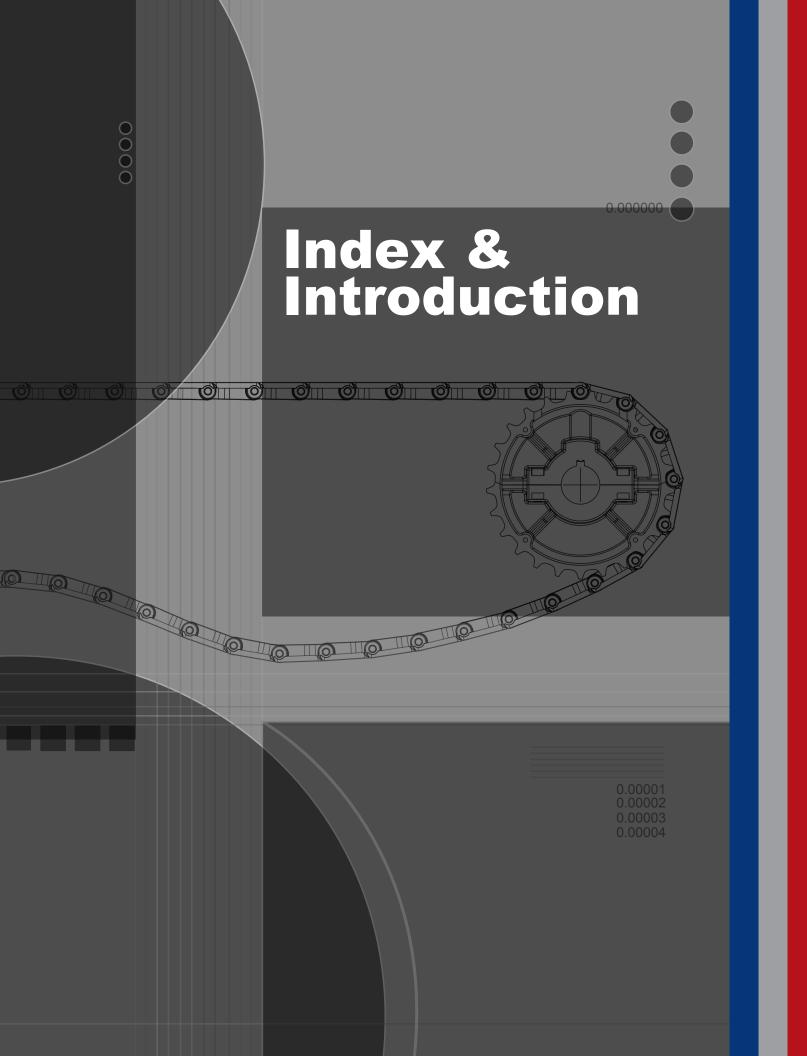



PAGE NUMBER

I.	Introduction	INTRO
	Applications Support	1
	Rexnord TableTop and MatTop Chain Features	2
	Symbols	3
II.	Rexnord TableTop Chain Section	EM - TT
	Chain Materials	2 - 7
	Friction Tables	4 - 7
	Sprocket and Idler Wheel Designations	8
	Wearstrip Materials	9 - 10
	Lubrication	11 - 14
	Environmental Conditions	15 - 18
	Material Characteristic Table	16
	Corrosion Resistance Guide	17 - 18
	Conveyor Design Recommendations	19 - 37
	Carry Ways	20 - 22
	Side-Flex Radius Table	23
	Guide Clearance Tables	24
	Transfers	25 - 27
	Alternate Drive Configuration/Offset Wrap Drive	28
	Return Ways	29 - 31
	Back-Flex Radius Table	31
	Catenary Sag/ Return Entry Radius	32
	Shaft Drop/Sprocket and Idler Wheel information/Shafting Recommendations	33 - 36
	Keyway and Setscrew Sizes/Sprocket Bore Nomenclature	37
	Chain Calculation Program	38 - 42
	Engineering Formulas	39 - 41
	Typical Product Sizes and Weights	42
III.	Rexnord MatTop Chain Section	EM - MT
		F141 - 141 1
	Chain Materials	2 - 8
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations	2 - 8
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials	2 - 8 5 - 8 9 10 - 11
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication	2 - 8 5 - 8 9 10 - 11
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions	2 - 8 5 - 8 9 10 - 11 12 13 - 16
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table	2 - 8 5 - 8 9 10 - 11 12 13 - 16
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956 7956B Dimensions and Guide Clearances	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956 7956B Dimensions and Guide Clearances 7956GT Dimensions and Guide Clearances	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31 32
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956 7956B Dimensions and Guide Clearances 7956GT Dimensions and Guide Clearances	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31 32 33
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956 7956B Dimensions and Guide Clearances 7956T Dimensions and Guide Clearances 7956TAB Dimensions and Guide Clearances	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31 32 33 34
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956 7956B Dimensions and Guide Clearances 7956T Dimensions and Guide Clearances 7956TAB Dimensions and Guide Clearances Carry Section Wearstrips – 7956B, GT, NT and TAB	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31 32 33 34 35 - 37
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956 7956B Dimensions and Guide Clearances 7956GT Dimensions and Guide Clearances 7956TAB Dimensions and Guide Clearances Carry Section Wearstrips – 7956B, GT, NT and TAB Return Section Wearstrips – 7956B, GT and NT	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31 32 33 34 35 - 37 38 - 39
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956 7956B Dimensions and Guide Clearances 7956TD Dimensions and Guide Clearances 7956TAB Dimensions and Guide Clearances Carry Section Wearstrips – 7956B, GT, NT and TAB Return Section Wearstrips – 7956B, GT and NT Basic Chain Dimensions – 7963/7966	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31 32 33 34 35 - 37 38 - 39 40
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956 7956B Dimensions and Guide Clearances 7956TT Dimensions and Guide Clearances 7956TAB Dimensions and Guide Clearances Carry Section Wearstrips – 7956B, GT, NT and TAB Return Section Wearstrips – 7956B, GT and NT Basic Chain Dimensions – 7963/7966 Edge Guide Dimensions – 7963NT/7966NT	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31 32 33 34 35 - 37 38 - 39 40 41
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956 7956B Dimensions and Guide Clearances 7956TT Dimensions and Guide Clearances 7956TAB Dimensions and Guide Clearances Carry Section Wearstrips – 7956B, GT, NT and TAB Return Section Wearstrips – 7956B, GT and NT Basic Chain Dimensions – 7963/7966 Edge Guide Dimensions – 7963NT/7966NT Guide Clearance – 7963NT/7966NT	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31 32 33 34 35 - 37 38 - 39 40 41 42
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance — Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance — Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions — 7956 7956B Dimensions and Guide Clearances 7956GT Dimensions and Guide Clearances 7956TAB Dimensions and Guide Clearances Carry Section Wearstrips — 7956B, GT, NT and TAB Return Section Wearstrips — 7956B, GT and NT Basic Chain Dimensions — 7963/7966 Edge Guide Dimensions — 7963NT/7966NT Guide Clearance — 7963NT/7966NT Edge Guide Dimensions — 7963ST/7966ST	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31 32 33 34 35 - 37 38 - 39 40 41 42 43
	Chain Materials Friction Tables Sprocket and Idler Wheel Designations Wearstrip Materials Lubrication Environmental Conditions Material Characteristic Table Corrosion Resistance Guide MatTop Chain Styles Conveyor Design Recommendations Guide Clearance – Assembled to Width Chains/Thermal Expansion Carry Ways and Return Ways Guide Clearance – Molded to Width Chains/Side-flexing Chains Basic Chain Dimensions – 7956 7956B Dimensions and Guide Clearances 7956TT Dimensions and Guide Clearances 7956TAB Dimensions and Guide Clearances Carry Section Wearstrips – 7956B, GT, NT and TAB Return Section Wearstrips – 7956B, GT and NT Basic Chain Dimensions – 7963/7966 Edge Guide Dimensions – 7963NT/7966NT Guide Clearance – 7963NT/7966NT	2 - 8 5 - 8 9 10 - 11 12 13 - 16 14 15 - 16 17 - 21 22 - 83 24 25 - 27 28 - 29 30 31 32 33 34 35 - 37 38 - 39 40 41 42

		PAGE NUMBER
	Transfers	47 - 56
	Alternate Drive Configurations	57 - 59
	Return Ways/Back-Flex Radius Table	60 - 69
	Catenary Sag/Return Entry Radius	70 - 71
	Shaft Drop/Sprocket Information	72 - 74
	Layout Dimensions for DTS Chains	75 - 78
	Transfer Comb Installation	79
	Shafting Recommendations	80
	Sprocket Locking Methods/Keyway and Set Screw Sizes/Bore Nomenclature	81-82
	Available Chain Width Table	83
	Sprocket Locations	84 - 131
	Chain Calculation Program	136 - 140
	Engineering Formulas	137 - 139
	Typical Product Sizes and Weights	140
V.	Multiflex Chain Section	EM - MF
	Chain Materials	2 - 7
	Friction Tables	4 - 7
	Sprocket and Idler Wheel Designations	8
	Wearstrip Materials	9 - 10
	Lubrication	11 - 12
	Environmental Conditions	13 - 15
	Material Characteristic Table	14
	Corrosion Resistance Guide	15
	Conveyor Design Recommendations	16 - 33
	Carry Ways	17 - 19
	Side-Flex Radius Table	20
	Guide Clearance Table	21
	Transfers	22
	Alternate Drive Configuration/Alpine Conveyor	23
	Return Ways	24 - 25
	Incline Conveyors	26
	Decline Conveyors	27
	Catenary Sag/Return Entry Radius	28 - 29
	Back-Flex Radius Table	29
	Shaft Drop/Sprocket and Idler Wheel Information	30 - 32
	Shafting/Keyway and Set Screw Sizes/Sprocket Bore Nomenclature	32 - 33
	Chain Calculation Program	34 - 36
	Friction Formulas	34
	Typical Product Sizes and Weights	35
√ .	Appendix	EM - MA
	Rexnord Chain Material Portfolio	1 - 45
۷I.	Application Information Sheet	EM - FORM

Rexnord[®], TableTop[®], MatTop[®], Positrack[®], DTS[®], DynamicTransfer System[™], TwistLock[®], RexFlex[™], HP[™], UHS[™], LPC[®], PS[®], Platinum Series[®], PosiClean and RubberTop[®] are trademarks of Rexnord Industries, Inc.

Nylatron is a trademark of Quadrant Engineering Plastics Products.

Teflon is a trademark of E.I. du Pont de Nemours and Company and its affiliates.

All Rights Reserved. © Copyright 2016 Rexnord

Rexnord Application Information Sheet



▶ Application Expertise/ Superior Engineering Support

With over 120 years of experience, we are the industry's most knowledgeable team of conveying experts.

Our chains are manufactured to perform better and last longer. Every chain stamped with the Rexnord® brand has undergone extensive research and quality testing, ensuring your conveying needs will be met with the most economical, efficient and reliable means possible.

Our qualified engineering staff is willing and able to assist you on all of your application needs. Rexnord will provide assistance with:

- · Chain selection recommendations
- · Chain pull calculations
- Product performance analysis
- · Product handling tests
- · Retrofit information
- · Plant surveys
- · Run dry surveys
- · New product development

Applications Throughout Industry

As expected, Rexnord's broad selection of chain is used throughout a wide variety of applications; such as food processing, beverage, unit handling and industrial applications.

Whenever the industry has to move, transfer or deliver the goods, chain from Rexnord is the preferred choice.

Online - At Your Fingertips

Let's face it - your time is valuable. At Rexnord, we realize the success of your business depends on up-to-date product information, superior technical support and customer service. That's why we've created www.rexnord.com. It's loaded with product information, useful tools and technical support options to help your business succeed. You can even search for a distributor in your area! Best of all, it's available 24 hours a day, seven days a week. So go ahead and log on today.

http://www.rexnord.com

Rexnord, TableTop and MatTop are trademarks of Rexnord Industries, Inc. All Rights Reserved.




TableTop and MatTop Chain Features

TableTop Chain Features

- ⇒ Available in both metal and plastic materials
- Available in both straight and side-flexing styles
- ⇒ Available in a wide variety of plastic materials
- Available in both one piece (unit link) and two piece (base chain with snap on topplate) designs
- Only available in Molded to Width (MTW) construction
- The maximum width for plastic chains is 12.00 in (304.8 mm) and the maximum for metal chains is 7.50 in (190.5 mm)
- Can be used with multiple strands and/or variable speed conveyors
- The pins do not extend across the entire width of the chain (hinge width < chain width)
 </p>

MatTop Chain Features

- ⇒ Available in virtually any width
- Available in both straight and side-flexing styles
- ⇒ Available in a wide variety of plastic materials
- Available in a variety of surface styles
- Available in Molded to Width (MTW) and Assembled to Width construction
- ⇒ Full width pins extend across the entire width of the chain
- ⇒ There are no gaps between the links when the chain is wrapped around the sprockets
- ⇒ Available with a variety of attachments:
 - Pushers
 - · Sideguards
 - Positrack
 - DTS DynamicTransfer System
 - Hold down TABs

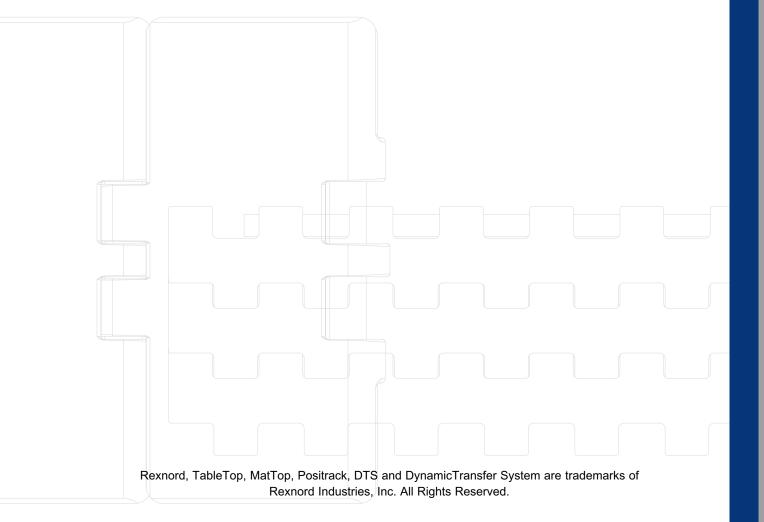




The documentation for this manual includes various icons described below:



TableTop Chain Icon

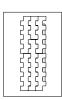

MatTop Chain Icon



Multiflex Chain Icon



Caution

This icon marks caution information that should be read before continuing on in this manual.



Information

This icon marks general information that should be read to further understand the specified topic.



Check Point

This icon marks check point information that expands on the subject explained.



Survey

This icon marks a survey that needs to be completed before continuing any process.




Grounding

This icon explains that grounding is crucial for all electrical equipment.

For further information about the use of the icons in this manual, please contact Rexnord Application Engineering 1.262.376.4800.

Rexnord, TableTop and MatTop are trademarks of Rexnord Industries, Inc. All Rights Reserved.

Rexnord TableTop Chains

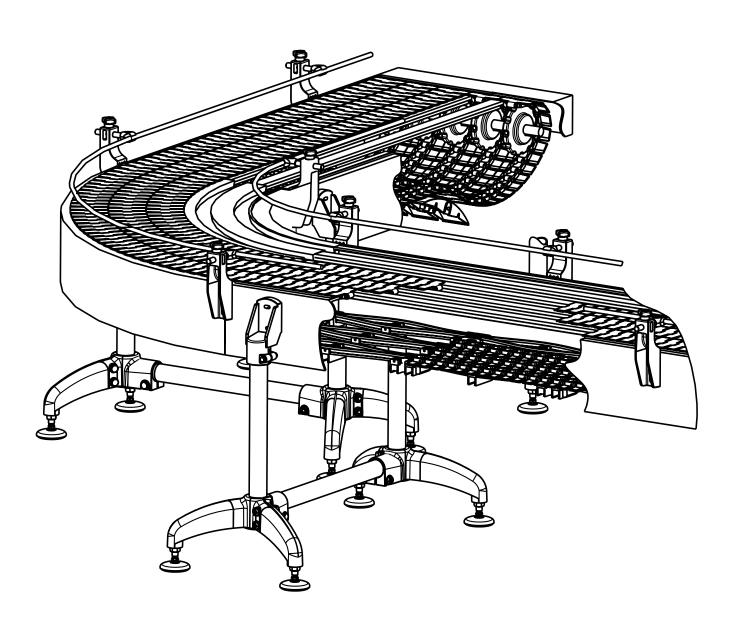

TableTop Conveyor Chain Materials

- > Acetal Family
- > D and WD (Acetal)
- > MIF
- > LF and WLF (Low-Friction)
- > HP[™] and WHP (High Performance)
- > PS™ (Platinum Series™)
- > PSX (Platinum Series X)
- > XLG (Low-Friction Acetal, Green)
- > XLA (Low-Friction Acetal, Gray)
- > Metal Family
- > S (Carbon Steel)
- > SS (Stainless Steel)
- > SSB (Low Magnetic Stainless Steel)
- > Specialty Plastics
- > AS (Anti-Static)
- > HCAS (High Capacity Anti-Static)
- > BIR (Black Impact Resistant)
- > ESD (Electrostatic Dissipative)

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are registered trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chains

CHAIN MATERIALS

For more detailed material information, see page EM - TT - 16 or the Appendix located at the end of this manual.

Materials vary per chain series; see Product Catalog to determine standard versus special materials.

Acetal Family

D and WD (Acetal)

⇒ Plain acetal

> MLF

- ⇒ Cost-effective general purpose chain material
- ⇒ Suitable for slower speeds

LF and WLF (Low-Friction)

⇒ Patented blend of acetal that provides good wear resistance and long service life due to the low coefficient of friction

HP and WHP (High Performance)

⇒ Patented blend of acetal specifically formulated for dry-running conveyors due to excellent friction characteristics

PS (Platinum Series)

⇒ Patented blend of acetal specially formulated for high-speed conveying applications

PSX (Platinum Series X)

- ⇒ High-speed conveying with little to no external lubrication
- ⇒ Long wear life with minimal dusting

XLG (Low-Friction Acetal, Green)

⇒ Internally lubricated extra low-friction acetal

XLA (Low-Friction Acetal, Gray)

 \Rightarrow Internally lubricated extra low-friction acetal

Metal Family

S (Carbon Steel)

- ⇒ A strong, abrasion-resistant, fine-grained, hardened carbon steel with a smooth finish
- ⇒ Used in applications requiring high strength, high impact resistance and a hardened chain surface such as part handling

SS (Stainless Steel)

⇒ Non-magnetic, corrosion-resistant, abrasion-resistant austenitic stainless steel

SSB (Low Magnetic Stainless Steel)

⇒ A special austenitic stainless steel which allows a magnetic field to pass through without affecting chain tension or drive requirements

Specialty Plastics

AS (Anti-Static)

- ⇒ An electrically conductive acetal formulated to reduce or eliminate nuisance static charge
- ⇒ **ALWAYS** contact Rexnord Application Engineering for assistance

HCAS (High Capacity Anti-Static)

- ⇒ Reduces or eliminates nuisance static
- ⇒ High capacity acetal resin, requires 10% derate from acetal counterparts

BIR (Black Impact-Resistant)

⇒ Specifically formulated to take constant impact

ESD (Electrostatic Dissipative)

- ⇒ Polypropylene formulated for conveying sensitive products such as electronics and computer chips where controlling static charge or static decay is critical
- ⇒ **ALWAYS** contact Rexnord Application Engineering for assistance



HC-ESD (High Capacity, Electrostatic Dissipative)

- ⇒ High capacity polypropylene formulated for conveying sensitive products such as electronics and computer chips where controlling static charge or static decay is critical
- ⇒ Requires 10% derate from polypropylene counterparts
- ⇒ **ALWAYS** contact Rexnord Application Engineering for assistance

FTR (Black, Fryer Temperature-Resistant)

⇒ Formulated to be used in oven/fryer discharge conveyor applications such as snack chips

GTC (Grey Tough Composite)

- ⇒ High-strength, impact modified composite
- ⇒ High impact resistance, low strength

USP (Ultra-Stabilized Polypropylene, Dark Green)

- ⇒ Superior resistance to chemicals used in pasteurizers, warmers and coolers
- ⇒ Remains stronger and more flexible than standard polypropylene

BWR (Black Wear-Resistant)

⇒ BWR may extend chain life up to 5 times in comparison to other plastic materials in applications such as conveying rough machined parts

WX/BWX (Abrasion-Resistant)

⇒ A nylon material formulated to be used in abrasive applications where chain is subjected to abrasives such as glass, sand and dirt

P (Chemical-Resistant)

⇒ A polyester formulated to reduce or eliminate material degradation in applications where chemicals such as chlorine and phosphorous are present in moderate concentrations

CR (Extreme Chemical-Resistant)

⇒ Fluorinated polymer that is chemically resistant to high concentrations of oxidizing agents, acids and bases

DUV (Ultraviolet-Resistant)

- ⇒ Specially formulated acetal
- ⇒ Used for outdoor applications with direct exposure to the sun or UV radiation

MR (Melt-Resistant)

⇒ A nylon material with a high melting point used to prevent hot objects (product temperature up to 375°F [190°C]) from melting the surface of the chain

FR (Flame-Retardant)

⇒ Flame-retardant polyester that meets the requirements of UL Standard 94 V-0 rated combustion

HS (Heat-Stabilized)

⇒ Nylon resin designed for environments that contain hot water spray (rinser, sterilizer and pasteurizer applications)

▶ BSM

- ⇒ Acetal-based resin with superior wear and cut resistance
- ⇒ Suitable for both dry and wet conditions



Since materials vary in strength, refer to the Product Catalog (8rxCAT-en) for specific chain / material strengths when changing out materials.



Not all materials are available in all chains. Contact Rexnord Application Engineering for further assistance.

TableTop Conveyor Chain Materials

- > HC-ESD (High Capacity, Electrostatic Dissipative)
- > FTR (Black, Fryer Temperature-Resistant)
- > GTC (Grey Tough Composite)
- > USP (Ultra-Stabilized Polypropylene, Dark Green)
- > BWR (Black Wear-Resistant)
- > WX/BWX (Abrasion-Resistant)
- > P (Chemical-Resistant)
- CR (Extreme Chemical-Resistant)
- > DUV (Ultraviolet-Resistant)
- > MR (Melt-Resistant)
- > FR (Flame-Retardant)
- > HS (Heat-Stabilized)
- > BSM

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are registered trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chain

TableTop Conveyor Chain Materials

> Friction Table Between Chain and Product (Fm)

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are registered trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

ableTop Chains



FRICTION TABLE BETWEEN CHAIN AND PRODUCT (Fm)

	Chain I	Material			Pro	oduct Mater	ial		
Base Material	Chain Material	Lubrication Condition	Aluminum	Returnable Glass Bottles**	Non- Returnable Glass Bottles	Paper	Plastic (crates, shrink)	Plastic (PET)	Steel
		Dry	0.18	0.20	0.12	0.23	0.18	0.16	0.18
	PS	Water	0.14	0.18	0.11	NR	0.16	0.15	0.16
	13	Soap & Water	0.12	0.14	0.10	NR	0.14	0.14	0.13
		Oil	_	-	_	NR	_	_	0.10
		Dry	0.16	0.20	0.12	0.23	0.18	0.16	0.16
	PSX	Water	0.13	0.18	0.11	NR	0.16	0.15	0.14
	13/	Soap and &	0.12	0.14	0.10	NR	0.14	0.14	0.12
		Oil	-	_	_	NR	-	-	0.10
		Dry	0.18	0.20	0.12	0.23	0.18	0.18	0.18
	HP, WHP	Water	0.14	0.18	0.11	NR	0.16	0.16	0.16
		Soap & Water	0.12	0.14	0.10	NR	0.14	0.14	0.13
		Oil	_	_	_	NR	-	_	0.10
		Dry	0.20	0.20	0.15	0.30	0.20	0.20	0.25
	LF, WLF, XL,	Water	0.15	0.18	0.13	NR	0.18	0.18	0.20
	XLA, XLG	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15
		Oil	_	-	_	NR	_	-	0.10
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
tal		Water	0.17	0.20	0.15	NR	0.20	0.20	0.22
Acetal	D, WD, MLF	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15
`		Oil	_	_	_	NR	_	_	0.10
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
		Water	NR	NR	NR	NR	NR	NR	NR
	AS, HCAS	Soap & Water	NR	NR	NR	NR	NR	NR	NR
		Oil	NR	NR	NR	NR	NR	NR	NR
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
	WSA, GSA,	Water	0.17	0.18	0.15	NR	0.20	0.20	0.22
	BSA	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15
	20, 1	Oil	-	-	-	NR	-	_	0.10
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
	WSM, BSM, SMB	Water	0.17	0.18	0.15	NR	0.20	0.20	0.22
		Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15
		Oil	-	-	-	NR	-	-	0.10
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
		Water	0.17	0.18	0.15	NR	0.20	0.20	0.22
	DUV	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15
		Oil	-	_	-	NR	-	_	0.10
		Dry	0.34	0.35	0.33	0.43	0.31	0.30	0.38
		Water	0.27	0.30	0.29	NR	0.22	0.21	0.30
	SS, SSC	Soap & Water	0.14	0.15	0.15	NR	0.15	0.14	0.15
		Oil	-	-	-	NR	-	-	-
		Dry	0.34	0.35	0.33	0.43	0.31	0.30	0.38
<u>-</u>		Water	NR	NR	NR NR	NR	NR	NR	NR
Metal	S	Soap & Water	NR	NR	NR	NR	NR	NR	NR
-		Oil	0.10	0.10	NR	NR	NR	NR	0.10
		Dry	0.28	0.47	0.35	0.40	0.30	0.30	0.35
		Water	0.19	0.47	0.25	NR	0.20	0.20	0.25
	SSB	Soap & Water	0.17	0.21	0.15	NR	0.10	0.10	0.15
		Oil	-	-	-	NR	-	-	0.15
			0.25	0.27	0.20	0.33	0.25	0.25	0.13
		Dry Water	NR	NR	NR	NR	NR	NR	NR
	WX/BWX	Soap & Water	NR	NR	NR	NR	NR	NR	NR
		Oil	-	-	-		-	-	-
			0.25	0.27	0.20	0.33	0.25	0.25	
		Dry	NR	NR	0.20 NR	0.33 NR	0.25 NR	0.25 NR	0.30 NR
	MR/FTR	Water Soap & Water		1	1		1		
ے ا		Oil	NR	NR	NR	NR	NR	NR	NR 0.10
Nylon			- 0.25	0.27	0.20	NR 0.33	0.25	0.25	0.10
Z		Dry	0.25			0.33			0.30
	BWR	Water Soap & Water	NR ND	NR ND	NR ND	NR	NR	NR NB	NR NB
		Oil	NR -	NR -	NR -	NR	NR -	NR -	NR 0.10
						NR 0.33			0.10
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
	HS	Water	0.17	0.18	0.15	NR	0.20	0.20	0.22
		Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15
		Oil	-	_	-	NR	_	_	0.10

NR denotes "not recommended"

Dash denotes "combination not tested"

All values shown in this table were obtained through product testing. Actual values may be higher or lower depending on environmental conditions.

Contact Rexnord Application Engineering for more information 1.262.376.4800



FRICTION TABLE BETWEEN CHAIN AND PRODUCT (Fm)

	Chain N	Material	Product Material								
Base Material	Chain Material	Lubrication Condition	Aluminum	Returnable Glass Bottles**	Non- Returnable Glass Bottles	Paper	Plastic (crates, shrink)	Plastic (PET)	Steel		
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
	тс	Water	0.17	0.18	0.15	NR	0.21	0.21	0.23		
		Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
		Oil	-	-	-	NR	0.10	0.10	0.10		
ter		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
yes	Р	Water	0.17	0.18	0.15	NR	0.21	0.21	0.22		
Pol		Soap & Water Oil	0.12	0.14	0.10	NR NR	0.15	0.10	0.15		
_		-	0.25	0.27	0.20		0.25	0.25	0.10		
		Dry Water	0.23	0.27	0.20	0.33 NR	0.20	0.23	0.30 0.22		
	FR	Soap & Water	0.17	0.16	0.13	NR	0.20	0.20	0.22		
		Oil	- 0.12	- 0.14	0.10	NR	0.13	- 0.13	0.13		
0		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.10		
ate		Water	0.17	0.18	0.15	NR	0.20	0.20	0.22		
iž Ž	CR	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
Polyethylene Polypropylene Polymer Polymer		Oil	-	-	-	NR	-	-	0.10		
ш	HT, WHT,	Dry	0.29	0.29	0.24	0.35	0.32	0.28	0.10		
	RHT, KHT,	Water	0.19	0.21	0.18	NR	0.24	0.20	0.25		
		Soap & Water	0.17	0.14	0.10	NR	0.19	0.15	0.23		
	XP, USP	Oil	-	-	-	NR	-	-	0.10		
		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
	WHA, BHA	Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
		Soap & Water	0.16	0.14	0.10	NR	0.20	0.20	0.20		
		Oil	-	-	-	NR	-	-	0.10		
		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
a)		Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
ene	ESD	Soap & Water	0.16	0.12	0.10	NR	0.20	0.20	0.20		
<u>Ş</u>		Oil	-	-	-	NR	-	-	0.10		
0.0		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
Ş	7.15	Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
ď	THD	Soap & Water	0.16	0.14	0.10	NR	0.20	0.20	0.20		
		Oil	_	_	_	NR	_	_	0.10		
		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
		Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
	HUV	Soap & Water	0.16	0.14	0.10	NR	0.20	0.20	0.20		
		Oil	_	_	_	NR	_	_	0.10		
		Dry	0.30	0.29	0.25	0.35	0.32	0.30	0.35		
	LILIC VDD	Water	0.19	0.21	0.19	NR	0.24	0.25	0.25		
	UHS, YPR	Soap & Water	0.16	0.14	0.10	NR	0.19	0.20	0.20		
		Oil	_	_	-	NR	_	-	0.10		
		Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.28		
	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Water	0.17	0.17	0.14	NR	0.18	0.18	0.22		
	WLT, BLT, LT	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
		Oil		_	-	NR	_	-	0.10		
		Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.28		
Φ	WLA, BLA	Water	0.17	0.17	0.14	NR	0.19	0.19	0.22		
éĎ	WLA, DLA	Soap & Water	0.12	0.14	0.10	NR	0.25	0.25	0.15		
ξ		Oil	-	-	-	NR	-	-	0.10		
yet		Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.28		
Pol	GLD, RLD	Water	0.17	0.17	0.14	NR	0.18	0.18	0.22		
-	JLD, KLD	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
		Oil		_	_	NR	_	_	0.10		
		Dry	0.22	0.24	0.28	0.30	0.22	0.22	0.28		
	LUV	Water	0.17	0.17	0.14	NR	0.18	0.18	0.22		
	25*	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.10		
		Oil	-	_	-	NR	-	-	0.10		
	All RubberTop Products	Dry	-	_	-	0.87***	0.85***	0.85***	_		

^{**} Friction of returnable bottles will depend on the quality of the glass, the amount of roughed up surface, etc.

NR denotes "not recommended"

Dash denotes "combination not tested"

TableTop Conveyor Chain Materials

> Friction Table
Between Chain and
Product (Fm)

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chair

^{***} It is not recommended to accumulate on RubberTop products; however, these values can be utilized when determining brake belt or "hold back" calculations.

TableTop Conveyor Chain Materials

> Friction Table Between Chain and Wearstrip (Fw)

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chains

FRICTION TABLE BETWEEN CHAIN AND WEARSTRIP (Fw)

	Chain I	/laterial	Wearstrip Material							
Base Material	Chain Material	Lubrication Condition	Steel and Stainless Steel	UHMWPE	Nylatron	ULF				
		Dry	0.22	0.18	0.18	0.12				
	PS	Water	0.20	0.16	0.16	0.11				
		Soap & Water Oil	0.15	0.14	0.14	0.11				
		-	0.10	0.10	0.10	0.10				
		Dry Water	0.22	0.18 0.16	0.18 0.16	0.12				
	PSX	Soap & Water	0.20	0.14	0.14	0.11				
		Oil	0.10	0.10	0.10	0.10				
		Dry	0.22	0.18	0.18	0.14				
		Water	0.20	0.16	0.16	0.12				
	HP, WHP	Soap & Water	0.15	0.14	0.14	0.11				
		Oil	0.10	0.10	0.10	0.10				
	. =	Dry	0.25	0.20	0.20	0.16				
	LF, WLF, XL, XLA, XLG	Water Soap & Water	0.20	0.18	0.18	0.14				
	ALA, ALG	Oil	0.15	0.15	0.15 0.10	0.13				
		Dry	0.10	0.10	0.10	0.10				
tal		Water	0.23	0.21	0.21	0.18				
Acetal	D, WD, MLF	Soap & Water	0.15	0.15	0.15	0.15				
~		' Oil	0.10	0.10	0.10	0.10				
		Dry	0.30	0.25	0.25	0.20				
	AS, HCAS,	Water	NR	NR	NR	NR				
	HC-ESD	Soap & Water	NR	NR	NR	NR				
		Oil	NR	0.10	0.10	0.10				
	\\\(\(\)\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Dry	0.30	0.25	0.25	0.20				
	WSA, GSA, BSA	Water Soap & Water	0.23 0.15	0.21 0.15	0.21 0.15	0.18 0.15				
	DJA	Oil	0.10	0.10	0.10	0.13				
	WSM, BSM,	Dry	0.30	0.25	0.25	0.20				
	SMB, BRSM,	Water	0.23	0.21	0.21	0.18				
	BYSM, SYMB,	Soap & Water	0.15	0.15	0.15	0.15				
	SRMB	Oil	0.10	0.10	0.10	0.10				
		Dry	0.30	0.25	0.25	0.20				
	DUV	Water	0.23	0.21	0.21	0.18				
	Dov	Soap & Water	0.15	0.15	0.15	0.15				
		Oil	0.10	0.10	0.10	0.10				
		Dry	0.40	0.30	0.30	0.30				
	SS, SSC	Water Soap & Water	0.35	0.22	0.22	0.22				
		Oil	0.15	0.10	0.10	0.10				
		Dry	0.40	0.30	0.30	0.30				
tal	S	Water	NR	NR	NR	0.22				
Metal	5	Soap & Water	NR	NR	NR	0.15				
		Oil	0.10	0.10	0.10	0.10				
		Dry	0.50	0.40	0.40	0.40				
	SSB	Water	0.40	0.30	0.30	0.30				
		Soap & Water Oil	0.20	0.20	0.20	0.20				
			0.20	0.10 0.25	0.10 0.25	0.10				
		Dry Water	NR	0.25 NR	0.25 NR	NR				
	WX, FR-PA	Soap & Water	NR	NR	NR	NR				
		Oil	NR	NR	NR	NR				
		Dry	0.30	0.28	0.28	0.25				
	MD ETD	Water	NR	NR	NR	NR				
	MR, FTR	Soap & Water	NR	NR	NR	NR				
		Oil	0.10	0.10	0.10	0.10				
c		Dry	0.28	0.22	0.22	0.20				
Nylon	BIR, BWR	Water	NR NB	NR	NR	NR				
Z		Soap & Water Oil	NR 0.10	0.10	NR 0.10	0.10				
			0.10	0.10	0.10	0.10				
		Dry Water	0.30	0.28	0.28	0.23				
	HS	Soap & Water	0.18	0.18	0.18	0.22				
		Oil	0.10	0.10	0.10	0.10				
		Dry	0.30	0.25	0.25	0.22				
	FR-ESD	Water	NR	NR	NR	NR				
	LK-E3D	Soap & Water	NR	NR	NR	NR				
		Oil	NR	0.10	0.10	0.10				

NR denotes "not recommended"

Dash denotes "combination not tested"

Contact Rexnord Application Engineering for more information 1.262.376.4800



FRICTION TABLE BETWEEN CHAIN AND WEARSTRIP (Fw)

	Chain N	/laterial	Wearstrip Material							
Base Material	Chain Material	Lubrication Condition	Steel and Stainless Steel	UHMWPE	Nylatron	ULF				
	GTC	Dry Water Soap & Water Oil	0.30 0.23 0.15 0.10	0.25 0.21 0.15 0.10	0.25 0.21 0.15 0.10	0.22 0.20 0.15 0.10				
Polyester	Р	Dry Water Soap & Water Oil	0.30 0.23 0.15 0.10	0.25 0.21 0.15 0.10	0.25 0.21 0.15 0.10	0.22 0.20 0.15 0.10				
	FR	Dry Water Soap & Water Oil	0.30 0.23 0.15 0.10	0.25 0.21 0.15 0.10	0.25 0.21 0.15 0.10	0.22 0.20 0.15 0.10				
Fluorinated	CR	Dry Water Soap & Water Oil	0.30 0.23 0.15 0.10	0.25 0.21 0.15 0.10	0.25 0.21 0.15 0.10	0.22 0.20 0.15 0.10				
	HT, WHT, RHT, KHT, HTB, BHT, YP, XP, USP	Dry Water Soap & Water Oil	0.35 0.30 0.25 0.10	0.30 0.25 0.20 0.10	0.30 0.25 0.20 0.10	0.26 0.22 0.19 0.10				
	WHA, BHA	Dry Water Soap & Water Oil	0.35 0.25 0.20 0.10	0.30 0.25 0.20 0.10	0.30 0.25 0.20 0.10	0.26 0.22 0.19 0.10				
pylene	ESD	Dry Water Soap & Water Oil	0.35 0.25 0.20 0.10	0.30 0.25 0.20 0.10	0.30 0.25 0.20 0.10	0.26 0.22 0.19 0.10				
Polypropylene	THD	Dry Water Soap & Water Oil	0.35 0.25 0.20 0.10	0.30 0.25 0.20 0.10	0.30 0.25 0.20 0.10	0.26 0.22 0.19 0.10				
	HUV	Dry Water Soap & Water Oil	0.35 0.24 0.20 0.10	0.30 0.16 0.20 0.10	0.30 0.16 0.20 0.10	0.26 0.22 0.19 0.10				
	UHS, YPR	Dry Water Soap & Water Oil	0.35 0.30 0.25 0.10	0.30 0.25 0.20 0.10	0.30 0.25 0.20 0.10	0.26 0.22 0.19 0.10				
	WLT, BLT, LT	Dry Water Soap & Water Oil	0.28 0.22 0.15 0.10	0.23 0.20 0.15 0.10	0.23 0.20 0.15 0.10	0.21 0.19 0.14 0.10				
ylene	WLA, BLA	Dry Water Soap & Water Oil	0.28 0.22 0.15 0.10	0.23 0.20 0.15 0.10	0.23 0.20 0.15 0.10	0.21 0.19 0.14 0.10				
Polyethylene	GLD, RLD	Dry Water Soap & Water Oil	0.28 0.22 0.15 0.10	0.23 0.20 0.15 0.10	0.23 0.20 0.15 0.10	0.21 0.19 0.14 0.10				
	LUV	Dry Water Soap & Water Oil	0.28 0.22 0.15 0.10	0.23 0.20 0.15 0.10	0.23 0.20 0.15 0.10	0.21 0.19 0.14 0.10				

NR denotes "not recommended"

Dash denotes "combination not tested"

TableTop Conveyor Chain Materials

> Friction Table Between Chain and Wearstrip (Fw)

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chain

TableTop Sprocket and **Idler Wheel Designations**

- > Plastic
- > Acetal (N)
- > Heat-Stabilized Nylon (HS)
- > LF Acetal (LF)
- > Glass-Reinforced Nylon (NS)
- > Chemical-Resistant **Fluorinated Polymer**
- > KU and KUS (Machined Plastic)
- > Metallic
- > Semi-Steel (Cast Iron)
- > SS (Stainless Steel)

Plastic

Acetal (N)

⇒ Good corrosion- and wear-resistant properties

Rexnord has developed a variety of sprocket

applications. Sprockets are available in plastic

and idler materials for various and unique

⇒ One-piece sprocket

and metallic varieties.

⇒ Temperature Range: -40° to +180°F $(-40^{\circ} \text{ to } +82^{\circ}\text{C})$

Heat-Stabilized Nylon (HS)

- ⇒ Stabilized nylon-based resin for environments that contain hot water spray rinser, sterilizer and pasteurizer applications
- ⇒ Resists thermal degradation from 212°F (100°C) water spray
- ⇒ Available in select one-piece styles only
- ⇒ Temperature Range: +40° to + 240°F $(+4^{\circ} to +116^{\circ}C)$

LF Acetal (LF)

- ⇒ Available in select idler wheel styles only
- ⇒ Self-lubricating
- ⇒ Temperature Range: -40° to +180°F $(-40^{\circ} \text{ to } +82^{\circ}\text{C})$

Glass-Reinforced Nylon (NS)

- ⇒ Split sprocket design for ease in assembly and disassembly
- ⇒ Excellent wear-resistant properties
- ⇒ Temperature Range: -40° to +180°F $(-40^{\circ} \text{ to } +82^{\circ}\text{C})$

Chemical-Resistant Fluorinated Polymer

- ⇒ Used in applications where chemical resistance is required (i.e. chlorine, phosphorous)
- ⇒ Temperature Range: +40° to +240°F $(+4^{\circ} to +116^{\circ}C)$

KU and KUS (Machined Plastic)

- ⇒ KU and KUS do not designate material
- ⇒ KU designates solid (one-piece) design and KUS designates a split (two-piece) design
- ⇒ Sprockets machined in a variety of plastic
- ⇒ Flush side for ease in cleaning
- ⇒ Sprockets come in a wide variety of pitch diameters and bore sizes

Metallic

SPROCKET AND IDLER WHEEL DESIGNATIONS

Semi-Steel (Cast Iron)

- ⇒ Used in non-corrosive, abrasive environments such as broken glass, metal chips
- ⇒ One-piece sprocket
- ⇒ Temperature Range: -40 to +350°F $(-40^{\circ} \text{ to } +177^{\circ}\text{C})$

SS (Stainless Steel)

- ⇒ Used in corrosive, abrasive environments such as vegetable processing, snack and
- ⇒ Available in select chains only
- ⇒ Available in split and one-piece designs
- ⇒ Temperature Range: -100 to +800°F $(-73^{\circ} \text{ to } +427^{\circ}\text{C})$

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products

All rights Reserved.

WEARSTRIP MATERIALS

Proper chain and wearstrip selection will provide optimum life. Since a function of the wearstrip is to lower friction and to reduce wear, it is recommended to give careful consideration when selecting the material.

The following general guidelines will help in selecting the proper material for your application.



Plastic

Aceta

⇒ Not recommended for use with acetal chains; it is best not to run identical plastics together

Nylatron (Nylon with Moly Filler)

- ⇒ Recommended for dry applications due to low wear and low friction
- ⇒ Especially suited for dry operation on thermoplastic side-flexing chain corners due to its high PV (Pressure-Velocity) rating
- Typically not recommended in wet applications because it will absorb moisture and expand (if used in wet applications, allow clearance for expansion and movement of fasteners)
- ⇒ Typically only used for curves



Metal

Aluminum

⇒ **NOT RECOMMENDED** due to poor wear resistance

Bronze and Brass

- \Rightarrow Sometimes used with stainless steel chains
- ⇒ Typically used for non-sparking and antistatic conditions
- ⇒ For bronze recommended one-half hard temper (Rb 58)
- ⇒ For brass recommended one-half hard (Rb 70 Min) to full hard (Rb 82) temper

Steel

- ⇒ Recommended for non-corrosive, abrasive or high-temperature applications
- ⇒ Abrasive particles are less likely to imbed in metal wearstrips in comparison to plastic
- A cold-rolled plain carbon steel is recommended
- ⇒ Heat treated grades hardened to 25 to 30 Rc is recommended

⇒ Stainless Steel

- ⇒ Recommended for corrosive, abrasive or high-temperature applications
- ⇒ Abrasive particles are less likely to imbed in metal wearstrips in comparison to plastic
- ⇒ A cold-rolled austenitic grade is recommended which offers the best corrosionresistant properties
- ⇒ Recommended one-quarter hard temper (25 to 35 Rc) with any chain material, especially with thermoplastic
- ⇒ Softer annealed grades of austenitic are NOT RECOMMENDED. Adverse interaction between the chain material and the soft stainless steel might develop. When this happens, the resulting wear debris consists almost entirely of finely divided stainless steel particles, nearly black in color, similar to molydisulfide or graphite. The wear of the stainless steel might be rapid while the thermoplastic chain by contrast exhibits only slight wear.
- ➡ Martensitic stainless steel can also be used when heat-treated (25 to 35 Rc); however, it is not as corrosion-resistant as austenitic
- ⇒ Hardness is more critical than grade for better wear resistance

>

Specialty

> Teflon

⇒ Recommended only for very low-speed/lowload applications

Lubricant-Impregnated Wood

- □ Commonly used in dry abrasive applications (i.e. glass, paper)
- ⇒ Not recommended in wet applications

TableTop Wearstrip Materials

- > Plastic
- > Acetal
- > Nylatron (Nylon with Moly Filler)
- > Metal
- > Aluminum
- > Bronze and Brass
- > Steel
- > Stainless Steel
- > Specialty
- > Teflon
- > Lubricant-Impregnated Wood

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

Teflon is a registered trademark of E.I. du Pont de Nemours and Company and its affiliates.

All rights Reserved.

TableTop Chain:

TableTop Wearstrip Materials

- > UHMWPE (Ultra High Molecular Weight Polyethylene)
- > ULF (Ultra Low-Friction)

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chains

WEARSTRIP MATERIALS

UHMWPE (Ultra High Molecular Weight Polyethylene)

- ⇒ Recommended for dry or wet applications on straight or side-flexing conveyors
- ⇒ Not recommended for abrasive conditions where particles may imbed in the surface and wear the chain
- ⇒ Provides lower coefficient of friction than metals
- ⇒ Not affected by moisture and more resistant to chemicals than nylon
- ⇒ UHMWPE materials can be supplied with various fillers:
 - Ceramic/glass
 - Conductive
 - Oil/wax

ULF (Ultra Low-Friction)

- UHMWPE with self-lubricating additive package
- ◆ Consistent low friction
- Suitable for high-speed conveying where minimal or no external lubrication is present
- Improved PV (Pressure-Velocity) properties in comparison to other curve materials



Wearstrip surface finish is a critical aspect for overall chain life.

Recommended wearstrip surface finish values are:

Metal: 32 μ-in Ra (0.8 μ-m Ra) Nylatron: 63 μ-in Ra (1.6 μ-m Ra) UHMWPE: 125 μ-in Ra (3.2 μ-m Ra) Lubrication is recommended whenever the application permits. It not only reduces friction, thereby reducing chain tension, but also greatly improves the wear life of the chain and wearstrips. Lubrication offers a constant cleaning effect of both the chain and wearstrip and can also reduce static.

General Recommendations

- ⇒ Lubrication should contact both the chain and wearstrip.
- ⇒ When lubricating side-flexing TableTop chains, the lubricant must be applied at the entrance of the inside corner track. Metal side-flexing chains should ALWAYS be lubricated in the corners.
- ⇒ Depending upon the application, lubrication requirements may vary. Lubricant quality and lubrication frequency can have a great effect on the longevity of the chain. For most common applications, any ISO 68 grade lubricant is satisfactory. For applications with special considerations such as high temperature, chemical compatibility, FDA requirements, please contact your lubrication supplier.


General Types of Lubricants

- Water Only utilize with corrosionresistant materials. Can be used as a general lubricant; however, it is not as effective as other types due to friction and chain-cleaning properties.
- ⇒ Water soluble lubricants and soaps Only utilize with corrosion-resistant materials. These are excellent lubricants which also help clean the chain.
- Oil base lubricants These are vegetable, mineral oils or grease which offer high lubricity. Can be used with plastic or metal materials. Recommended to be used on all metal chains whenever practical. Food grade oils are available.
 - To eliminate or reduce lubrication, contact Rexnord Application Engineering to conduct a run-dry survey. 1.262.376.4800

For more information on lubrication types, compatibility, methods, contact a lubricant manufacturer.

Dry Film Lubricants

- ⇒ A dry lubricant system has many of the same benefits of a run-dry conveyor with the added benefit of a lower coefficient of friction. A dry lubricant is applied by an automatic system with dosing units that put very little lubricant on select areas of the conveyors. The lubricant can be water- or oil-based with Teflon, silicone or solid micro-particles. The preferred lubricant is an oil and water emulsion. The most critical part of the process is how the lubricant is applied on the chain. This is typically accomplished with the use of brushes, shoes or spray nozzles. The benefit of spray nozzles is the absence of contact with the chain, eliminating the possibility of trapped dirt or debris. The lubricant can also be applied to the inside of a curve for side-flexing conveyors. There are many dry lubricant products on the market which have been specifically formulated for either plastic or metal chains and container types.
- While dry lubricants offer many advantages, conveyor cleanliness considerations should be taken into account since dry lubes do not provide a continuous cleaning process like traditional water and soap lubrication.

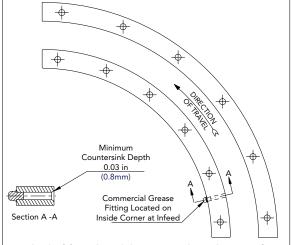

Method of furnishing lubricant to chain thrust surface

Selective Lubrication

⇒ In some applications, the presence of a lubricant cannot be tolerated. For these applications, it is recommended to utilize chains made of HP, PS or PSX acetal material with Nylatron corners, which offers the lowest coefficient of friction.

TableTop Lubrication

- > General Recommendations
- > General Types of Lubricants
- > Dry Film Lubricants
- > Selective Lubrication

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

 Table Top Chain

Contact Rexnord Application Engineering for more information 1.262.376.4800

TableTop Lubrication — Other Considerations

- > Metal Unit Link Chains
- > Carbon Steel
- > Stainless Steel
- > TableTop Chains with Roller Base Chains
- > Carbon Steel Base
- > Stainless Steel Base Chains
- > Cleaning
- > Inspection

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chains

LUBRICATION — OTHER CONSIDERATIONS

Metal Unit Link Chains

⇒ Carbon Steel

- Light lubricant and rust preventative is applied at the factory to prevent corrosion during shipping and storage
- Chains should be lubricated upon installation and re-lubricated when necessary
- Metal side-flexing chains should ALWAYS be lubricated in the corners

⇒ Stainless Steel

- Stainless steel chains are supplied dry from the factory
- Stainless steel chains can be run dry; however, lubrication will greatly increase their wear life and help reduce noise
- Metal side-flexing chains should ALWAYS be lubricated in the corners

TableTop Chains with Roller Base Chains

Platetops can be either plastic or metal with the following types of base chains.

⇒ Carbon Steel Base Chains

- Base chains are supplied with lubricant and rust preventative
- Base chains do not need to be lubricated when installed
- Base chains must be re-lubricated when necessary
- The thrust surface of side-flexing metal platetop chains should ALWAYS be lubricated in the corners which will help reduce noise as well as lubricate the chain

⇒ Stainless Steel Base Chains

- * Stainless steel base chains are supplied dry from the factory (with the exception of PS 1873SSL-G, see Product Catalog [8rxCAT-en] for details)
- Stainless steel base chains can be run dry; however, lubrication will greatly increase their wear life and help reduce noise
- The thrust surface of side-flexing metal platetop chains should ALWAYS be lubricated in the corners which will help reduce noise as well as lubricate the chain

Cleaning

In many applications, rapid buildup of grease, dirt, grit, sand, spilled syrup and beverage can occur. These result in:

- Soiling and damage to the conveyed product
- 2. Increased work demands for the chain and motor
- 3. Accelerated sprocket tooth wear
- 4. Conveyor pulsation and wear
- 5. Excessive chain wear on the flight and in the joint areas
- 6. Rapid wear of the wear strips

Frequent cleaning of the chain and conveyor frame is advised. Such agents as steam, warm water and soap are commonly used. Many times combined "cleaner/lubricants" are applied continuously. Strong caustic agents used with metal chains should not be used with plastic chains. Always rinse cleaning agents completely off of chain and conveyor frame. When excessive amounts of syrup or other liquids, broken glass or debris accumulate, cleaning will be required on a regular basis to remove these undesirable materials. It is advisable to have operating personnel keep brushes and cleaning solutions nearby to remove broken glass and excessive spillage.



All cleaners and lubricants must be compatible with chain and conveyor materials. See page EM - TT - 17 or contact Rexnord.

Inspection

In the course of conveyor operation, periodic inspection of the chain, sprockets and system is required to detect faults and make repairs before serious damage occurs. The important thing is to set up a regular inspection and maintenance schedule.

Checklist

- Look for unusual wear patterns on the chain.
- 2. Check for excessive gap between flights due to jam-up or overload.
- 3. Pulsating, jerky chain operation indicates poor lubrication or a conveyor obstruction.
- 4. Check deadplate and turntable clearance.

LUBRICATION — OTHER CONSIDERATIONS

- 5. Examine sprockets for signs of excessive wear.
- 6. Examine sprockets for signs of dirt buildup in tooth pockets.
- 7. Check for sprocket guide ring wear and possible chain misalignment.
- 8. Check wearstrips for excessive wear.
- Inspect lubrication system for proper operation.
- 10. Check the inside curves and the supporting conveyor frame for excess heat buildup which may indicate an obstruction in the curve or a high-friction area.
- 11. If return support rollers are used, check to ensure rollers are free-turning.

Repair and Replacement

Any malfunctions found during an inspection usually stem from one or more of the following conditions:

- Severe overloads, jam-ups or wedging of broken glass or crowns.
- 2. Severe back-flexing of chain on the return carrying ways.
- 3. Poor lubrication or no lubrication.
- 4. Interference and obstruction.
- 5. Worn sprockets.
- 6. Poor conveyor design.
- 7. Badly worn or damaged chain.

These causes should be corrected to avoid future problems.

Chain and sprockets should be replaced when:

- 1. The chain reaches 3% elongation.
- 2. The chain jumps the sprocket.
- 3. The flights have worn to about one-half of the original thickness.
- 4. The conveying surface becomes uneven through wear.
- 5. The thrust surface of side-flexing chains wears away and exposes the rivet or other metal parts which may cut into wearstrips or other conveyor components.
- 6. The sprocket teeth develop a hooked profile or the chain tends to "hang up" on the sprocket teeth.

These suggestions on chain and conveyor care serve as a guide toward maintaining continuous, trouble-free operation. Implementation of a conscientious programmed maintenance schedule will lead to many productive hours of conveyor operation.

TableTop
Lubrication —
Other
Considerations

> Repair and Replacement

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

Table Top Chain

Tabl	еТор
No	tes

<u>{</u>	Į	NOTES
----------	---	-------

Notes

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chains

ENVIRONMENTAL CONSIDERATIONS

Abrasive Applications

- ⇒ Applications with the presence of dirt, sand, glass or metal particles can lead to premature wear of the conveying chain and wearstrips.
- ⇒ Recommendations:
 - Utilize wearstrips and chains with a hard wear surface
 - If possible, use controls to minimize the amount of accumulation
 - ◆ The use of WX chain material and metal sprockets can extend wear life

Chemical Applications

Make sure any chemicals or cleaners used on conveyors are compatible with chain, wearstrip and sprockets. See table on page EM - TT - 17 for more detailed compatibility information.

Dry Applications

- ⇒ Considerations to be taken when running dry:
 - ◆ Product backline pressure
 - Conveyor cleanliness
 - ◆ Conveyor pulsation
 - ◆ Increased component wear

Extreme Temperature Applications

⇒ The recommended minimum and maximum operating temperatures for TableTop chain and wearstrips can vary due to the presence of moisture.

Wearstrip		mum erature	Maximum Temperature					
Material	D	ry	D	ry	Wet			
1110.00110	°F	°C	°F	°C	°F	°C		
Acetal	-40	-40	180	82	150	66		
UHWMPE/ULF	-100	-73	180	82	160	71		
Nylon	-40	-40	220	104	NR	NR		
Stainless Steel	-100	-73	800	427	250	121		
Steel	-40	-40	350	177	NR	NR		
Lubricated Impregnated Wood	-50	-46	160	71	160	71		

Metal Detector Applications

⇒ Plastic chains passing through metal detectors can be supplied with plastic pins on a Made-To-Order (MTO) basis (requires 60% derate).

High-Speed Applications

⇒ In any high-speed application, the critical aspect of the conveyor is the corners. The concern with running the chain at high speeds is the PV (Pressure-Velocity) in the corners. If the PV limits are exceeded, the chain or corner track may become damaged due to the heat generated from the high speed and/or load. It is generally recommended to utilize Nylatron corner tracks in conjunction with PS or HP materials or selective lubrication for these applications. PSX chain with ULF corner tracks will provide the best PV capability and least energy consumption.

Long-Length Conveyors/Pulsation Applications

⇒ Pulsation or "slip stick" of chain results in a jerking chain motion which can occur in long, slow-speed and dry conveyors. Pulsation can create product stability problems in extreme cases. It can also result in premature chain elongation or the chain jumping drive sprocket teeth. As a general rule of thumb, it is recommended that conveyor lengths do not exceed 100 ft (30m) per drive, regardless of loading. Rexnord also recommends a 150° minimum wrap on the head sprocket. If necessary, this can be maintained with the use of a snubber roller.

Static Environment Applications

 ⇒ Under certain conditions, thermoplastic can acquire a static nuisance charge. Static environments are classified as:



Class I: Static spark causes explosion — stainless steel chains are required.

Class II: Static spark is a nuisance charge — low charge will provide slight shock or possible circuit damage.

⇒ All applications utilizing thermoplastic anti-static materials (i.e. AS, ESD) must be approved by Rexnord Application Engineering prior to quoting.



Grounding is crucial for the system to reduce static charges.

UV Applications

When conveyor chains are exposed to direct UV (Ultraviolet) or sunlight, DUV stabilized material should be utilized.

TableTop Environmental Considerations

- > Abrasive
 Applications
- > Chemical
 Applications
- > Dry Applications
- > Extreme
 Temperature
 Applications
- > Metal Detector Applications
- > High-Speed Applications
- > Long-Length Conveyors/ Pulsation Applications
- > Static Environment Applications
- > UV Applications

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

able Top Chain

TableTop Environmental Considerations

> TableTop **Chain Material Characteristic Table**

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.

All rights Reserved.

MATERIAL CHARACTERISTIC TABLE

Material		Metal							1	Thermo	plasti	ς						
Characteristics	S	SS	SSB	HP WHP	LF WLF	D WD	BWR	AS HCAS	ESD	HS	Р	CR	MR	DUV	FR	PS PSX	WX BWX	
Impact-Resistant	•	•	•				•					•	•				•	
Wear-Resistant	•	•	•	•	•		•									•	•	
Chemical-Resistant*		•	•									•	•					
High-Strength	•	•	•	•	•	•	•			•	•	•	•	•		•	•	
Low Frictional Characteristics				•	•	•										•		
Capability to Run Dry in Corners				•	•		•						•			•	•	
Suitability in Wet Environments		•	•	•	•	•				•	•	•		•	•	•		
Low-Temperature Capability (to 40°F)	•	•	•	•	•	•	•			•			•	•		•	•	
High-Temperature Capabilities (to +180°F)	•	•	•	•	•	•	•	•	•	•	•	•	•	•		•	•	
Ultra Violet Capabilities	•	•	•				•					•	•				•	
Suitability for Class II (nuisance static)	•	•	•					•	•									
Suitability for Class I (explosive static)		•	•															
Non-magnetic Qualities		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	
Flame Retardance	•	•	•									•			•			
Capability to Convey Hot Products (to +375°F)	•	•	•										•				•	
FDA Approval		•	•	•	•	•					•	•				•		

S = Carbon Steel **ESD** = Electrostatic Dissipative

SS = Stainless Steel = Heat-Stabilized SSB = Low Magnetic Stainless Steel Ρ = Chemical-Resistant

ΗP = High Performance = Extreme Chemical-Resistant CR

WHP = White High Performance MR = Melt-Resistant LF = Low-Friction DUV = Ultraviolet-Resistant WLF = White Low-Friction FR = Flame-Retardant D = Acetal PS = Platinum Series WD White Acetal PSX = Platinum Series X BWR = Black Wear-Resistant = Abrasion-Resistant

HCAS = Anti-Static High Capacity

= Anti-Static

*See Corrosion Resistance Guide on Page EM - TT - 17 for more details.

WX

= Black Abrasion-Resistant

AS



Common	Carbon Steel	Austenitic	Acetal	Nylon and Nylatron	Polyester	Chemically Resistant Fluorinated Polymer	Polypropylene	Polyethylene	Neoprene	EPDM
or Chemical Name	S	SS, SSB	AS, HCAS, DUV, HP, LF, PS, PSX, WD, WHP, WLF	BWR, HS, MR, WX, BWX	P, FR	CR	ESD	UHMWPE		
Acetic Acid (over 5%-up to 50%)	U	М	U	М	S	S	S	S	М	S
Acetone	U	S	S	S	S	U	S	S	М	S
Alcohol	S	S	S	S	S	S	S	S	S	S
Ammonia	М	S	U	S	S	S	S	S	S	S
Beer	S	S	S	S	S	S	S	S	S	S
Beverages-Soft Drinks	S	S	S	S	S	S	S	S	S	S
Benzene	S	S	S	S	S	S	М	М	М	U
Brine (pickle)	U	М	М	М	S	S	S	S	S	S
Carbon Tetrachloride	М	М	S	S	S	U	М	М	U	U
Chlorine	U	U	U	U	S	S	S	S	U	М
Citric Acid	U	S	М	М	S	S	S	S	S	S
Cyclohexane	-	-	S	-	-	S	U	U	S	S
Ethyl Chloride	_	S	S	S	S	S	М	М	М	М
Formaldehyde	S	S	S	S	S	М	S	S	S	S
Formic Acid	U	U	U	U	S	S	S	S	М	М
Fruit Juices	U	S	S	S	S	S	S	S	S	S
Gasoline	S	S	S	S	S	S	М	М	S	U
Hexane	-	S	S	-	S	S	S	U	S	U
Hydrochloric Acid (up to 2%)	U	U	U	U	S	S	S	S	М	S
Hydrochloric Acid (up to 37%)	U	U	U	U	S	S	М	S	U	М
Hydrogen Peroxide	U	S	U	U	S	S	М	S	М	S
lodine	U	U	U	U	U	М	М	М	U	U
Isopropanol (isopropyl alcohol)	S	S	S	S	S	S	S	S	S	S
Lactic Acid	U	S	S	М	S	М	S	S	S	S
Methylene Chloride	_	S	S	-	U	М	S	U	U	U
Milk	S	S	S	S	S	S	S	S	S	S
Muriatic Acid	U	U	U	U	S	S	М	S	U	М
Nitric Acid (low concentrations)	U	S	U	U	S	S	S	S	М	S
Oil (vegetable or mineral)	S	S	S	S	S	М	S	S	S	U
Ozonated Water	S	S	М	U	S	S	М	S	U	S
Paraffin	S	S	S	S	S	S	S	S	S	U
Phosphoric Acid (up to 10%)	U	S	U	U	S	S	S	S	S	S
Soap and Water	М	S	S	S	S	S	S	S	S	S
Sodium Chloride	U	М	S	S	S	S	S	S	S	S
Sodium Hydroxide (up to 25%)	U	S	S	U	U	М	S	S	S	S
Sodium Hypochlorite (Bleach)	U	U	U	U	S	S	S	S	U	S
Stearic Acid	U	S	М	S	S	S	S	S	S	М
Sulfuric Acid (up to 40%)	U	U	U	U	S	S	S	S	М	S
Toluene (Toluol)	S	S	M	S	S	М	S	U	U	U
Turpentine	-	S	S	S	S	S	S	U	S	U
Vegetable Juices	М	S	S	S	S	S	S	S	U	S
Vinegar	U	S	S	S	S	М	S	S	S	S
Water (fresh)	U	S	S	S	S	S	S	S	S	S
Whiskey	S	S	S	S	S	S	S	S	S	S
Wine	S	S	S	S	S	S	S	S	S	S
Xvlene	ς .	۱ ۲	ς	ς .	۱ ۲	۲ (1 11	l M	11	11

Dash = Not Tested

M = Marginal

U = Unsatisfactory

S = Satisfactory

i

General Rules of Thumb:

With acetal products, do not use cleaning or lubricating agents with a pH below 4 or above 10. This table is based on data available by various material suppliers.

TableTop
Environmental
Considerations

> Corrosion Resistance Guide

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

lable lop Chain:

Tab	le1	Го	p
N	at e	26	

{	Ę	NOTES	5
---	---	-------	---

> Notes

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chains

Straight-Running Configuration

⇒ A long conveyor with a single drive is the simplest and most ideal design. Sometimes several short conveyors are required due to application constraints.

Side-Flexing Configuration

- ⇒ Because a straight conveyor is not always possible due to flow processes or obstructions in the plant, the designer can incorporate a side-flexing conveyor, which traverses one or more curve.
- ⇒ When planning a side-flexing conveyor layout, the designer must consider the following factors that affect chain life:
 - Minimize the number of corners and the angle of each corner whenever possible
 - Selective lubrication in the corners must be used with metal side-flexing chains and certain thermoplastic chains, which will prevent excessive noise and premature wear to the chain or corner
 - When conveying from Point A to Point B, design the conveyor so that the drive is positioned furthest from the last corner (see drawing), resulting in lower chain tension and maximizing chain life

Tail Shaft

A Tail Shaft

Drive Shaft

Drive Shaft

Preferred

Avoid



In general, the straight section between the corner and the drive shaft must be at least 18 in (457mm) to allow adequate room for the catenary (see page EM - TT - 32). The tail shaft section should be at least 12 in (305mm).

- ⇒ When conveying products 90°, a single side-flexing conveyor offers the following advantages over two separate straight conveyors that have transfer plates between them:
 - Eliminates deadplate transfers or turntables, preventing the product from slipping or stalling
 - Minimizes tipping and jamming
 - Decreases noise

 Reduces the cost of controls and maintenance by only requiring one drive motor



Make sure that the entire chain path (carry, return, sprocket and catenary sag areas) has plenty of clearance for free chain travel. Make sure all frame and support members, piping, conduits and mounting hardware are well clear of chain path.

Consideration should be given to the design of the curves within a conveyor such that if the chain has little to no "allowable twist", the curve should be designed to NOT change elevation while simultaneously side-flexing through the curve. Doing so on chains that do not twist will bind the chain and lead to chain failure. See table below for allowable twist of various chains.

Allowable TableTop Chain Twist									
Chain	Allowable Twist								
880 Tab and Bevel	90° in 7'6" of length								
879 Tab and Bevel	90° in 7'6" of length								
882 Tab and Bevel	90° in 9' of length								
1873	360° in 7' of length								
3873T-K12	90° in 10' of length								
881	90° in 7' of length								
815	90° in 9' of length								

TableTop Conveyor Design

- > Straight-Running Configuration
- > Side-Flexing Configuration

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

ableTop Chain

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks

Nylatron is a registered

trademark of Quadrant

Engineering Plastics

All rights Reserved.

of Rexnord.

Products.

- > Straight-Running
- > Side-Flexing -**Bevel Design**
- > Side-Flexing -**TAB Design**


> Carry Ways

⇒ Guide clearance is critical for both straight and side-flexing chains. For guide clearance dimensions of individual chains, see tables on page EM - TT - 24 or Product Catalog.


CONVEYOR DESIGN RECOMMENDATIONS


Straight-Running

Carry Ways

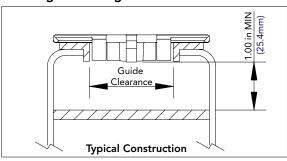


⇒ Side-Flexing — Bevel Design

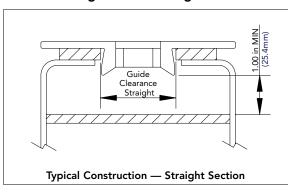


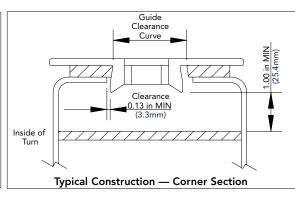

⇒ Chain can be lifted out of straight sections only for cleaning or inspection

⇒ Side-Flexing — TAB Design

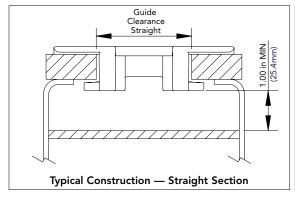

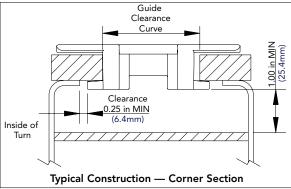



- ⇒ Positive retention
- □ TABs hold chain down in incline or decline applications
- ⇒ Chain top surface wear is decreased if TAB return is utilized
- ⇒ Once assembled, TAB chain cannot be lifted out of the conveyor track



Carry Ways


Side-Flexing — LPC (Low Pin Centerline) Design

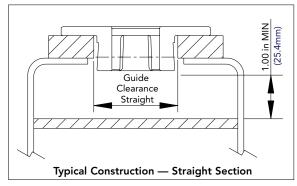


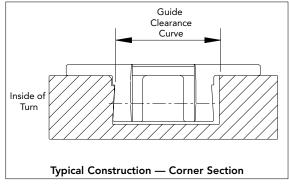

- ⇒ Chain can be lifted out of straight and corner sections for cleaning or inspection

Side-Flexing — Magnetflex Design

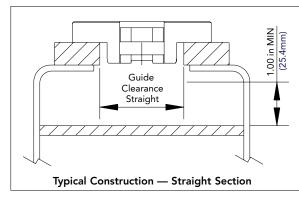

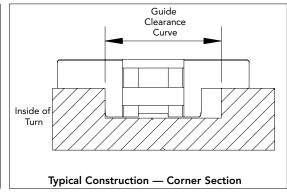

- ⇒ Chain can be lifted out of straight and corner sections for cleaning or inspection
- ⇒ Must utilize corners

TableTop Conveyor Design

- > Carry Ways
- Side-Flexing —
 LPC® (Low Pin
 Centerline) Design
- > Side-Flexing Magnetflex® Design

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chair

> Multiple Strands (Corner Section Shown)

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights Reserved.

TableTop Chains

CONVEYOR DESIGN RECOMMENDATIONS

Carry Ways

Multiple Strands (Corner Section Shown)

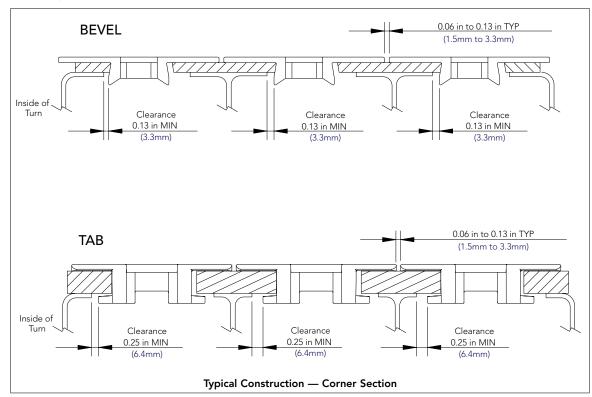

- \Rightarrow For minimum side-flex radii of individual chains, see table on page EM TT 23
- Adjacent strands should share a common wearstrip
- ⇒ Key all sprockets on the head shaft
- ⇒ Key only one sprocket on the tail shaft, preferably the center strand
- ⇒ Magnetflex and LPC chains follow the same guidelines as TAB chains



TableTop
Conveyor
Design

> Side-Flex **Radius Table**

Chain Stula	Chai	Chain Width					
Chain Style	in	mm	in	mm			
60	3.25	82.6	19.69	500.0			
66	3.25	82.6	19.69	500.0			
LPC279	3.25, 4.50, 7.50	82.6, 114.3, 190.5	18.00	457.2			
770 TAB	3.25	82.6	11.00	279.4			
879, 879 TAB, 880,	3.25	82.6	18.00	457.2			
880 TAB	4.50	114.3		609.6			
880 TAB BO	3.25, 4.50	82.6, 114.3	7.87	200.0			
004 004 TAB	3.25	82.6	18.00	457.2			
881, 881 TAB	4.50, 7.50	114.3, 190.5	24.00	609.6			
881 TAB G	3.63	92.1	18.00	457.2			
882	4.50, 7.50, 10.00	114.3, 190.5, 254.0	24.00	609.6			
882 TAB	3.25, 4.50, 6.00, 7.50, 10.00, 12.00	82.6, 114.3, 152.4, 190.5, 254.0, 304.8	24.00	609.6			
000 745 : 55	3.75	95.3	26.25	666.8			
882 TAB LBP	7.50	190.5	24.00	609.6			
882 TAB G	3.75	95.3	24.00	609.6			
883 TAB LBP	4.50, 7.50	114.3, 190.5	24.00	609.6			
1050 Magnetflex, 1050 TAB	3.31	84.0	19.69	500.0			
	3.25	82.6	18.00	457.2			
LPC1050	3.31	84.0	19.69	500.0			
	4.50, 7.50 114.3, 190.5		24.00	609.6			
1055 Magnetflex	3.31, 4.50	84.0, 114.3	19.69	500.0			
1055 TAB	3.31	84.0	19.69	500.0			
	3.25	82.6	18.00	457.2			
LPC1055	3.31	84.0	19.69	500.0			
	4.50, 7.50	114.3, 190.5	24.00	609.6			
1673	6	152.4	16.00	406.4			
1843 TAB	1.25, 2.00	31.8, 50.8	10.00	254.0			
1843 TAB G	1.50	38.1	10.00	254.0			
1863 TAB	2.25	57.2	14.00	355.6			
	2.25, 3.25, 4.50	57.2, 82.6, 114.3	14.00	355.6			
1873 TAB	6.00, 7.50, 10.00	152.4, 190.5, 254.0	18.00	457.2			
	12.00	304.8	24.00	609.6			
1873 TAB G	3.75	95.3	15.00	381.0			
	2.25, 3.25, 4.50	57.2, 82.6, 114.3	15.00	381.0			
1874 TAB	6.00	152.4	18.00	457.2			
	7.50	190.5	24.00	609.6			
1874 TAB G	3.63	92.1	15.00	381.0			
1883 TAB	2.50, 3.25	63.5, 82.6	28.00	711.2			
	10.00	254.0	18.00	457.2			
3873 TAB	12.00	304.8	24.00	609.6			
4873 TAB	3.25	82.6	14.00	355.6			
	3.25	82.6	15.00	381.0			
4874 TAB	6.00	152.4	18.00	457.2			
	7.50	190.5	24.00	609.6			

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

- > TableTop Chain Track Details
- > Straight-Running
- > Side-Flexing

TableTop Chain Track Details

Straight-Running

Chain Style		60 66 812 815 820 831	821	1864	866	843	863 963	863T
Guide	in	1.75	5.50	1.38	1.63	0.94	1.44	1.31
Clearance	mm	44.5	139.7	35.1	41.3	23.9	36.5	33.3

Side-Flexing

Chain St	yle	879 880 881	770T 879T 880T 880BO 881T	882	882T 883T	279	1843	1863 1874 4874 1873 4873 3873	1883	1673		60 66		1050 1055	
Hold Down	Style	Bevel	TAB	Bevel	TAB	LPC	TAB	TAB	TAB	Single Bearing	Double Bearing	Magnetflex	Magnetflex	TAB	LPC
Guide	in	1.75	1.81	2.44	2.38	1.75	0.88	1.31	1.66	2.25	3.13	1.73	1.73	1.81	1.75
Clearance Straight	mm	44.5	46.0	62.0	60.5	44.5	22.3	33.3	42.2	57.2	79.4	44.0	44.0	46.0	44.5
Guide	in	1.63	1.75	2.28	2.28	1.75	0.84	1.38	1.72	2.25	3.13	1.73	1.73	1.75	1.75
Clearance Corner	mm	41.1	44.5	57.9	57.9	44.5	21.3	34.9	43.7	57.2	79.4	44.0	44.0	44.5	44.5
Corner	in	0.38	0.38	0.63	0.63	0.61	0.38	0.75	0.90	1.25	1.25	0.53	0.51	0.38	0.61
Wearstrip Thickness	mm	9.7	9.7	15.9	15.9	15.5	9.7	19.1	22.0	31.8	31.8	13.5	13.0	9.7	15.5

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights Reserved.

ableTop Chains

Transfers


⇒ Smooth transfer of the conveyed product from one chain to another is essential. The various methods are described below:

Side Transfer

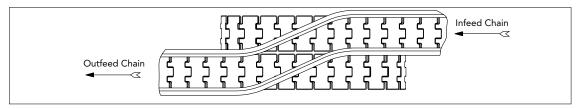


- - ⇒ No stranded products


Inline Transfer

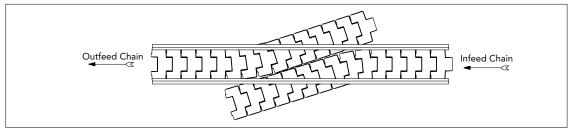

- /⇒ Adjacent strands of chain should share a common wearstrip
- ⇒ Allows product to remain in straight line
- \Rightarrow No stranded products

Radius Edge Chain

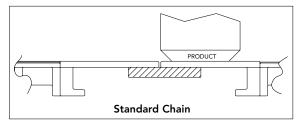

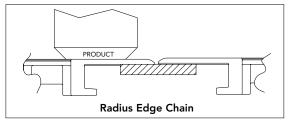

- ⇒ An option to increase product stability at side transfers for certain products
- ⇒ "R" designates chains with radius edge

TableTop Conveyor Design

- > Transfers
- > Side Transfer
- > Inline Transfer
- > Radius Edge Chain

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

Table Top Chain

Conveyor

> Transfers

> Deadplate **Transfers**

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.


All rights Reserved.




CONVEYOR DESIGN RECOMMENDATIONS

Transfers

Deadplate Transfers

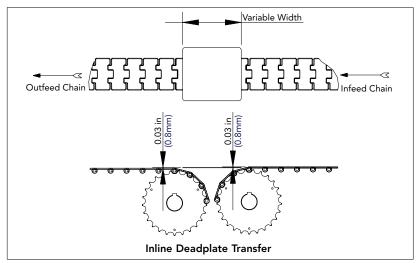

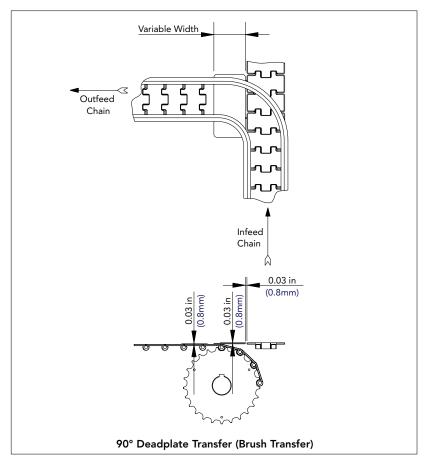




- ⇒ For deadplate transfers, products should step down to the adjacent chain or deadplate surface (typically a 0.03 in (0.8mm) step is recommended)
- ⇒ Deadplates to be mounted slightly higher than the top surface of the outfeed chain
- Deadplates should be as short as possible
- Deadplate transfers result in stranded product

Transfers

Combiners / Decombiners

- ⇒ Combiners take products from en masse (in mass) to single file
- ⇒ Decombiners take products from single file to en masse (in mass)

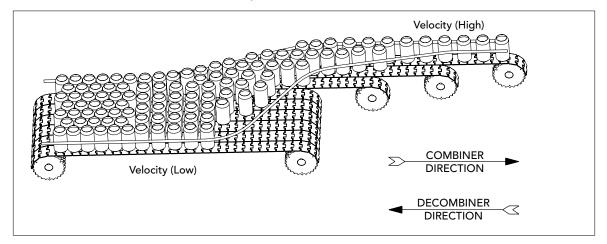

i

For conveyors using multiple strands of chain, key all sprockets on the head shaft and key only one sprocket on the tail shaft, preferably the center strand.



If space permits, use enough lanes to keep speed differentials between adjacent strands to about 50–75 FPM (15–23MPM), depending on product.



When several chains run side by side, such as on multiple width conveyors and combiners or decombiners, make sure the return chains do not interfere with each other.

TableTop Conveyor Design

> Transfers

> Combiners / Decombiners

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chain

- > Alternate Drive Configurations
- > Offset Wrap Drive

£ £ £


CONVEYOR DESIGN RECOMMENDATIONS

>

Alternate Drive Configurations

Offset Wrap Drive

- ⇒ Must utilize side-flexing chains
- ⇒ There is less chain required in the conveyor because full return is not required

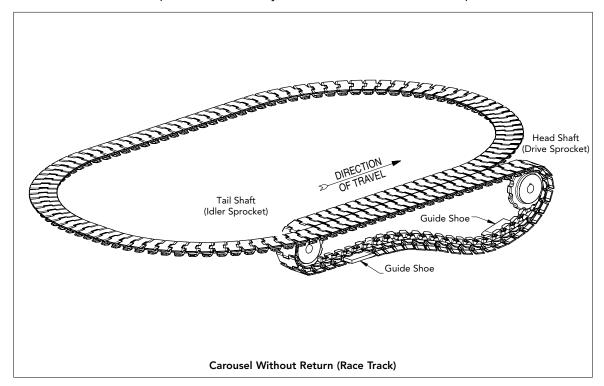

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chains

TableTop Conveyor Design

Return Ways


⇒ TableTop chains can be supported in a variety of ways.

Full Width Sliding Return Bed

- ⇒ Continuous sheets extend the full width of the chain and almost the entire length between the tail and drive sprockets
- ⇒ Plates or sheets should be perforated with slots or holes to allow for drainage and the passage of foreign materials




Solid beds should be avoided to eliminate debris buildup and suction effect.

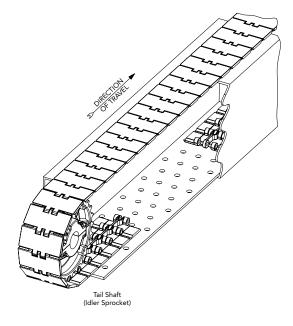

Serpentine Style Return

- \Rightarrow The chain is fully supported
- ⇒ Allows for drainage and the passage of foreign materials

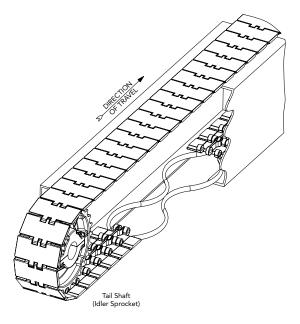



When returning chain with molded inserts (HPM), caution should be taken to ensure that the inserts do not interfere with the return elements.

Possible solutions:

- ◆Return the chain on its TABs
- *Return the chain on the outer edge of the links via rollers or wearstrips

> Return Ways

- > Full Width Sliding Return Bed
- > Serpentine Style Return

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

Table Top Chain:

- > Wearstrip
 Considerations
- > TAB Style Corner Return
- > Magnetflex Corner Return
- > Bevel Style Corner Return
- > LPC Corner Return
- General Recommendations

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

of Rexnord.


TableTop Chains


CONVEYOR DESIGN RECOMMENDATIONS

Return Ways


Wearstrip Considerations

⇒ Wearstrips will contract and expand due to environmental conditions. Suggested methods to accommodate this are shown below:

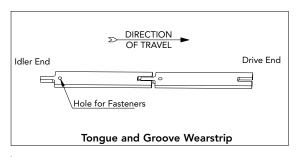


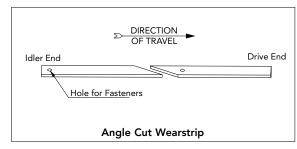

TAB Style Corner Return

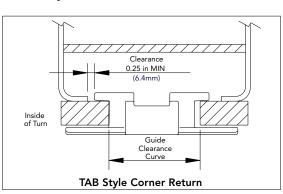


Bevel Style Corner Return

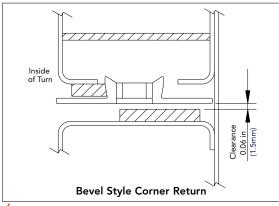


⇒ Allows for reduced top surface wear.
 See Product Catalog for available corners

See Product Catalog for available corners

Magnetflex Corner Return

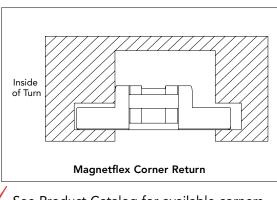

LPC Corner Return

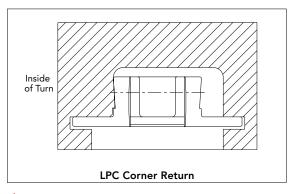

See Product Catalog for available corners

See Product Catalog for available corners

General Recommendations

- ⇒ Allow for thermal expansion of wearstrips
- ⇒ All wearstrip surfaces that contact the chain should be in line and smooth (i.e. utilize counter sunk hold down screws, remove burrs)

Contact Rexnord Application Engineering for more information 1.262.376.4800

TableTop Conveyor Design


> Return Ways

> Roller Return

Return Ways

Roller Return

⇒ The first roller should be located far enough away from the head sprocket to allow for proper catenary sag

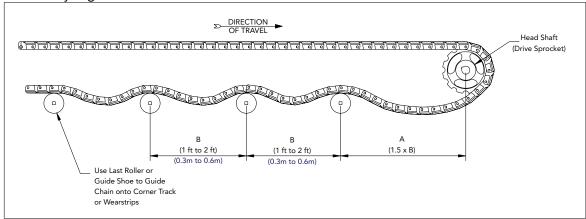

- ⇒ Dimension "A" should be 1.5 to 2 times greater than Dimension "B"
- ⇒ Rollers are recommended to be at least two times greater than the minimum back-flex radius of the chain

Example: When using 820 chain series, the minimum back-flex radius is 1.50 in (38.1mm); therefore, the minimum roller diameter should be 3.00 in (76.2mm).



- ⇒ Ensure rollers **ALWAYS** spin freely
- ⇒ If rollers do not turn freely, uneven wear patterns or scalloping on the top carry surface of the chain can occur
- ⇒ See table below for minimum back-flex radii for specific chains



⇒ Roller returns are not recommended for roller base chain designs

Back-Flex Radius Table						
Chain Style	Min. Back-F	lex Radius				
Chain Style	in	mm				
279	2.75	69.9				
770TAB	1.50	38.1				
812, 812 TAB	3.15	80.0				
815, 815 TAB	6.50	165.1				
820, 821, 831	1.50	38.1				
821 LBP	16.00	406.4				
843	6.00	152.4				
845	18.00	457.2				
863 TAB	12.00	304.8				
879, 879 TAB, 880, 880 TAB, 880 TAB BO, 881, 881 TAB, 882, 882 TAB	1.50	38.1				
882 TAB LBP	9.00	228.6				
883 TAB LBP	2.00	50.8				
963	6.00	152.4				
1050, 1055, 1060 (TAB, LPC and Magnetflex)	5.12	130.0				
1843 TAB	4.00	101.6				
1844, 1863 TAB	6.00	152.4				
1864 TAB, 1873 TAB	12.00	304.8				
1874 TAB	10.00	254.0				
1883 TAB	4.50	114.3				
3873 TAB	7.00	177.8				
4873 TAB, 4874 TAB	12.00	304.8				
60, 66	3.94	100.0				
1673	11.00	279.0				

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chains

- > Catenary Sag
- > Entry Radius for Sliding Returns

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.


TableTop Chains

CONVEYOR DESIGN RECOMMENDATIONS

Cat

Catenary Sag

- ⇒ The function of the catenary is to allow a place for excess chain to accumulate
- ⇒ TableTop chains should never be run tight
- ⇒ The catenary sag should be measured when running
- ⇒ If catenary sag is excessive or increases due to wear, it should be adjusted by removing links to obtain the proper sag
- ⇒ Take-ups are typically not recommended
- ⇒ The catenary sag should be located as close to the drive as possible

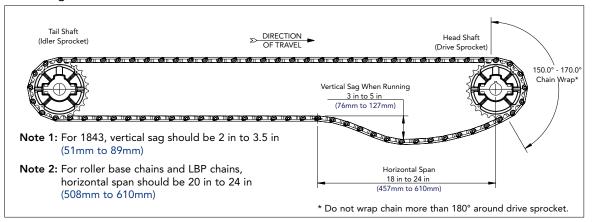



The catenary sag area must be free of all obstructions, such as frame cross-members, supports, drive components, that can damage chain or inhibit proper catenary sag.




It is recommended to keep the sprockets and chain clean of debris and foreign matter. If this is not done, the chain can stick to (not release freely from) the drive sprockets causing the catenary to bounce leading to possible chain damage or breakage. In cases of extreme environments, a hold down roller can be positioned above the catenary near the drive sprocket(s) to keep the chain from overwrapping the drive sprocket(s).

Entry Radius for Sliding Returns



- Provide a generous entry radius to the return section which permits the chain to feed smoothly into the return ways
- ⇒ The entry radius should be greater than the minimum back-flex radius of the chain (see table on page EM - TT - 31)
- ⇒ Rexnord recommends a 6 in (152mm) minimum entry radius to prevent non-uniform wear
- When returning a chain on its TABs, guide the chain onto the return wearstrips using a guide shoe (see tables on page EM - TT - 24 for proper guide clearance)
- ⇒ At the entry of the return wearstrips, provide rounded corners to prevent catching or snagging of the chain flights

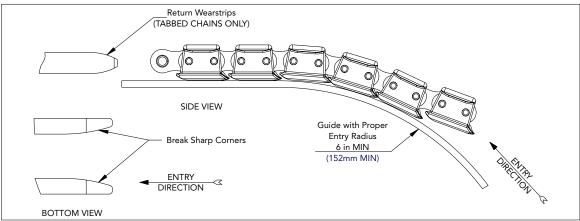

Entry Radius for Sliding Returns

Contact Rexnord Application Engineering for more information 1.262.376.4800

TableTop Conveyor Design

- > Sprocket and Wearstrip Location
- > Sprocket Location for Conventional Chains

Sprocket and Wearstrip Location

- ⇒ The distance from the end of the wearstrip to the sprocket shaft centerline should equal dimension "C" (one chain flight or pitch); otherwise, the wearstrip will interfere with the free articulation of the chain as it enters the sprocket
- ⇒ The leading edges of the wearstrip should be beveled
- ⇒ The following formulas and dimensions used in conjunction with the figure will give the proper shaft and wearstrip positioning

Sprocket Location for Conventional Chains

A = (Pitch Diameter/2) + E

C = One Chain Pitch (which ensures support under chain at all times)

E = Centerline of Pin to Bottom of Chain Flight (top of wearstrip)

⇒ See table below for C and E dimensions

Example: For an 820 chain utilizing a 25T sprocket:

English:

 $A = (Pitch \ Diameter/2) + E = (6.032 \ in/2) + 0.125 \ in = 3.141 \ in$

C = 1.50 in

Metric:


 $A = (Pitch \ Diameter/2) + E = (153.21mm/2) + 3.18mm = 79.78mm$

C = 38.1 mm



A = +.03 in / -.00 in (+.8 mm / -.0 mm)

C = +.25 in / -.00 in (+6.3 mm / -.0 mm)

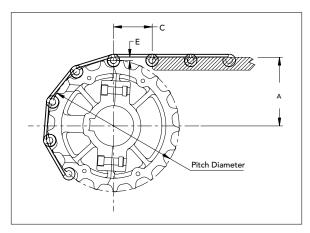

Dimensions apply to both head and tail shafts.

Sh	Shaft Drop Values								
	"("E	"					
Chain Series	Dime	nsion	Dime	nsion					
	in	mm	in	mm					
60	1.50	38.1	0.125	3.18					
66	1.50	38.1	0.125	3.18					
1673	1.50	38.1	0.650	16.51					
LPC279	1.50	38.1	0.470	11.94					
770	1.00	25.4	0.141	3.58					
812	1.50	38.1	0.125	3.18					
815	1.50	38.1	0.125	3.18					
820	1.50	38.1	0.125	3.18					
821	1.50	38.1	0.125	3.18					
LBP821	1.50	38.1	0.125	3.18					
831	1.50	38.1	0.094	2.39					
843	1.00	25.4	0.234	5.94					
845	1.00	25.4	0.234	5.94					
863	1.50	38.1	0.406	10.31					
879	1.50	38.1	0.109	2.77					
880	1.50	38.1	0.141	3.58					
881	1.50	38.1	0.125	3.18					
882	1.50	38.1	0.188	4.78					
LBP882	1.50	38.1	0.188	4.78					
LBP883	1.50	38.1	0.188	4.78					
963	1.50	38.1	0.406	10.31					
1050	1.00	25.4	0.138	3.51					
TAB and Magnetflex LPC1050	1.00	25.4	0.470	11.94					
1055									
TAB and Magnetflex	1.00	25.4	0.140	3.56					
LPC1055	1.00	25.4	0.470	11.94					
FTM 1060	1.00	25.4	0.138	3.51					
1757	1.50	38.1	0.530	13.46					
LBP1757	1.50	38.1	0.940	23.88					
1843	1.00	25.4	0.266	6.76					
1844	1.00	25.4	0.266	6.76					
1863	1.50	38.1	0.406	10.31					
1864	1.50	38.1	0.406	10.31					
1873	1.50	38.1	0.406	10.31					
1874	1.50	38.1	0.438	11.13					
1883	2.00	50.8	0.480	12.19					
3873	1.50	38.1	0.406	10.31					
4873	1.50	38.1	0.406	10.31					
4874	1.50	38.1	0.438	11.13					

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chain

> Why Pitch
Diameter Is
Larger Than
the Outside
Diameter on
Small Sprockets

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.


FableTop Chains

CONVEYOR DESIGN RECOMMENDATIONS

Sprocket Pitch Diameter vs. Outside Diameter

In some instances, it is possible for a sprocket's pitch diameter to be larger than the outside diameter. This is not a problem because the link does not contact the sprocket on the pitch circle.

Why Pitch Diameter Is Larger Than the Outside Diameter on Small Sprockets

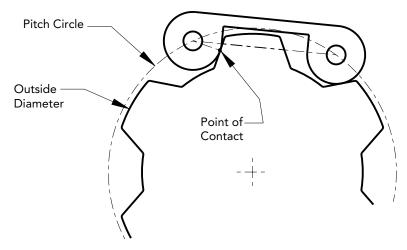

- ⇒ The outside diameter is to the outer tips of the teeth.
- ⇒ The chain's pins are on the pitch diameter. On a very small sprocket, the chord created by the link causes the point where the sprocket contacts the tooth to be much closer to the sprocket center than the pins and the pitch circle.
- Chordal action is defined as the up and down motion of the chain over top dead center of the sprocket centerline. Excessive chordal action can lead to product tippage.



TableTop Conveyor Design

> Roller Chain Sprockets for Two-Piece Chains

Roller Chain Sprockets for Two-Piece Chains

- ⇒ TableTop two-piece roller chains operate over standard ANSI sprockets.

 Read important note below:
- To prevent interference between chain hold down TABs and sprocket hubs, the maximum hub diameters are as follows:
- ⇒ 1843 TAB sprocket pitch diameter minus 0.65 in (16.5mm)
- ⇒ 1874 TAB, 4874 TAB sprocket pitch diameter minus 1.30 in (33.0mm)
- ⇒ 1883 TAB sprocket pitch diameter minus 1.65 in (41.9 mm)
- ⇒ 1863 TAB, 863 TAB, 1873 TAB, 4873 TAB sprocket pitch diameter minus 1.50 in (38.1mm)
- ⇒ 3873 TAB sprocket pitch diameter minus 1.50 in (38.1mm)
- ⇒ 1673 TAB sprocket pitch diameter minus 1.60 in (40.6mm)

Rol	ler Base Chain and Sprock	cets
Chain Series	Base Chain	Sprockets
1843TAB	#1843	
1843TAB G	#1043	ANSI #40
845	#843	AINSI #40
1844	#043	
863TAB	#863	
963		
1673		
1863TAB		
1873TAB		
1873TAB G	#63	ANSI #60
1874TAB	#03	AINSI #60
1874TAB G		
3873TAB		
4873TAB		
4874TAB		
1864	#1864	
1883TAB	#1883	ANSI #80

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chair

> Shafting Recommendations for Stationary Tail Shafts

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chains

CONVEYOR DESIGN RECOMMENDATIONS

Idler Wheel and Sprocket Location (Stationary Shafts Only)

⇒ The idler wheels can only be used in place of tail shaft sprockets with TableTop one-piece unit link chains



- ⇒ Idler wheels should not be used with roller base chains
- ⇒ For proper location and smooth operation, the idler wheels should be mounted slightly below the top of the wearstrips

Recommended Set Collar Clearance 0.03 in (0.8mm)	1.50 in (38.1mm)		
ldler	"A" Din	nension	
ldler Wheel	"A" Din	nension mm	
Wheel	in	mm	
Wheel 21T Idler Wheel	in 2.70	mm 68.6	

Shafting Recommendations for Stationary Tail Shafts

- Recommended Materials:
- ⇒ Carbon Steel (dry environments only)
- ⇒ Stainless Steel
- Suggested Hardness:
- ⇒ 25 to 30 Rc
- Suggested Surface Finish:
- ⇒ 63 µ-in Ra
 - Rexnord recommends rotating shafts in bearings. If bearings are not used, the following are guidelines for operating TableTop sprockets on stationary shafts:

Sprocket	Max. Recommended Chain Speed				
Sprocket	FPM	MPM			
N - Acetal	0–50	0–15			
UHMWPE	0–50	0–15			
NS - Nylon, Split	0–100	0–30			
LF Bushing (Idler Wheel)	0–300	0–90			
Bronze Bushing	0–500	0–150			
Bearings	Recommended for Speeds > 500	Recommended for Speeds > 150			

CONVEYOR DESIGN RECOMMENDATIONS

TableTop Conveyor Design


>

Keyway and Setscrew Sizes

English:				
Shaft Diameter	Key Width (w)	Key Height (h)	Keyseat Depth (h/2)	Setscrew Size
> 9/16" to 7/8"	3/16"	3/16"	3/32"	1/4-20
> 7/8" to 1-1/4"	1/4"	1/4"	1/8"	3/8-16
> 1-1/4" to 1-3/8"	5/16"	5/16"	5/32"	3/8-16
> 1-3/8" to 1-3/4"	3/8"	3/8"	3/16"	3/8-16
> 1-3/4" to 2-1/4"	1/2"	1/2"	1/4"	1/2-13
> 2-1/4" to 2-3/4"	5/8"	5/8"	5/16"	1/2-13

Metric:

Shaft Diameter	Key Width (w)	Key Height (h)	Keyseat Depth (h/2)	Setscrew Size
> 22mm to 30mm	8mm	7mm	3.5mm	M6 x 1
> 30mm to 38mm	10mm	8mm	4mm	M8 x 1.25
> 38mm to 44mm	12mm	8mm	4mm	M10 x 1.5
> 44mm to 50mm	14mm	9mm	4.5mm	M10 x 1.5
> 50mm to 58mm	16mm	10mm	5mm	M12 x 1.75
> 58mm to 65mm	18mm	11mm	5.5mm	M12 x 1.75

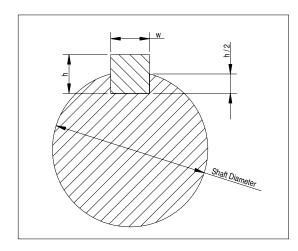

/

English keyed round bore sprockets are available with one setscrew as standard. Additional setscrews can be provided upon request. Metric keyed round bore sprockets are not supplied with a setscrew as standard.



If multiple strands share a tail shaft, key only one sprocket and allow others to rotate. Collars should be utilized to prevent lateral movement.

Split Sprocket Bore Nomenclature
Shaft Ready — Tight fit on the shaft with a keyway and setscrew.

Plain Bore — Same tight fit bore as a shaft ready bore, but without a keyway and setscrew.

Idler Bore — Round bore with a clearance fit (no keyway or setscrew). Designed to spin freely on the shaft.

Rough Stock Bore — Wide tolerance bore used for work in process. Not for use on any shaft. Must be further machined for actual use.

Over Sized Bore — Round bore with a slightly loose fit on the shaft with keyway but no setscrew. Designed to move laterally on the shaft during setup and still transmit torque through the keyway as a drive sprocket in the actual application. Not recommended for axial float in thermal applications.

> Keyway and Setscrew Sizes

> Split Sprocket Bore Nomenclature

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chain

> Chain Pull
Calculations

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chains

#TableTop CALCULATION PROGRAM

The TableTop Calculation Program is available to perform chain pull calculations for specific conveyor applications.

Chain Pull Calculations

To obtain the most recent calculation program:

- Download from Technical Support at: http://www.rexnord.com/flattop
- Contact Application Engineering

⇒ Prior to performing chain pull calculations, the following information is needed:

- Chain style, material and width
- Wearstrip material
- Corner track material (if utilizing a sideflexing chain)
- Lubrication conditions (i.e. dry, water, soap and water, oil)
- ◆ Chain speed (FPM) or (MPM)
- Product weight (lbs/ft) or (kg/m)
- Product material
- Number of starts per hour (e.g. indexing conveyors)
- Percent of time product accumulation occurs (i.e. slippage)
- Portion of conveyor where product accumulation occurs
- Conveyor layout with dimensions

⇒ The calculation output sheet contains the following information:

- Calculated headshaft chain tension
- Maximum allowable headshaft chain tension
- ◆ Percent of allowable chain tension
- Total horsepower required with an assumed gearbox efficiency of 100%

If the percent of allowable chain tension is 100% or less, your conveyor application is within chain capacity.



The horsepower requirement the program calculates is the "design horsepower" that is required to power the conveyor based on the input parameters. Additional considerations should be made for the type of drive used, efficiency losses in the power train, appropriate service factors, as well as any gearbox manufacturer's recommendations.



Rexnord recommends some sort of soft start for all FlatTop chain conveyor motors, but especially for higher speeds and conveyors with bottom drives. Hard starts add peak loads to the chain, which will shorten the service life. Hard starts can also cause the chain to stretch and bounce in the catenary sag section, sometimes causing the chain to catch in the conveyor frame and become damaged. On bottom drives, hard starts can cause the chain to fall off the drive sprockets and skip teeth.

⇒ For a side-flexing conveyor, the calculation output sheet contains the following information:

- Calculated corner tension (PV)
- Maximum allowable corner tension



If the calculated corner tension is less than the maximum allowable corner tension, your conveyor application is within chain PV capacity.

⇒ For a side-flexing roller base chain conveyor, the calculation sheet contains the following information:

- Calculated adjusted corner tension
- Maximum allowable adjusted corner tension



If the calculated adjusted corner tension is less than the maximum allowable adjusted corner tension, your conveyor application is within chain capacity.

⇒ The TableTop Calculation Program calculates the following:

- Carousel conveyor analysis

 (i.e. offset wrap drive conveyors)
- Universal conveyor analysis

 (i.e. alpine systems, multiple loading systems)
- ◆ Catenary sag vs. length vs. tension
- Catenary sag vs. length vs. excess chain
- Product backline pressure (due to accumulation)



The TableTop Calculation Program does not take environmental conditions into consideration. This calculation program **ONLY** provides information on whether the chain is within capacity.

TableTop CALCULATION PROGRAM


Calculating Chain Speed, Given Production Output

⇒ The speed of each chain depends on the production speed (containers per minute), the container size (diameter or length), and product flow (single file or en masse). If en masse (in mass), the conveyor width must also be considered.

Example:

A production line must run at a speed of 1600 containers per minute (CPM). The jars have a 3.00 in (76.2mm) diameter.

- ⇒ 1) What is the chain speed when the jars are running single file on SS815-K325 chain?
- ⇒ 2) What is the chain speed when the jars are running en masse (in mass) on dual strands of SS815-K750 chain?
- Single File (one strand of SS815-K325 chain)

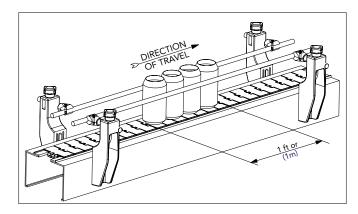

English:

Container/ft
$$= \frac{12 \text{ in/ft}}{\text{Dia. or length of Container (in)}} = \frac{12}{3} = 4 \text{ containers/ft}$$
Chain Speed
FPM (Feet per minute)
$$= \frac{\text{CPM (Containers per minute)}}{\text{Containers/ft}} = \frac{1600}{4} = 400 \text{ FPM}$$

Metric:

Container/m =
$$\frac{1000 \text{mm/m}}{\text{Dia. or length of Container (mm)}} = \frac{1000}{76.2} = 13.1 \text{ containers/m}$$

Chain Speed MPM (Meters per minute) = $\frac{\text{CPM (Containers per minute)}}{\text{Container/m}} = \frac{1600}{13.1} = 122.14 \text{ MPM}$

> Calculating Chain Speed, Given Production Output

- > Example
- > Single File

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chain:

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.


TableTop Chains



TableTop CALCULATION PROGRAM

Calculating Chain Speed, Given Production Output

Mass Flow (dual strands of SS815-K750 chain) (7.50 in (190.5mm) wide)
Overall conveyor width = 15.00 (381.0mm)

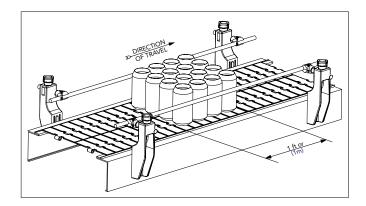

English:

Container/ft² =
$$\frac{166.277}{\text{Dia. (in)}^2}$$
 = $\frac{166.277}{3^2}$ = 18.5 containers/ft²

Conveyor Width (in) =
$$\#$$
 of strands x Flight Width (in) = $2 \times 7.5 = 15.0$ in

Chain Speed (FPM) =
$$\frac{\text{CPM}}{\text{Containers/ft}^2 \times (\text{Width (in)/12 in/ft})} = \frac{1600}{18.5 \times (15/12)} = 70 \text{ FPM}$$

Metric:

Container/m² =
$$\frac{1,500,000}{\text{Dia. (mm)}^2}$$
 = $\frac{1,500,000}{76.22}$ = 198.1 containers/m²

Conveyor Width (mm) = # of strands x Flight Width (mm) = $2 \times 190.5 = 381 \text{ mm}$

Chain Speed (MPM) =
$$\frac{\text{CPM}}{\text{Containers/m}^2 \text{ x (Width (mm)/12mm/m)}} = \frac{1600}{198.1 \text{ x (381/1000)}} = 21 \text{ MPM}$$



- 1. Oval and rectangular containers are usually only run single file. En masse (in mass) conveying of such containers leads to orientation and jamming problems.
- 2. The actual conveyor speeds are usually about 10-15% faster than the calculated required speeds in order to provide good "product take-away" from the adjacent machinery.
- 3. The speeds of individual chains on combiners and decombiners depend on mass flow speed, single file speed and the number of strands on the combiner/decombiner (see caution note on page EM TT 27).



>

Calculating Product Weight, Given Production Output

⇒ When calculating chain pull, the weight of product per linear unit of measurement (in the direction of chain travel) per individual strand is required.

Example:

Continuing with the previous example, a production line must run at a speed of 1600 containers per minute (CPM). Each jar weighs 1.00 lb (0.454kg).

Single File (one strand of SS815-K325 chain)

```
English:
```

lbs/ft = (Containers/ft) x (lbs/Container) = 4 x 1 = 4.0 lbs/ft

Metric:

 $kg/m = (Containers/m) \times (kg/Container) = 13.1 \times 0.454 = 5.9kg/m$

Mass Flow (on each strand of SS815-K750 chain) English:

lbs/ft = (Containers/ft) x (Flight Width (in)/12 in/ft) x (lbs/Container) = $18.5 \times (7.5/12) \times 1 = 11.6$ lbs/ft

Metric:

 $kg/m = (Containers/m) \times (Flight Width (mm)/1000 mm/m) \times (kg/Container)$ = 198.1 \times (190.5/1000) \times 0.454 = 17.1kg/m

TableTop Calculation Program

- > Calculating Product Weight, Given Production Output
- > Example
- > Single File
- > Mass Flow

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

TableTop Chain

TableTop Calculation Program

> Typical Product Sizes and Weights

Rexnord, TableTop, MatTop, PS, Platinum Series, LPC, Magnetflex and HP are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights Reserved.

ableTop Chains


TableTop CALCULATION PROGRAM

>

Typical Product Sizes and Weights

	Content	Container	Container Size	Base Din	nensions	Weigi	ht Full	Single	File	En M	En Masse	
	Content	Material	Container Size	inches	mm	lbs	kg	lbs/ft	kg/m	lbs/ft²	kg/m²	
		Paper	1/2 Pint	3 x 3	76.2 x 76.2	0.60	0.27	2.4	3.6	-	-	
	NATE OF THE PARTY	Paper	Pint	3 x 3	76.2 x 76.2	1.10	0.50	4.4	6.5	-	-	
	Milk	Paper Paper	Quart 1/2 Gallon	3-1/8 x 3-1/8 4-1/8 x 4-1/8	79.4 x 79.4 104.8 x 104.8	2.30 4.50	1.04 2.04	8.8 13.1	13.1 19.5	-	-	
		Plastic	Gallon	6 x 6	152.4 x 152.4	8.90	4.04	17.8	26.5	_	-	
Dairy		Plastic	6 oz	2-5/8 Ø	66.7Ø	0.40	0.18	1.8	2.7	9.7	46.9	
	Yogurt	Plastic	6 Pack / 4 oz Containers	5 x 7	127 x 177.8	1.57	0.71	3.8	5.6	-	-	
		Plastic	1/2 lb	4 Ø	101.6Ø	0.60	0.27	1.8	2.7	6.2	30.3	
	Cottage Cheese	Plastic	1 lb	4-3/4 Ø	120.7Ø	1.10	0.50	2.8	4.1	8.1	39.4	
	6	Plastic	2 lb	5 Ø	127Ø	2.30	1.04	5.5	8.2	15.3	74.4	
	Concentrated Juice	Paper	12 oz Gallon	2-5/8 Ø 6 Ø	66.7Ø 152.4Ø	1.00	0.45	4.6 2.3	6.8 3.5	24.1 5.4	117.2 26.3	
		Plastic Glass	Gallon	6 Ø	152.4Ø	3.59	1.63	7.2	10.7	16.6	80.6	
	Juice	Paper	6.75 oz Box (Tetra)	1-1/2 x 2-1/4	38.1 x 57.2	0.48	0.22	3.8	5.7	-	-	
		Plastic	10 Pack / 6.75 Boxes (Tetra)	3 x 10-1/2	76.2 x 266.7	4.87	2.21	19.5	29.0	-	-	
		Aluminum	250ml PET	2-5/64 Ø	52.9Ø	0.63	0.29	3.6	5.4	24.3	117.4	
		Aluminum	12 oz	2.6 Ø	66.0Ø	0.85	0.39	3.9	5.8	20.9	101.8	
		Plastic	500ml PET	2-37/64 Ø	65.5Ø	1.16	0.53	5.4	8.0	29.0	141.0	
	Soft Drink	Plastic	20 oz PET	2-7/8 Ø	73.0Ø	1.37	0.62	5.7	8.5	27.6	134.1	
		Plastic	1 Liter PET	3-3/16 Ø 4-3/16 Ø	81.0Ø 106.4Ø	2.31 3.40	1.05 1.54	8.7 9.7	12.9 14.5	37.8 32.2	183.7 156.7	
		Plastic Plastic	1-1/2 Liter PET 2 Liter PET	4-3/16 Ø 4-1/2 Ø	114.3Ø	3.40 4.40	2.00	9.7	14.5	36.1	175.7	
		Plastic	3 Liter PET	5-1/8 Ø	130.2Ø	6.38	2.89	14.9	22.2	40.4	196.3	
		Glass	12 oz	2-1/2 Ø	63.5Ø	1.50	0.68	7.2	10.7	39.9	194.0	
		Glass	12 oz Non-Returnable	2-3/4 Ø	69.9Ø	1.20	0.54	5.2	7.8	26.4	128.1	
		Glass	16 oz Non-Returnable	2-3/4 Ø	69.9Ø	1.60	0.73	7.0	10.4	35.2	170.8	
Beverages		Glass	32 oz	2-5/8 Ø	66.7Ø	3.40	1.54	15.5	23.1	82.0	398.6	
		Glass	64 oz	3-5/8 Ø	92.1Ø	3.88	1.76	12.8	19.1	49.1	238.6	
	Beer	Aluminum	12 oz	2.6 Ø 10-3/4 x 7-3/4	66.0Ø	0.85	0.39	3.9	5.8 17.3	20.9	101.8	
		Paper Paper	12 Pack / 12 oz Cans 12 Pack Fridge Pack	16 x 4-7/8	273.1 x 196.9 406.4 x 123.8	10.40	4.72 4.68	11.6 7.7	11.5	-	-	
		Paper	24 Pack / 12 oz Cans	16 x 10-3/4	406.4 x 273.1	20.16	9.14	15.1	22.5	_	-	
		Paper	24 Pack / 12 oz Cans (cube)	10-3/4 x 7-3/4	273.1 x 196.9	20.16	9.14	22.5	33.5	-	-	
		Paper	18 Pack / 12 oz Cans	16 x 7-3/4	406.4 x 196.9	14.69	6.66	11.0	16.4	-	-	
		Paper	30 Pack / 12 oz Cans	13-1/2 x 7-3/4	342.9 x 196.9	24.48	11.10	21.8	32.4	-	-	
		Glass	750ml	2-7/8 Ø	73.0Ø	2.88	1.31	12.0	17.9	57.9	281.9	
	Wine / Champagne	Glass	1.5 Liter	4-1/4 Ø	108.0Ø	6.37	2.89	18.0	26.8	58.6	284.9	
	, ,	Glass	12 oz	2-1/2 Ø	63.5Ø 130.2 x 133.4	1.22	0.55	5.9	8.7	32.5	157.8	
		Paper Metal	4 Pack / 12 oz Bottles 1/2 lb	5-1/8 x 5-1/4 4-1/8 Ø	130.2 x 133.4 104.8Ø	5.07 0.80	2.30 0.36	11.9 2.3	17.7 3.5	7.8	38.0	
	- "	Metal	1 lb	4-1/8 Ø	104.8Ø	1.30	0.59	3.8	5.6	12.7	61.7	
	Coffee	Metal	2 lb	5-1/4 Ø	133.4Ø	2.50	1.13	5.7	8.5	15.1	73.3	
		Metal	3 lb	6-1/4 Ø	158.8Ø	3.80	1.72	7.3	10.9	16.2	78.6	
	Baby Food	Glass	Regular	2-3/8 Ø	60.3Ø	0.56	0.25	2.8	4.2	16.5	80.3	
	Baby Food	Glass	Junior	2-3/8 Ø	60.3Ø	0.80	0.36	4.0	6.0	23.6	114.8	
	Soup	Metal	10.5 oz	2-5/8 Ø	66.7Ø	0.76	0.34	3.5	5.2	18.3	89.1	
	Soup Soup	Metal Metal	18.5 oz 32 oz	3-1/8 Ø 4 Ø	79.4Ø 101.6Ø	1.33	0.60	5.1 5.7	7.6 8.5	22.6 19.7	110.0 96.0	
	Soup Cracker	Paper	32 oz 10 oz Box	2-1/4 x 5-1/4	57.2 x 133.4	0.72	0.86	3.8	5.7	19.7	70.0	
	Peanut Butter	Plastic	18 oz	3 Ø	76.2Ø	1.15	0.52	4.6	6.8	21.2	103.3	
Facili	Jelly	Glass	32 oz	3-5/16 Ø	84.1Ø	2.15	0.98	7.8	11.6	32.6	158.6	
Food	Jelly	Glass	18 oz	2-5/8 Ø	66.7Ø	1.62	0.73	7.4	11.0	39.1	189.9	
	Catsup	Plastic	24 oz	2-1/4 x 3-3/4	57.2 x 95.3	1.63	0.74	8.7	12.9	-	-	
	Apple Sauce	Glass	23 oz	3-5/16 Ø	84.1Ø	2.05	0.93	7.4	11.1	31.1	151.2	
	Mayonnaise	Glass	32 oz	40	101.6Ø	3.03	1.37	9.1	13.5	31.5	153.1	
	Cereal	Paper Metal	14 oz Box	2-3/8 x 7-1/2	60.3 x 190.5 74.6Ø	1.06	0.48	5.4 4.2	8.0	20.0	- 97.5	
	Vegetable Tuna	Metal	14.5 oz 12 oz Can	2-15/16 Ø 4 Ø	74.6Ø 101.6Ø	0.88	0.47	2.6	6.3 3.9	9.1	97.5 44.5	
	Tomato Sauce	Metal	29 oz	40	101.6Ø	2.07	0.40	6.2	9.2	21.5	104.6	
	Dish Soap	Plastic	25 oz	2-7/16 x 3-3/8	61.9 x 85.7	1.78	0.81	8.8	13.0	-	-	
	Liquid Laundry Soap	Plastic	22 oz	2 x 3-3/8	50.8 x 85.7	1.60	0.73	9.6	14.3	_	-	
	Liquid Laundry Soap	Plastic	32 oz	2-5/8 x 4-1/2	66.7 x 114.3	2.30	1.04	10.5	15.6	-	-	
Cleaners	Liquid Laundry Soap	Plastic	100 oz	5-1/2 x 7-3/4	139.7 x 196	7.01	3.18	15.3	22.8	-	-	
5.53.10.0	Liquid Bleach	Plastic	Quart	3-1/4 Ø	82.6Ø	2.40	1.09	8.9	13.2	37.8	183.5	
	Liquid Bleach	Plastic	1/2 Gallon	4-3/4 Ø	120.7Ø	4.80	2.18	12.1	18.0	35.4	171.9	
	Liquid Bleach Liquid Bleach	Plastic Plastic	Gallon 182 oz	6-1/4 Ø 7-1/4 Ø	158.8Ø 184.2Ø	9.50 8.16	4.31 3.70	18.2 13.5	27.1	40.4 25.8	196.5 125.5	
	Toilet Paper	Paper	Individual Roll	4-1/4 Ø	104.20	0.10	0.10	0.6	1.0	23.0	10.3	
Toiletries	Toilet Paper	Plastic	4 Pack	4-1/4 x 8-1/2	108 x 215.9	0.23	0.42	2.6	3.9	-	-	
		Plastic	24 Pack	12 x 15-1/2	304.8 x 393.7	5.67	2.57	5.7	8.4	-	-	
	Toilet Paper	Flastic	24 I ack	12 X 13 1/2	001.07.070.7	0.07	2.07	0.7				
Automotive	Toilet Paper Tire Tire	Passenger	Typical Typical	28 Ø 48 Ø	711.2Ø 1219.2Ø	35.00 150.00	15.87	- -	-	-	-	

Rexnord MatTop Chains

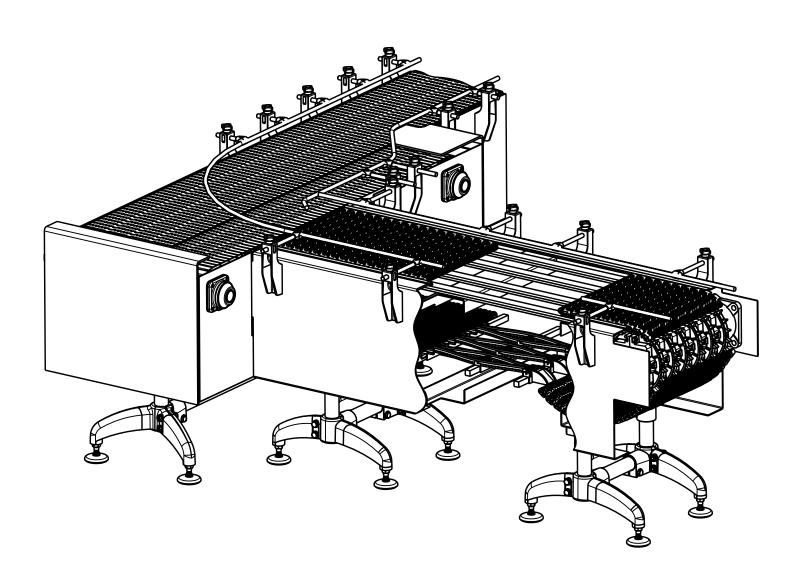

MatTop Conveyor Chain Materials

- > Acetal Family
- > LF and WLF (Low-Friction)
- > HP and WHP (High Performance)
- XLG (Low-Friction Acetal, Green)
- > PS (Platinum Series)
- > PSX (Platinum Series X)
- > Specialty Plastics
- > AS (Anti-Static)
- > HCAS (High Capacity Anti-Static)
- > BIR (Black Impact-Resistant)
- > ESD (Electrostatic Dissipative)
- HC-ESD (High Capacity, Electrostatic Dissipative)
- > FTR (Black, Fryer Temperature-Resistant)
- > GTC (Grey Tough Composite)
- USP (Ultra-Stabilized Polypropylene, Dark Green)
- > BWR (Black Wear-
- > WX/BWX (Abrasion-Resistant)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

CHAIN MATERIALS

For more detailed material information, see page EM - MT - 14 or the Appendix located at the end of this manual.

Materials vary per chain series; see Product Catalog to determine standard versus special materials.

Acetal Family

LF and WLF (Low-Friction)

⇒ Patented blend of acetal that provides good wear resistance and long service life due to the low coefficient of friction

HP and WHP (High Performance)

⇒ Patented blend of acetal specifically formulated for dry-running conveyors due to excellent friction characteristics

XLG (Low-Friction Acetal, Green)

⇒ Internally lubricated extra low-friction acetal

PS (Platinum Series)

⇒ Patented blend of acetal specially formulated for high-speed conveying applications

PSX (Platinum Series X)

- ⇒ High-speed conveying with little to no external lubrication
- ⇒ Long wear life with minimal dusting

Specialty Plastics

AS (Anti-Static)

- ⇒ An electrically conductive acetal formulated to reduce or eliminate nuisance static charge
- ⇒ **ALWAYS** contact Rexnord Application Engineering for assistance

HCAS (High Capacity Anti-Static)

- ⇒ Reduces or eliminates nuisance static
- ⇒ High capacity acetal resin, requires 10% derate from acetal counterparts

BIR (Black Impact-Resistant)

⇒ Specifically formulated to take constant impact

ESD (Electrostatic Dissipative)

- ⇒ Polypropylene formulated for conveying sensitive products such as electronics and computer chips where controlling static charge or static decay is critical
- ⇒ **ALWAYS** contact Rexnord Application Engineering for assistance

HC-ESD (High Capacity, Electrostatic Dissipative)

- High capacity polypropylene formulated for conveying sensitive products such as electronics and computer chips where controlling static charge or static decay is critical
- ⇒ Requires 10% derate from polypropylene counterparts
- ⇒ **ALWAYS** contact Rexnord Application Engineering for assistance

FTR (Black, Fryer Temperature-Resistant)

⇒ Formulated to be used in oven/fryer discharge conveyor applications such as snack chips

GTC (Grey Tough Composite)

- ⇒ High-strength, impact-modified composite
- ⇒ High impact resistance, low strength

USP (Ultra-Stabilized Polypropylene, Dark Green)

- ⇒ Superior resistance to chemicals used in pasteurizers, warmers and coolers
- ⇒ Remains stronger and more flexible than standard polypropylene

BWR (Black Wear-Resistant)

⇒ BWR may extend chain life up to 5 times in comparison to other plastic materials in applications such as conveying rough machined parts

WX/BWX (Abrasion-Resistant)

⇒ A nylon material formulated to be used in abrasive applications where chain is subjected to abrasives such as glass, sand and dirt

CHAIN MATERIALS

P (Chemical-Resistant)

⇒ A polyester formulated to reduce or eliminate material degradation in applications where chemicals such as chlorine and phosphorous are present in moderate concentrations

CR (Extreme Chemical-Resistant)

⇒ Fluorinated polymer that is chemically resistant to high concentrations of oxidizing agents, acids and bases

DUV, BUV, YUV, HUV and LUV (Ultraviolet-Resistant)

- ⇒ Specially formulated acetal
- ⇒ Used for outdoor applications with direct exposure to the sun or UV radiation
- ⇒ DUV, BUV, YUV, RUV Acetal LUV — Polyethylene

MR (Melt-Resistant)

⇒ A nylon material with a high melting point used to prevent hot objects (product temperature up to 375°F [190°C]) from melting the surface of the chain

FR (Flame-Retardant)

⇒ Flame-retardant polyester that meets the requirements of UL Standard 94 V-0 rated combustion

HS (Heat-Stabilized)

⇒ Nylon resin designed for environments that contain hot water spray (rinser, sterilizer and pasteurizer applications)

WSM, BSM, BRSM, BYSM, RSM, SRMB, SYMB, YSM and SMB (Cut-Resistant)

- ⇒ Tough acetal material formulated for abrasive and impact loading applications
- ⇒ Cut-resistant material commonly used in the meat processing industry on cutting, boning and trimming lines
- ⇒ Available in many colors

HT, WHT, KHT, BHT, HTB and RHT (High-Temperature)

- ⇒ Polypropylene formulated for hightemperature and general applications in both wet and dry conditions
- ⇒ Excellent chemical resistance

TC (Tough Composite)

- ⇒ Specially formulated alloy, high strength, toughened composite material
- ⇒ Excellent for high-speed case incline and decline conveyors
- ⇒ Excellent impact and chemical resistance

UHS (Ultra High Strength)

- ⇒ Patented polypropylene composite that allows for increased load-carrying capacity and reduced stretch at elevated temperatures
- ⇒ Ideal for heavy-duty pasteurizer, sterilizer and cooler applications

WLT and BLT (Low-Temperature)

- ⇒ Polyethylene formulated to retain toughness, impact strength and ductility in both dry and wet conditions
- ⇒ Good chemical resistance
- ⇒ Available in white and blue

MatTop Conveyor Chain Materials

- > P (Chemical-Resistant)
- > CR (Extreme Chemical-Resistant)
- > DUV, BUV, YUV, HUV and LUV (Ultraviolet-Resistant)
- > MR (Melt-Resistant)
- > FR (Flame-Retardant)
- > HS (Heat-Stabilized)
- > WSM, BSM, BRSM, BYSM, RSM, SRMB, SYMB, YSM and SMB (Cut-Resistant)
- > HT, WHT, KHT, BHT, HTB and RHT (High-Temperature)
- > TC (Tough Composite)
- > UHS™ (Ultra High Strength)
- > WLT and BLT (Low-Temperature)

A

Since materials vary in strength, refer to the Product Catalog for specific chain/ material strengths when changing out materials. Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chain

MatTop Conveyor Chain Materials

- > Antimicrobial
 Product
 Protection and
 Antimicrobial
 Product
 Protection
 Detectable
 Materials
- > WHA and BHA (High-Temperature Antimicrobial)
- WLA and BLA (Low-Temperature Antimicrobial)
- > WSA, BSA and GSA (Cut-Resistant Antimicrobial)
- > GLD and RLD (Low-Temperature Detectable)
- > THD (High-Temperature Detectable)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

CHAIN MATERIALS

Antimicrobial Product Protection and Antimicrobial Product Protection Detectable Materials

WHA and BHA (High-Temperature Antimicrobial) ***

- ⇒ Specially formulated polypropylene material that inhibits the growth of bacteria, mold and mildew that can cause degradation of the chain
- ⇒ Developed specifically for chains used in food processing
- ⇒ Available in white and blue

WLA and BLA (Low-Temperature Antimicrobial) ***

- ⇒ Specially formulated polyethylene material that inhibits the growth of bacteria, mold and mildew that can cause degradation of the chain
- ⇒ Developed specifically for chains used in food processing
- ⇒ Available in white and blue

WSA, BSA and GSA (Cut-Resistant Antimicrobial)

- ⇒ Specially formulated cut- and abrasiveresistant acetal material that inhibits the growth of bacteria, mold and mildew that can cause degradation of the chain
- ⇒ Developed specifically for chains used in food processing
- ⇒ Available in white, blue and gray

GLD and RLD (Low-Temperature Detectable) ***

- ⇒ A patented blend of polyethylene antimicrobial additive and non-ferrous metal particulate
- Allows for detection as it passes through a metal detector in dry and frozen food applications
- ⇒ Available in gray and red

THD (High-Temperature Detectable) ***

- ⇒ A patented blend of polypropylene antimicrobial additive and non-ferrous metal particulate
- ⇒ Allows for detection as it passes through a metal detector in dry and frozen food applications

*** These materials meet the end-test requirements as specified by FDA 21 CFR 177.1520 (c), the FDA requirement for polyolefin materials intended for food contact. All components of these materials are either compliant for food contact a listed by the FDA or regulated by the EPA.



Standard pin materials for MatTop Chains include:

- Polypropylene
- Polyethylene
- Acetal
- Polyester (PBT)
- Stainless steel available (typically for severely abrasive environments)



Not all materials are available in all chains. Contact Rexnord Application Engineering for further assistance.



FRICTION BETWEEN CHAIN AND PRODUCT (Fm)

	Chain I	Material	Product Material							
Base Material Chain Material		Lubrication Condition	Aluminum	Returnable Glass Bottles**	Non- Returnable Glass Bottles	Paper	Plastic (crates, shrink)	Plastic (PET)	Steel	
		Dry	0.18	0.20	0.12	0.23	0.18	0.16	0.18	
	PS	Water	0.14	0.18	0.11	NR	0.16	0.15	0.16	
		гэ	Soap & Water	0.12	0.14	0.10	NR	0.14	0.14	0.13
		Oil	_	_	_	NR	_	_	0.10	
		Dry	0.16	0.20	0.12	0.23	0.18	0.16	0.16	
	DCV	Water	0.13	0.18	0.11	NR	0.16	0.15	0.14	
	PSX	Soap & Water	0.12	0.14	0.10	NR	0.14	0.14	0.12	
		Oil	-	_	_	NR	_	_	0.10	
		Dry	0.18	0.20	0.12	0.23	0.18	0.18	0.18	
		Water	0.14	0.18	0.11	NR	0.16	0.16	0.16	
	HP, WHP	Soap & Water	0.12	0.14	0.10	NR	0.14	0.14	0.13	
		Oil	_	_	_	NR	_	_	0.10	
		Dry	0.20	0.20	0.15	0.30	0.20	0.20	0.25	
	LF, WLF, XL,	Water	0.15	0.18	0.13	NR	0.18	0.18	0.20	
	XLA, XLG	Soap & Water	0.13	0.10	0.10	NR	0.15	0.15	0.15	
	ALA, ALG	Oil	-	-	-	NR	-	-	0.10	
			0.25	0.27	0.20	0.33	0.25	0.25		
<u>a</u>		Dry		 					0.30	
Acetal	D, WD, MLF	Water	0.17	0.20	0.15	NR	0.20	0.20	0.22	
Ĭ	, WD, WE	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15	
		Oil	-	-	-	NR	-	-	0.10	
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30	
	AS, HCAS	Water	NR	NR	NR	NR	NR	NR	NR	
	7.07.10	Soap & Water	NR	NR	NR	NR	NR	NR	NR	
		Oil	NR	NR	NR	NR	NR	NR	NR	
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30	
	WSA, GSA,	Water	0.17	0.18	0.15	NR	0.20	0.20	0.22	
	BSA	Soap & Wate	0.12	0.14	0.10	NR	0.15	0.15	0.15	
		Oil	_	_	_	NR	_	_	0.10	
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30	
	WSM, BSM,	Water	0.17	0.18	0.15	NR	0.20	0.20	0.22	
	SMB	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15	
		Oil	_	_	-	NR	-	_	0.10	
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30	
		Water	0.17	0.18	0.15	NR	0.20	0.20	0.22	
	DUV	Soap & Water	0.17	0.14	0.10	NR	0.15	0.15	0.15	
		Oil	-	-	-	NR	-	-	0.10	
			0.34	0.35	0.33	0.43	0.31	0.30	0.10	
		Dry	0.34	0.30	0.33	NR	0.31			
	SS, SSC	Water						0.21	0.30	
		Soap & Water	0.14	0.15	0.15	NR	0.15	0.14	0.15	
		Oil		-	-	NR	-	-	_	
_		Dry	0.34	0.35	0.33	0.43	0.31	0.30	0.38	
Metal	S	Water	NR	NR	NR	NR	NR	NR	NR	
Σ		Soap & Water	NR	NR	NR	NR	NR	NR	NR	
		Oil	0.10	0.10	NR	NR	NR	NR	0.10	
		Dry	0.28	0.47	0.35	0.40	0.30	0.30	0.35	
	SSB	Water	0.19	0.31	0.25	NR	0.20	0.20	0.25	
	330	Soap & Water	0.12	0.21	0.15	NR	0.10	0.10	0.15	
		Oil	_	_	-	NR	-	1	0.15	
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30	
	140//5140/	Water	NR	NR	NR	NR	NR	NR	NR	
	WX/BWX	Soap & Water	NR	NR	NR	NR	NR	NR	NR	
		Oil	_	_	-	NR	_	_	_	
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30	
		Water	NR	NR	NR NR	NR	NR	NR	NR	
	MR/FTR	Soap & Water	NR	NR	NR	NR	NR	NR	NR	
r C		Oil	-	-	-	NR	-	-	0.10	
Nylon			0.25	0.27	0.20	0.33	0.25	0.25	0.10	
Z		Dry	NR							
	BWR	Water		NR	NR	NR	NR NB	NR	NR	
		Soap & Water	NR	NR	NR	NR	NR	NR	NR 0.10	
		Oil	- 0.25	- 0.07	-	NR	-	- 0.05	0.10	
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30	
	HS	Water	0.17	0.18	0.15	NR	0.20	0.20	0.22	
		Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15	
		Oil	-	_	_	NR	_	_	0.10	

NR denotes "not recommended"

Dash denotes "combination not tested"

i

All values shown in this table were obtained through product testing. Actual values may be higher or lower depending on environmental conditions.

MatTop Conveyor Chain Materials

> Friction
Between Chain
and Product
(Fm)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved

MatTop Chains

MatTop Conveyor Chain Materials

> Friction
Between Chain
and Product
(Fm)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

NatTop Chains 📑

FRICTION BETWEEN CHAIN AND PRODUCT (Fm)

D	Chain N	Material	Product Material								
Base ⁄Iaterial	Chain Material	Lubrication Condition	Aluminum	Returnable Glass Bottles**	Non- Returnable Glass Bottles	Paper	Plastic (crates, shrink)	Plastic (PET)	Stee		
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
	тс	Water	0.17	0.18	0.15	NR	0.21	0.21	0.23		
	10	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
		Oil		_	_	NR	0.10	0.10	0.10		
ter		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
Polyester	Р	Water	0.17	0.18	0.15	NR	0.21	0.21	0.22		
Pol		Soap & Water Oil	0.12	0.14	0.10	NR NR	0.15	0.10	0.15 0.10		
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.10		
		Water	0.23	0.27	0.15	NR	0.20	0.20	0.30		
	FR	Soap & Water	0.17	0.14	0.10	NR	0.15	0.15	0.15		
		Oil	-	-	-	NR	-	-	0.10		
0 .		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
Fluorinated Polymer		Water	0.17	0.18	0.15	NR	0.20	0.20	0.22		
luorinate Polymer	CR	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
플ద		Oil	_	-	-	NR	_	-	0.10		
_	HT, WHT,	Dry	0.29	0.29	0.24	0.35	0.32	0.28	0.31		
	RHT, KHT,	Water	0.19	0.21	0.18	NR	0.24	0.20	0.25		
	нтв, внт, ур,	Soap & Water	0.15	0.14	0.10	NR	0.19	0.15	0.17		
	XP, USP	Oil	_	_	_	NR	_	_	0.10		
		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
	NAMILA DILIA	Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
	WHA, BHA	Soap & Water	0.16	0.14	0.10	NR	0.20	0.20	0.20		
		Oil	-	-	_	NR	_	_	0.10		
		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
Φ	LCD.	Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
<u>e</u>	ESD	ESD	ESD	Soap & Water	0.16	0.12	0.10	NR	0.20	0.20	0.20
Polypropylene		Oil	-	_	_	NR	_	_	0.10		
ρω		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
6	THD	Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
ш	1110	Soap & Water	0.16	0.14	0.10	NR	0.20	0.20	0.20		
		Oil		_	-	NR	-	-	0.10		
		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
	HUV	Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
		Soap & Water	0.16	0.14	0.10	NR	0.20	0.20	0.20		
		Oil	- 0.20	-	-	NR	-	- 0.20	0.10		
		Dry	0.30	0.29	0.25	0.35	0.32	0.30	0.35		
	UHS, YPR	Water Soap & Water	0.19	0.21	0.19	NR	0.24	0.25	0.25		
		Oil	0.16	0.14	0.10	NR	0.19	0.20	0.20		
				0.24	0.19	NR 0.30			0.10		
		Dry Water	0.22	0.24 0.17	0.18 0.14	0.30 NR	0.22 0.18	0.22 0.18	0.28		
	WLT, BLT, LT	Soap & Water	0.17	0.17	0.14	NR	0.18	0.18	0.22		
		Oil	-		- 0.10	NR		- 0.13	0.10		
		Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.10		
		Water	0.22	0.24	0.14	NR	0.22	0.19	0.22		
a L	WLA, BLA	Soap & Water	0.17	0.17	0.10	NR	0.17	0.17	0.15		
уe		Oil	-	-	-	NR	-	-	0.10		
et		Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.28		
Polyethylene	015 5:-	Water	0.17	0.17	0.14	NR	0.18	0.18	0.22		
П	GLD, RLD	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
		Oil	_	_	-	NR	_	_	0.10		
		Dry	0.22	0.24	0.28	0.30	0.22	0.22	0.28		
	1107	Water	0.17	0.17	0.14	NR	0.18	0.18	0.22		
	LUV	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.10		
		Oil	-	_	_	NR	_	_	0.10		
	All RubberTop					0.07+++	0.05+++	0.05+++			
	Products	Dry	_	_	-	0.87***	0.85***	0.85***	_		

^{**} Friction of returnable bottles will depend on the quality of the glass, the amount of roughed up surface, etc.

NR denotes "not recommended"

Dash denotes "combination not tested"

^{***} It is not recommended to accumulate on RubberTop products; however, these values can be utilized when determining brake belt or "hold back" calculations.



FRICTION BETWEEN CHAIN AND WEARSTRIP (Fw)

	Chain N	/laterial		Wearstrip Material					
Base Material	Chain Material	Lubrication Condition	Steel and Stainless Steel	UHMWPE	Nylatron	ULF			
		Dry	0.22	0.18	0.18	0.12			
	PS	Water Soap & Water	0.20	0.16 0.14	0.16 0.14	0.11			
		Oil	0.10	0.14	0.14	0.10			
		Dry	0.22	0.18	0.18	0.12			
	PSX	Water	0.20	0.16	0.16	0.11			
	F3A	Soap & Water	0.15	0.14	0.14	0.11			
		Oil	0.10	0.10	0.10	0.10			
		Dry Water	0.22	0.18	0.18 0.16	0.14			
	HP, WHP	Soap & Water	0.20	0.18	0.14	0.12			
		Oil	0.10	0.10	0.10	0.10			
		Dry	0.25	0.20	0.20	0.16			
	LF, WLF, XL,	Water	0.20	0.18	0.18	0.14			
	XLA, XLG	Soap & Water Oil	0.15	0.15	0.15	0.13			
			0.10	0.10 0.25	0.10 0.25	0.10			
tal		Dry Water	0.30	0.23	0.23	0.20			
Acetal	D, WD, MLF	Soap & Water	0.15	0.15	0.15	0.15			
1		Oil	0.10	0.10	0.10	0.10			
		Dry	0.30	0.25	0.25	0.20			
	AS, HCAS,	Water	NR	NR	NR	NR			
	HC-ESD	Soap & Water Oil	NR NR	0.10	NR 0.10	0.10			
		Dry	0.30	0.25	0.10	0.20			
	WSA, GSA,	Water	0.23	0.21	0.21	0.18			
	BSA, GSA,	Soap & Water	0.15	0.15	0.15	0.15			
		Oil	0.10	0.10	0.10	0.10			
	WSM, BSM,	Dry	0.30	0.25	0.25	0.20			
	SMB, BRSM, BYSM, SYMB,	Water Soap & Water	0.23 0.15	0.21	0.21 0.15	0.18			
	SRMB	Oil	0.10	0.15	0.10	0.15			
		Dry	0.30	0.25	0.25	0.20			
	DUV	Water	0.23	0.21	0.21	0.18			
	Dov	Soap & Water	0.15	0.15	0.15	0.15			
		Oil	0.10	0.10	0.10	0.10			
		Dry Water	0.40	0.30	0.30 0.22	0.30			
	SS, SSC	Soap & Water	0.15	0.15	0.15	0.15			
		Oil	0.15	0.10	0.10	0.10			
		Dry	0.40	0.30	0.30	0.30			
Metal	S	Water	NR	NR	NR	0.22			
Σ	_	Soap & Water Oil	NR	NR 0.10	NR 0.10	0.15			
		-	0.10 0.50	0.10	0.10 0.40	0.10			
	000	Dry Water	0.40	0.40	0.30	0.40			
	SSB	Soap & Water	0.20	0.20	0.20	0.20			
		Oil	0.20	0.10	0.10	0.10			
		Dry	0.30	0.25	0.25	0.22			
	WX, FR-PA	Water Soap & Water	NR NR	NR NR	NR NR	NR NR			
		Oil	NR NR	NR	NR NR	NR			
		Dry	0.30	0.28	0.28	0.25			
	MD CTD	Water	NR	NR	NR	NR			
	MR, FTR	Soap & Water	NR	NR	NR	NR			
		Oil	0.10	0.10	0.10	0.10			
Ē		Dry	0.28	0.22 ND	0.22	0.20			
Nylon	BIR, BWR	Water Soap & Water	NR NR	NR NR	NR NR	NR NR			
		Oil	0.10	0.10	0.10	0.10			
		Dry	0.30	0.28	0.28	0.25			
	HS	Water	0.25	0.23	0.23	0.22			
	113	Soap & Water	0.18	0.18	0.18	0.18			
		Oil	0.10	0.10	0.10	0.10			
		Dry	0.30 NR	0.25 NR	0.25 NR	0.22 NR			
	FR-ESD	Water Soap & Water	NR NR	NR NR	NR NR	NR NR			
	ı	1-cap a vvale	1 111	1.417	1.417	1 411			

NR denotes "not recommended"

Dash denotes "combination not tested"

Contact Rexnord Application Engineering for more information 1.262.376.4800

MatTop Conveyor Chain Materials

> Friction
Between Chain
and Wearstrip
(Fw)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved

MatTop Chains

MatTop Conveyor Chain Materials

> Friction
Between Chain
and Wearstrip
(Fw)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved

//atTop Chains

FRICTION BETWEEN CHAIN AND WEARSTRIP (Fw)

	Chain M	/laterial	Wearstrip Material					
Base Material	Chain Material	Lubrication Condition	Steel and Stainless Steel	UHMWPE	Nylatron	ULF		
		Dry	0.30	0.25	0.25	0.22		
	GTC	Water	0.23	0.21	0.21	0.20		
	dic	Soap & Water	0.15	0.15	0.15	0.15		
		Oil	0.10	0.10	0.10	0.10		
ē		Dry	0.30	0.25	0.25	0.22		
Polyester	Р	Water	0.23	0.21	0.21	0.20		
oly		Soap & Water	0.15	0.15	0.15	0.15		
Δ.		Oil	0.10	0.10	0.10	0.10		
		Dry	0.30	0.25	0.25	0.22		
	FR	Water	0.23	0.21	0.21	0.20		
		Soap & Water	0.15	0.15	0.15	0.15		
7		Oil	0.10	0.10	0.10	0.10		
tec er		Dry	0.30	0.25	0.25	0.22		
ina ym	CR	Water	0.23	0.21	0.21	0.20		
Fluorinated Polymer		Soap & Water	0.15	0.15	0.15	0.15		
正一		Oil	0.10	0.10	0.10	0.10		
	HT, WHT,	Dry	0.35	0.30	0.30	0.26		
	RHT, KHT,	Water	0.30	0.25	0.25	0.22		
		Soap & Water Oil	0.25	0.20	0.20	0.19		
	XP, USP	-	0.10	0.10	0.10	0.10		
		Dry	0.35	0.30	0.30	0.26		
	WHA, BHA	Water Soap & Water Oil	0.25	0.25	0.25	0.22		
			0.20	0.20	0.20	0.19		
			0.10	0.10	0.10	0.10		
				Dry	0.35	0.30	0.30	0.26
e L	ESD	Water	0.25	0.25	0.25	0.22		
Polypropylene		Soap & Water Oil	0.20	0.20 0.10	0.20 0.10	0.19		
δ		_	0.10	0.10	0.30	0.10		
γ		Dry Water	0.35	0.30	0.30	0.28		
Ро	THD	Soap & Water	0.20	0.20	0.20	0.22		
		Oil	0.10	0.10	0.10	0.19		
			0.35	0.30	0.30	0.16		
		Dry Water	0.24	0.16	0.16	0.22		
	HUV	Soap & Water	0.20	0.20	0.20	0.19		
		Oil	0.10	0.10	0.10	0.10		
		Dry	0.35	0.30	0.30	0.26		
		Water	0.30	0.25	0.25	0.22		
	UHS, YPR	Soap & Water	0.25	0.20	0.20	0.19		
		Oil	0.10	0.10	0.10	0.10		
		Dry	0.28	0.23	0.23	0.21		
	\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\\	Water	0.22	0.20	0.20	0.19		
	WLT, BLT, LT	Soap & Water	0.15	0.15	0.15	0.14		
		Oil	0.10	0.10	0.10	0.10		
		Dry	0.28	0.23	0.23	0.21		
d)	WLA, BLA	Water	0.22	0.20	0.20	0.19		
eu	WLA, DLA	Soap & Water	0.15	0.15	0.15	0.14		
Polyethylene		Oil	0.10	0.10	0.10	0.10		
yet		Dry	0.28	0.23	0.23	0.21		
Pol	GLD, RLD	Water	0.22	0.20	0.20	0.19		
	SLD, KLD	Soap & Water	0.15	0.15	0.15	0.14		
		Oil	0.10	0.10	0.10	0.10		
		Dry	0.28	0.23	0.23	0.21		
	LUV	Water	0.22	0.20	0.20	0.19		
		Soap & Water	0.15	0.15	0.15	0.14		
		Oil	0.10	0.10	0.10	0.10		

NR denotes "not recommended"

Dash denotes "combination not tested"



SPROCKET AND IDLER WHEEL DESIGNATIONS

Rexnord has developed a variety of sprocket and idler materials for various and unique applications. Sprockets are available in plastic and metallic varieties.



Plastic

⇒ Acetal (N)

- Good corrosion- and wear-resistant properties
- ◆ One-piece sprocket
- Temperature Range: -40° to +180°F (-40° to +82°C)

⇒ Heat-Stabilized Nylon (HS)

- Stabilized nylon-based resin for environments that contain hot water spray rinser, sterilizer and pasteurizer applications
- Resists thermal degradation from 212°F (100°C) water spray
- ◆ Available in select one-piece styles only
- ◆ Temperature Range: -40° to +220°F (-40° to +104°C)

⇒ Glass-Reinforced Nylon (NS)

- Split sprocket design for ease in assembly and disassembly
- Excellent wear-resistant properties
- ◆ Temperature Range: -40° to +180°F (-40° to +82°C)

⇔ Chemical-Resistant

- Used in applications where chemical resistance is required (i.e. chlorine, phosphorous)
- PE: Temperature Range: -100° to +80°F (-73° to +27°C)
- CR: Temperature Range: +40° to +240°F (+4° to +116°C)

⇒ KU and KUS (Machined Plastic)

- KU (one piece) and KUS (split) do not designate material
- Sprockets machined in a variety of plastic materials
- Flush side for ease in cleaning
- Sprockets come in a wide variety of pitch diameters and bore size
- Can be nylon or UHMWPE

Metallic

⇒ Semi-Steel (Cast Iron)

- Used in non-corrosive, abrasive environments such as broken glass, metal chips
- ◆ One-piece sprocket
- Temperature Range: -40 to +350°F (-40° to +177°C)

⇒ SS (Stainless Steel)

- Used in corrosive, abrasive environments such as vegetable processing, snack foods
- ◆ Available in select chains only
- Available in split and one-piece designs
- ◆ Temperature Range: -100 to +800°F (-73° to +427°C)

MatTop Sprocket and Idler Wheel Designations

- > Plastic
- > Acetal (N)
- > Heat-Stabilized Nylon (HS)
- > Glass-Reinforced Nylon (NS)
- > Chemical-Resistant
- > KU and KUS (Machined Plastic)
- > Metallic
- > Semi-Steel (Cast Iron)
- > SS (Stainless Steel)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chain

MatTop Wearstrip Materials

- > Plastic
- > Acetal
- Nylatron (Nylon with Moly Filler)
- > Metal
- > Aluminum
- > Bronze and Brass
- > Stee
- > Stainless Steel
- > Specialty
- > Teflon
- Lubricant-Impregnated Wood

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

WEARSTRIP MATERIALS

Proper chain and wearstrip selection will provide optimum life. Since a function of the wearstrip is to lower friction and to reduce wear, it is recommended to give careful consideration when selecting the material.

The following general guidelines will help in selecting the proper material for your application.

>

Plastic

Acetal

⇒ Not recommended for use with acetal chains; it is best not to run identical plastics together

Nylatron (Nylon with Moly Filler)

- ⇒ Recommended for dry applications due to low wear and low friction
- ⇒ Especially suited for dry operation on thermoplastic side-flexing chain corners due to its high PV (Pressure-Velocity) rating
- ⇒ Typically not recommended in wet applications because it will absorb moisture and expand (if used in wet applications, allow clearance for expansion and movement of fasteners)
- ⇒ Typically only used for curves

>

Mota

Aluminum

⇒ NOT RECOMMENDED due to poor wear resistance

Bronze and Brass

- ⇒ Sometimes used with stainless steel chains
- ⇒ Typically used for non-sparking and antistatic conditions
- ⇒ For bronze recommended one-half hard temper (Rb 58)
- ⇒ For brass recommended one-half hard (Rb 70 Min) to full hard (Rb 82) temper

Steel

- ⇒ Recommended for non-corrosive, abrasive or high-temperature applications
- ⇒ Abrasive particles are less likely to imbed in metal wearstrips in comparison to plastic
- ⇒ A cold-rolled plain carbon steel is recommended
- ⇒ Heat treated grades hardened to 25 to 30 Rc is recommended

Stainless Steel

- ⇒ Recommended for corrosive, abrasive or high-temperature applications
- ⇒ Abrasive particles are less likely to imbed in metal wearstrips in comparison to plastic
- ⇒ A cold-rolled austenitic grade is recommended which offers the best corrosion-resistant properties
- ⇒ Recommended one-quarter hard temper (25 to 35 Rc)
- Softer annealed grades of austenitic are NOT RECOMMENDED. Adverse interaction between the chain material and the soft stainless steel might develop. When this happens, the resulting wear debris consists almost entirely of finely divided stainless steel particles, nearly black in color, similar to molydisulfide or graphite. The wear of the stainless steel might be rapid while the thermoplastic chain by contrast exhibits only slight wear.
- ⇒ Martensitic stainless steel can also be used when heat-treated (25 to 35 Rc); however, it is not as corrosion-resistant as austenitic
- ⇒ Hardness is more critical than grade for better wear resistance

Specialty

Teflon

⇒ Recommended only for very low-speed/low-load applications

Lubricant-Impregnated Wood

- ⇔ Commonly used in dry abrasive applications (i.e. glass, paper)
- ⇒ Not recommended in wet applications

WEARSTRIP MATERIALS

UHMWPE (Ultra High Molecular Weight Polyethylene)

- ⇒ Recommended for dry or wet applications on straight or side-flexing conveyors
- ⇒ Not recommended for abrasive conditions where particles may imbed in the surface and wear the chain
- ⇒ Provides lower coefficient of friction than metals
- ⇒ Not affected by moisture and more resistant to chemicals than nylon
- ⇒ UHMWPE materials can be supplied with various fillers:
 - Ceramic/glass
 - Conductive
 - Oil/wax

ULF (Ultra Low-Friction)

- ◆ UHMWPE with self-lubricating additive package
- Consistent low friction
- Suitable for high-speed conveying where minimal or no external lubrication is
- Improved PV (Pressure-Velocity) properties in comparison to other curve materials



Wearstrip surface finish is a critical aspect for overall chain life. Recommended wearstrip surface finish values are:

Metal: 32 μ -in Ra (0.8 μ -m Ra) Nylatron: 63 μ -in Ra (1.6 μ -m Ra) **UHMWPE:** 125 μ-in Ra (3.2 μ-m Ra)

MatTop Wearstrip **Materials**

- > UHMWPE (Ultra High Molecular Weight Polyethylene)
- > ULF™ (Ultra Low-Friction)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Lubrication

- General Recommendations
- > General Types of Lubricants
- > Dry Film Lubricants
- > Selective Lubrication

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

LUBRICATION

Lubrication is recommended whenever the application permits. It not only reduces friction, thereby reducing chain tension, but also greatly improves the wear life of the chain and wearstrips. Lubrication offers a constant cleaning effect of both the chain and wearstrip and can also reduce static.

General Recommendations

- ⇒ Lubrication should contact both the chain and wearstrip.
- When lubricating side-flexing MatTop chains, the lubricant must be applied at the entrance of the outside corner track.


General Types of Lubricants

- ⇒ Water Only utilize with corrosionresistant materials. Can be used as a general lubricant; however, it is not as effective as other types due to friction and chaincleaning properties.
- ⇒ Water soluble lubricants and soaps Only utilize with corrosion-resistant materials.
 These are excellent lubricants which also help clean the chain.
- Oil base lubricants These are vegetable, mineral oils or grease which offer high lubricity. Can be used with plastic or metal materials. Recommended to be used on all metal chains whenever practical. Food grade oils are available.

Dry Film Lubricants

⇒ A dry lubricant system has many of the same benefits of a run-dry conveyor with the added benefit of a lower coefficient of friction. A dry lubricant is applied by an automatic system with dosing units that put very little lubricant on select areas of the conveyors. The lubricant can be water- or oil-based with Teflon, silicone or solid microparticles. The preferred lubricant is an oil and water emulsion. The most critical part of the process is how the lubricant is applied on the chain. This is typically accomplished with the use of brushes, shoes or spray nozzles. The benefit of spray nozzles is the absence of contact with the chain, eliminating the possibility of trapped dirt or debris. The lubricant can also be applied to the inside of a curve for side-flexing conveyors. There are many dry lubricant products on the market which have been specifically formulated for either plastic or metal chains and container types.

While dry lubricants offer many advantages, conveyor cleanliness considerations should be taken into account since dry lubes do not provide a continuous cleaning process like traditional water and soap lubrication.

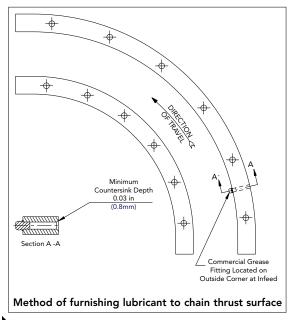

Selective Lubrication

⇒ In some applications, the presence of a lubricant cannot be tolerated. For these applications, it is recommended to utilize chains made of HP, PS or PSX acetal material with Nylatron corners, which offers the lowest coefficient of friction.



To eliminate or reduce lubrication, contact Rexnord Application Engineering to conduct a run-dry survey. 1.262.376.4800

For more information on lubrication types, compatibility, methods, contact a lubricant manufacturer.

ENVIRONMENTAL CONSIDERATIONS

Abrasive Applications

- ⇒ Applications with the presence of dirt, sand, glass or metal particles can lead to premature wear of the conveying chain and wearstrips.
- ⇒ Recommendations:
 - Utilize wearstrips and chains with a hard wear surface
 - If possible, use controls to minimize the amount of accumulation
 - ◆ The use of WX chain material and metal sprockets can extend wear life

Chemical Applications

Make sure any chemicals or cleaners used on conveyors are compatible with chain, wearstrip and sprockets. See table on page EM - MT - 15 for more detailed compatibility information.

Dry Applications

- ⇒ Considerations to be taken when running dry:
 - Product backline pressure
 - Conveyor cleanliness
 - Conveyor pulsation
 - Increased component wear

Extreme Temperature Applications

⇒ The recommended minimum and maximum operating temperatures for MatTop chain and wearstrips can vary due to the presence of moisture.

Wearstrip	Mini Tempe	mum erature	Maximum Temperature					
Material	D	ry	D	ry	Wet			
Widecilai	°F	°C	°F	°C	°F	°C		
Acetal	-40	-40	180	82	150	66		
UHWMPE/ULF	-100	-73	180	82	160	71		
Nylon	-40	-40	220	104	NR	NR		
Stainless Steel	-100	-73	800	427	250	121		
Steel	-40	-40	350	177	NR	NR		
Lubricated Impregnated Wood	-50	-46	160	71	160	71		

Metal Detector Applications

Depending on the sensitivity of the metal detector, different materials can be used.

Metal Detectable Applications

⇒ Special materials are available with nonferrous metal particulate that allow detection as they pass through a metal detector.

Impact-Loading Applications

⇒ Polyethylene (LT) and Tough Composite (TC) materials are ideal for impact-loading

applications. A solid bed should be utilized in impact-loading areas.

High-Speed Applications

⇒ In any high-speed application, the critical aspect of the conveyor is the corners. The concern with running the chain at high speeds is the PV (Pressure-Velocity) in the corners. If the PV limits are exceeded, the chain or corner track may become damaged due to the heat generated from the high speed and/or load. It is generally recommended to utilize Nylatron corner tracks in conjunction with PS or HP materials or selective lubrication for these applications. PSX chain with ULF corner tracks will provide the best PV capability and least energy consumption.

Long-Length Conveyors/Pulsation Applications

⇒ Pulsation or "slip stick" of chain results in a jerking chain motion which can occur in long, slow-speed and dry conveyors. Pulsation can create product stability problems in extreme cases. It can also result in premature chain elongation or the chain jumping drive sprocket teeth. As a general rule of thumb, it is recommended that conveyor lengths do not exceed 100 ft (30m) per drive, regardless of loading. Rexnord also recommends a 150° minimum wrap on the head sprocket. If necessary, this can be maintained with the use of a snubber roller. However, if an application exceeds 100 ft (30m), contact engineering for further assistance.

Static Environment Applications

⇒ Under certain conditions, thermoplastic can acquire a static nuisance charge. Static environments are classified as:



Class I: Static spark causes explosion — stainless steel chains are required.

Class II: Static spark is a nuisance charge — low charge will provide slight shock or possible circuit damage.

⇒ All applications utilizing thermoplastic anti-static materials (i.e. AS, ESD) must be approved by Rexnord Application Engineering prior to quoting.

Grounding is crucial for the system to reduce static charges.

UV Applications

⇒ When conveyor chains are exposed to direct UV (Ultraviolet) or sunlight, UV stabilized material should be utilized. MatTop Environmental Considerations

- > Abrasive
 Applications
- > Chemical Applications
- > Dry Applications
- > Extreme
 Temperature
 Applications
- > Metal Detector Applications
- > Metal Detectable Applications
- > Impact-Loading Applications
- > High-Speed Applications
- > Long-Length Conveyors/ Pulsation Applications
- Static Environment Applications
- > UV Applications

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chain

MatTop Environmental Considerations

> Material Characteristic Table

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved

NatTop Chains

MATERIAL CHARACTERISTIC TABLE

Material Characteristics	HP WHP	LF WLF	WLT BLT GLD	HT BHT HTB KHT RHT THD WHT	BWR	AS HCAS	ESD HC-ESD	нѕ	Р	CR	MR	DUV	HUV	LUV	FR	WSM BSM SMB	UHS	WHA BHA	WSA BSA SMB	WLA BLA	тс	PS PSX	WX BWX
Impact-Resistant			•		•					•	•			•			•			•	•		•
Wear-Resistant	•	•			•											•	•	•	•	•		•	•
Chemical- Resistant*			•	•					•	•								•		•			
Strength	•	•		•	•			•		•	•	•	•			•	•		•			•	•
Low Frictional Characteristics	•	•																				•	
Capability to Run Dry in Corners	•	•			•																	•	•
Suitability in Wet Environments	•	•	•	•				•	•	•		•	•	•	•	•	•	•	•	•	•	•	
Low- Temperature Capability (to 40°F)	•	•	•		•			•			•	•		•		•			•	•		•	•
High- Temperature Capabilities (to +180°F)	•	•		•	•	•	•	•	•	•	•	•	•			•		•	•			•	•
Ultra Violet Capabilities					•					•	•	•	•	•									•
Suitability for Class II (nuisance static)						•	•																
Suitability for Class I (explosive static)																							
Non-magnetic Qualities	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Flame Retardance										•					•								
Capability to Convey Hot Products (to +375°F)											•												•
FDA Approval	•	•	•	•					•	•						•		•	•	•		•	

						\\/LI \	_	White High-Temperature with
HP	=	High Performance	ESD	=	Electrostatic Dissipative	VVIIA	_	Antimicrobial Product Protection
						ВНА	=	Blue High-Temperature with
WHP	=	White High Performance	HS	=	Heat-Stabilized			Antimicrobial Product Protection
LF	=	Low-Friction	Р	_	Chemical-Resistant	WSA	=	White Special Material with
LI	_	Low-i fiction	'	_	Chemical-Resistant	DC A		Antimicrobial Product Protection
WLF	=	White Low-Friction	CR	=	Chemical-Resistant	BSA	=	Blue Special Material with Antimicrobial Product Protection
						GSA	=	Gray Special Material with Antimicrobial
BLT	=	Blue Low-Temperature	MR	=	Melt-Resistant			Product Protection
		re t =	DIN/		III. III. B. II. I	WLA	=	White Low-Temperature with
HT	=	High-Temperature	DUV	=	Ultraviolet-Resistant			Antimicrobial Product Protection
внт	_	Blue High-Temperature	HUV	_	High-Temperature Ultraviolet-Resistant	BLA	=	Blue Low-Temperature with
Dill		Blue Flight Temperature	1101		riigii-reiriperature offraviolet-Resistant			Antimicrobial Product Protection
HTB	=	Black High-Temperature	LUV	=	Low-Temperature Ultraviolet-Resistant	GLD	=	Gray Low-Temperature Metal Detectable
					•	RLD	=	Red Low-Temperature Metal
KHT	=	Khaki High-Temperature	FR	=	Flame-Retardant			Detectable
DLIT		Ded High Townson	VA/CNA		\\/\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \\ \	TUD		Total and Total and the Motol Data stable
RHT	=	Red High-Temperature	VVSIVI	=	White Special Material	THD	=	Tan Low-Temperature Metal Detectable
WHT	=	White High-Temperature	BSM	=	Black Special Material	TC	=	Tough Composite
••••		Time ingli iompolatare	20		Diagn oposiai materiai			. sug.: composite
BWR	=	Black Wear-Resistant	SMB	=	Blue Cut-Resistant Acetal	PS	=	Platinum Series
						1407		
AS	=	Anti-Static	UHS	=	Ultra High-Strength	WX	=	Abrasion-Resistant
						BWX	=	Black Abrasion-Resistant
						2.17		Diagna, ib. agion inconstant

^{*} See Corrosion Resistance Guide on Page EM - MT - 15 for more details.

Contact Rexnord Application Engineering for more information 1.262.376.4800



CORROSION RESISTANCE GUIDE

MatTop
Environmental
Considerations

> Corrosion Resistance

	Carbon Steel	Austenitic	Acetal	Nylon and Nylatron	Polyester	Chemically Resistant Fluorinated Polymer	Polypropylene	Polyethylene
Common or Chemical Name	s	SS	AS, HCAS, BSA, BSM, DUV, GSA, HP, LF, PS, PSX, SMB, WHP, WLF, WSA, WSM	BWR, HS, MR, WX, BWX	P, FR, TC	CR	BHA, BHT, ESD, HT, HTB, HUV, KHT, RHT, THD, UHS, WHA, WHT	BLA, BLT, GLD, LUV, RLD, UHMWPE, WLA, WLT
Acetic Acid (over 5%-up to 50%)	U	М	U	М	S	S	S	S
Acetone	U	S	S	S	S	U	S	S
Alcohol	S	S	S	S	S	S	S	S
Ammonia	М	S	U	S	S	S	S	S
Beer	S	S	S	S	S	S	S	S
Beverages-Soft Drinks	S	S	S	S	S	S	S	S
Benzene	S	S	S	S	S	S	М	М
Brine (pickle)	U	М	М	М	S	S	S	S
Carbon Tetrachloride	М	М	S	S	S	U	М	М
Chlorine	U	U	U	U	S	S	S	S
Citric Acid	U	S	М	М	S	S	S	S
Cyclohexane	_	-	S	_	-	S	U	U
Ethyl Chloride	_	S	S	S	S	S	М	М
Formaldehyde	S	S	S	S	S	М	S	S
Formic Acid	U	U	U	U	S	S	S	S
Fruit Juices	U	S	S	S	S	S	S	S
Gasoline	S	S	S	S	S	S	М	М
Hexane	_	S	S	_	S	S	S	U
Hydrochloric Acid (up to 2%)	U	U	U	U	S	S	S	S
Hydrochloric Acid (up to 37%)	U	U	U	U	S	S	М	S
Hydrogen Peroxide	U	S	U	U	S	S	М	S
lodine	U	U	U	U	U	М	М	М
Isopropanol (isopropyl alcohol)	S	S	S	S	S	S	S	S
Lactic Acid	U	S	S	М	S	М	S	S
Methylene Chloride	_	S	S	_	U	М	S	U
Milk	S	S	S	S	S	S	S	S
Muriatic Acid	U	U	U	U	S	S	М	S
Nitric Acid (low concentrations)	U	S	U	U	S	S	S	S
Oil (vegetable or mineral)	S	S	S	S	S	М	S	S
Ozonated Water	S	S	М	U	S	S	М	S
Paraffin	S	S	S	S	S	S	S	S
Phosphoric Acid (up to 10%)	U	S	U	U	S	S	S	S
Soap and Water	M	S	S	S	S	S	S	S
Sodium Chloride	U	M	S	S	S	S	S	S
Sodium Hydroxide (up to 25%)	U	S	S	U	U	M	S	S
Sodium Hypochlorite (Bleach)	U	U	U	U	S	S	S	S
Stearic Acid	U	S	M	S	S	S	S	S
Sulphuric Acid (up to 40%)	U	U	U	U	S	S	S	S
Toluene (Toluol)	S	S	M	S	S	M	S	U
Turpentine	-	S	S	S	S	S	S	U
Vegetable Juices	М	S	S	S	S	S	S	S
Vinegar	U	S	S	S	S	M	S	S
Water (fresh)	U	S	S	S	S	S	S	S
Whiskey	S	S	S	S	S	S	S	S
Wine	S	S	S	S	S	S	S	S
vviile	S	S	S	S	S	S	U	M

Dash = Not Tested

M = Marginal

U = Unsatisfactory

S = Satisfactory

•

General Rules of Thumb:

With acetal products, do not use cleaning or lubricating agents with a pH below 4 or above 10. This table is based on data available by various material suppliers.

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

MatTop	
Notes	

5 5 5 8	
5559	NOTES

> Notes

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTon Chains

5555		

Surface Styles

MatTop Chain Surface Styles



Solid Top

- Not necessarily 0% open area
- \Rightarrow General use



Perforated Top

- ⇒ Used where air or water flow is required
- ⇒ Open area from 6 to 30%



Open Area

- ⇒ Used where the maximum amount of air or water flow is required
- ⇒ Open area larger than 30%



Raised Rib

- Used where very smooth head transfers are required
- Utilized with transfer combs



Textured Top

Used to reduce products from sticking to the chain



LBP

 □ Low backline pressure used to minimize backline pressure between products



Transverse LBP

Dow backline pressure used to transfer products at 90°



Rubbertop/Supergrip

⇒ High friction rubber surface used on incline/ decline conveyors, brake belts and metering belts



Safety Top

⇒ Provides a slip-resistant surface where people walk on the chain Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved

MatTop Chain

> Pin Retention Styles

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop CHAIN STYLES

Pin Retension Styles



Head

retention

⇒ Soldering iron

required

⇒ Pins are not reusable

 ⇒ See table below for MatTop chain pin

soldering tips





Plug-Blind



- ⇒ No special tools required
- ⇒ Pin access on one side of the chain for plug-blind design
- ⇒ Pin access on both sides of the chain for plug-plug design



Plug-TAB

- ⇒ No special tools required
- ⇒ Plug access from top surface on both sides of chain
- \Rightarrow Pin access on both sides of chain



Plug-No TAB

- required
- ⇒ Plug access from top surface on both sides of chain
- ⇒ Pin access on both sides of chain



Plugless

- ⇒ Plugless pin design
- \Rightarrow User-friendly installation and maintenance

MatTop Pin Soldering Tips							
Part Number	Description	Chain Series					
114-2047-1	Solder Tip 3/16 in	5935, 5936, 6938					
114-2128-1	Solder Tip 3/8 in	4705, 4706, 4707, 5966, 5996					





Offset Pin Hole

- ⇒ No plugs
- required
- ⇒ Pin access on both sides of the chain

TwistLock Pin Retention

- \Rightarrow Plugs are integral part of chain
- ⇒ No special tools required
- ⇒ Pin access on both sides of chain
- ⇒ Patented design

MatTop CHAIN STYLES


MatTop Chain Styles

Disassembly (7960 Series) Assembly (7960 Series)

>

Disassembly (7960 Series)



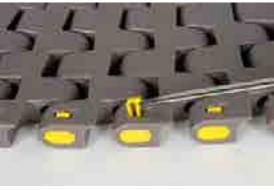


⇒ Using a narrow flat-bladed screwdriver, remove retention stake by lifting up on backside of the tab.





⇒ With retention stake removed, push wear block out of chain link from back side (as shown).



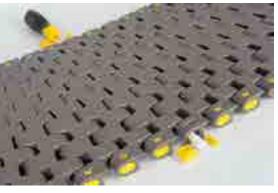

⇒ With both retention stakes and wear blocks removed, push connecting rod out of chain assembly from either side.

>

Assembly (7960 Series)

All parts are easily reassembled without any tools. Assembly and disassembly are the same for both 7960NT and 7960ST. 7960NT shown.

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chain

MatTop Chain Styles

- > Disassembly (7956 Series)
- > Assembly (7956 Series)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

NatTop Chains

MatTop CHAIN STYLES

Disassembly (7956 Series)

- ⇒ Rotate TwistLock counterclockwise
- ⇒ Insert thread-puller into pin
- ⇒ Remove pin
- ⇒ Remove TwistLock plug
- ⇒ Separate attachment from chain link by hand or with flat-bladed screwdriver



Assembly (7956 Series)


⇒ Reassemble in reverse order

MatTop CHAIN STYLES

MatTop Chain Styles


>

Assembled to Width

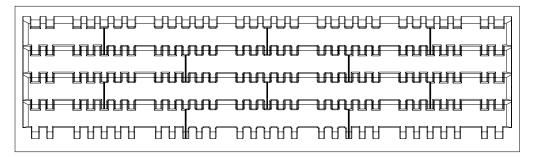

- ⇒ Width determined by customer order
- ⇒ Rexnord stocks families of modules
- ⇒ Refer to table on page EM MT 83 for specific widths
- ⇒ Bricked construction
- ⇒ Assembled to customer order
- i

Standard width chains are recommended. For more width increments, "Cut to width" chains are also available (See page EM - MT - 83)

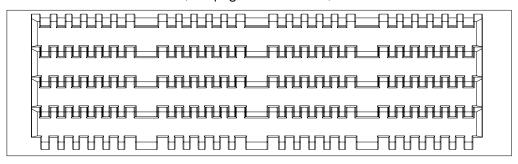

>

Molded to Width (MTW)

- ⇒ Available in standard MatTop chain widths (i.e. 3-1/4 in, 84mm, 4-1/2 in, 6 in, 7-1/2 in, 12 in, 15 in)
- ⇒ Refer to table on page EM MT 83 for specific widths
- ⇒ Available with or without Positrack tracking guides in some chain styles
- ⇒ Stocked in 10 ft lengths

> Assembled to Width

> Molded to Width (MTW)

Rexnord, Table Top, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

Configuration

> Side-Flexing
Configuration

> Incline/Decline

Straight-Running

> Incline/Decline Configuration

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains 📑


CONVEYOR DESIGN RECOMMENDATIONS

Straight-Running Configuration

⇒ A long conveyor with a single drive is the simplest and most ideal design. Sometimes several short conveyors are required due to application constraints.


Side-Flexing Configuration

- ⇒ Because a straight conveyor is not always possible due to flow processes or obstructions in the plant, the designer can incorporate a side-flexing conveyor, which traverses one or more curves.
- ⇒ When conveying products 90°, the following methods can be utilized:
 - DTS transfer (DynamicTransfer System)
 - Side-flexing TableTop or MatTop chain
 - Deadplate transfer
 - ◆ LBP chain with transverse rollers

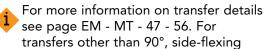


chains must be utilized.

- ⇒ When planning a side-flexing conveyor layout, the designer must consider the following factors that affect chain life:
 - Minimize the number of corners and the angle of each corner whenever possible
 - Selective lubrication in the corners should be considered for certain applications, which will prevent excessive noise and premature wear to the chain or corner
 - When conveying from Point A to Point B, design the conveyor so that the drive is positioned furthest from the last corner (see drawing), resulting in lower chain tension and maximizing chain life

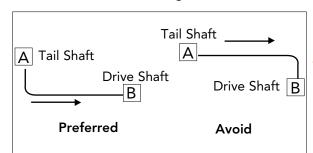


□ Consideration should be given to the design of the curves within a conveyor such that if the chain has little to no "allowable twist", the curve should be designed to NOT change elevation while simultaneously side-flexing through the curve. Doing so on chains that do not twist will bind the chain and lead to chain failure. Side-flexing MatTop chains have negligible "allowable twist" hence curves should be designed in a horizontal plane and any changes in elevation should be done in the straight sections of the conveyor.

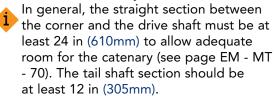

- ⇒ When conveying products 90°, a single side-flexing conveyor offers the following advantages over two separate straight conveyors that have transfer plates between them:
 - Eliminates deadplate transfers or turntables, preventing the product from slipping or stalling
 - Minimizes tipping and jamming
 - Decreases noise
 - Reduces the cost of controls and maintenance by only requiring one drive motor

Incline/Decline Configuration

- ⇒ General rules of thumb when designing incline or decline conveyors are as follows:
 - Chain should not be pushed
 - Catenary should be located after the drive shaft
 - Drive shaft should be located at the top of the conveyor for incline conveyors
 - Chains that use pushers, sideguards and high friction inserts need special requirements in the return section (see pages EM - MT - 63 - 68 for examples)

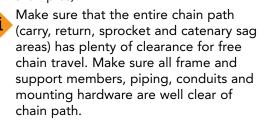

SPECIAL APPLICATION CONSIDERATIONS

Pasteurizers/Coolers/Warmers

- ⇒ Things to be taken into consideration include:
- ⇒ Thermal expansion (see page EM MT 24 for details)
 - Length and width
 - Square or hex shafting
- ⇒ Water flow
- ⇒ Tracking
- ⇒ Pasteurizer design manuals are available for more details utilizing 5997 or 9608 chains



If double deck systems are utilized, careful consideration should be taken to ensure adequate clearance for product conveyability on the lower deck.

Vacuum Conveyors

- ⇒ Things to be taken into consideration include:
 - ◆ Percentage of open area required
 - ◆ Hole patterns required
 - Footprint of product conveyed
 - * Standard vacuum chains are 5935, 4705 and 8505
 - Other series available with drilled holes on a made-to-order (MTO) basis

MatTop Conveyor Design

- > Pasteurizers/
- > Vacuum Conveyors

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- Guide Clearance and Thermal Expansion, Straight-Running, Assembled to Width MatTop Chains
- > Standard Conveyor Guide Clearance Calculation of GC at Elevated Temperatures

CONVEYOR DESIGN RECOMMENDATIONS

Guide Clearance and Thermal Expansion, Straight-Running, Assembled to Width MatTop Chains

- ⇒ Room Temperature Applications:
 - Guide Clearance (GC) = Chain Width + A
- ⇒ Elevated Temperature Applications (pasteurizers, warmers, coolers, etc.):
 - Actual width increases by an amount that is dependent upon temperature, chain width and the plastic coefficient of thermal expansion

Coefficients of Thermal Expansion								
Material	mm / m / °C							
Acetal	0.0006	0.09						
Polyethylene	0.0015	0.23						
Polypropylene	0.0010	0.15						
Nylon	0.0005	0.07						

	Standard Conveyor Guide Clearance									
Dimension A Conveyor Length										
inches	inches mm feet m									
0.38	9.7	Up to 30	Up to 9							
0.63	16.0	30 to 50	9 to 15							
0.75	19.1	Over 50	Over 15							

Standard Conveyor Guide Clearance Calculation of GC at Elevated Temperatures

Example:

⇒ Assume a 12 ft (3.6m) wide, 45 ft (13.5m) long pasteurizer operating at an average temperature of 190°F (88°C) and utilizing a polypropylene chain

The increase in the width (ΔW) due to the temperature of 190°F (88°C) can be found as shown:

English:

 $\Delta W = W$ (chain width) x CTE x ΔT

 $\Delta W = 12 \text{ ft } \times 0.0010 \text{ in/ft/}^{\circ}\text{F } \times (190-70^{\circ}\text{F})$

 $\Delta W = 1.44 \text{ in}$

Metric:

 $\Delta W = W$ (chain width) x CTE x ΔT

 $\Delta W = 3.6 \text{m x } 0.15 \text{mm/m/}^{\circ}\text{C x } (88-21 ^{\circ}\text{C})$

 $\Delta W = 36.6$ mm

- ⇒ Allow for standard clearance, "A", based upon conveyor length
- ⇒ For a 45 ft (13.5m) long conveyor, A = 0.63 in (16.0mm) (from the Standard Conveyor Guide Clearance Table)
- ⇒ The total GC for this example is:
- GC = Chain width at room temperature + expansion due to temperature + standard clearance (A)

English:

GC = 144 in + 1.44 in + 0.63 in = 146.07 in


Metric:

GC = 3658mm + 36.6mm + 16.0mm= 3710.6mm

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

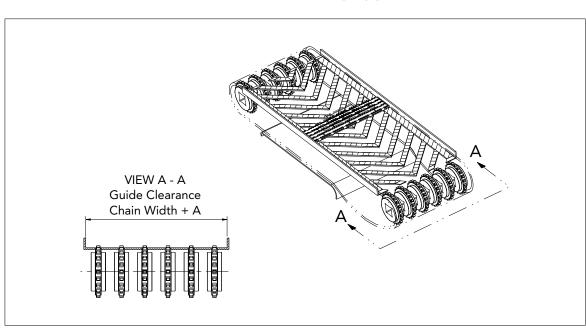

MatTop Conveyor Design

Carry and Return Ways

⇒ Guide clearance is critical for both straight and side-flexing chains, especially in extreme-temperature applications (see page EM - MT - 24 for details). For guide clearance dimensions of side-flexing and Molded to Width (MTW) chains containing Positrack tracking guides, see pages EM - MT - 31 - 34, EM - MT - 42 - 44, tables on page EM - MT - 28, or the Product Catalog (8rxCAT-en).

Offset rail, serpentine and chevron patterns are recommended to maximize chain life because they provide uniform wear across the full width of the chain.


⇒ MatTop chains can be supported in a variety of arrangements



Allow for thermal expansion of chain (see page EM - MT - 24) and wearstrips (see a page EM - MT - 60)

Full-Width Sliding Carry or Return Ways

- ⇒ Continuous sheets extend the full width of the chain and almost the entire length between the tail and drive sprockets
- ⇒ Plates or sheets may be perforated with slots or holes to allow for drainage and the passage of foreign materials
- ⇒ Not recommended as a return support for wet applications, since a "suction" can be created between the chain and bed
- ⇒ Recommended in areas of high impact loading

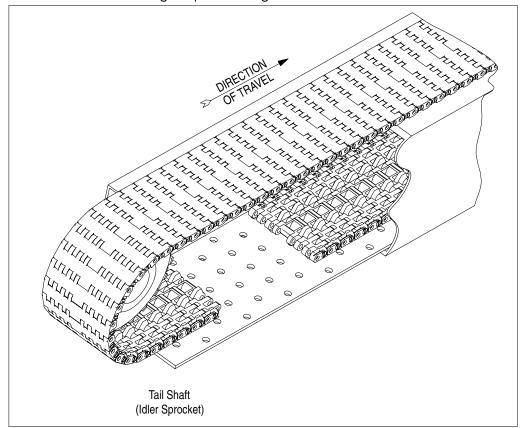

> Carry and Return Ways

> Full-Width
Sliding Carry
or Return
Ways

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > Carry and Return Ways
- Offset Rail Style and Serpentine Carry or Return Ways

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


MatTop Chains


CONVEYOR DESIGN RECOMMENDATIONS



Carry and Return Ways

- Offset Rail Style and Serpentine Carry or Return Ways
- ⇒ The chain is fully supported
- ⇒ Allows for drainage and the passage of foreign materials
- Offset rail, serpentine and chevron patterns are recommended to maximize chain life because they provide uniform wear across the full width of the chain

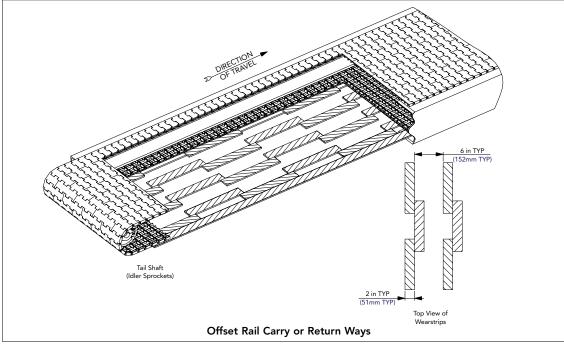

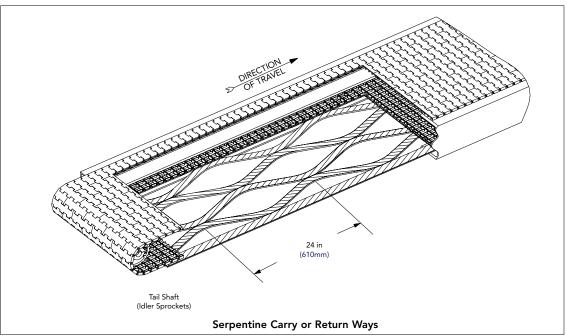




MatTop Conveyor Design

>

Carry and Return Ways

Chevron Carry or Return Ways

- ⇒ The chain is fully supported
- Allows for drainage and the passage of foreign materials
- ⇒ Offset rail, serpentine and chevron patterns are recommended to maximize chain life because they provide uniform wear across the full width of the chain

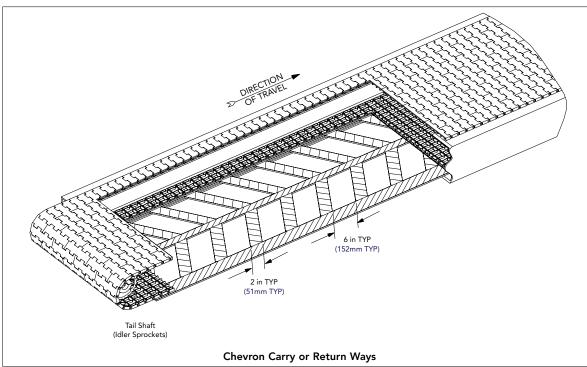

Other Recommendations

Chains with Attachments

- ⇒ For chains with attachments, see pages EM MT 2 68
- ⇒ Offset can only be used for carry way and return

LBP Chains

- ⇒ Offset rails, serpentine, and chevron should only be used in the carry ways
- ⇒ For LBP 7703 chain, the chain can be returned with wearstrips on only the outer edges of the chain, but for widths greater than 24", a center support may be needed, or use of S.S. pins to "stiffen" the chain
- ⇒ For other LBP chains, wearstrips can be positioned between the rollers

> Carry and Return Ways

- > Chevron Carry or Return Ways
- > Other Recommendations
- > Chains with Attachments
- > LBP Chains

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- Conveyor
- > Guide Clearance
- > Positrack
- > Molded to Width MatTop Chains with Positrack Tracking
- Assembled to Width MatTop Chains with Positrack Tracking Guides
- TAB Style (5935/5936 and 8505/8506)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

CONVEYOR DESIGN RECOMMENDATIONS

Guide Clearance

⇒ Guide clearance is critical for both straight and side-flexing chains. For guide clearance dimensions of Positrack chains, see tables below or Product Catalog (8rxCAT-en). For guide clearance of wide, assembled to width MatTop chains at elevated temperatures, see page EM - MT - 24. For guide clearance of 7956 and 7960 series, see pages EM - MT - 31 - 34 (7956B, GT, NT and TAB) and EM - MT - 42 - 44 (7963NT/7966NT and 7963ST/7966ST).

Positrack

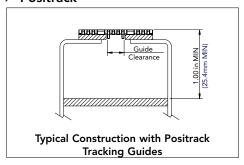

Molded to Width MatTop Chains with Positrack Tracking Guides

⇒ MatTop Chains with Positrack tracking guides are usually guided in a manner similar to TableTop Chains


Chain Guide Clearance										
Chain Sty	/le	1505 DTS PT	5705 (MTW) PT 5706 (MTW) PT 5705 DTS PT	7705 (MTW) PT 7706 (MTW) PT 7705 (MTW) PT 7705 DTS PT 7705 DTS-R PT	8505 (MTW) PT 8506 (MTW) PT 8505 DTS PT	1000 FTMTW DP 1000 FGMTW DP 1000 FT FreeFlow 1000 FG FreeFlow				
Guide	Guide in		1.75	1.75	1.75	1.75				
Clearance mm		54.1	44.5	44.5	44.5	44.5				


Assembled to Width MatTop Chains with Positrack Tracking Guides

⇒ For further recommendations, see the Product Catalog (8rxCAT-en)

	Chain Guide Clearance									
Chain Sty	/le	7705 PT End Modules	8506 and 8506 PT End Modules	1000 FT DP, 1000 FGDP						
Guide	in	1.75	1.75	1.75						
Clearance	mm	44.5	44.5	44.5						

TAB Style (5935/5936 and 8505/8506)

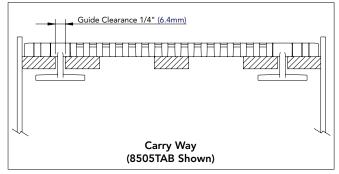

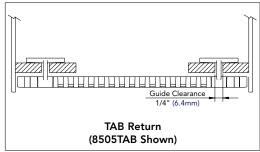

- ⇒ TABs hold chain down in incline or decline applications
- □ TABs hold chain in place for vacuum applications

MatTop Conveyor Design

Guide Clearance

Side-Flexing — TAB, GT and Bearing Designs (7956 Chain Series)
— ST (Sidetab) (7960 Chain Series)


- ⇒ Positive retention
- ⇒ For further design recommendations, see the 7956 design manual (8rx7956dm-en) , or the 7960 Design Manual (FT3-0017960)

Side-Flexing — No TAB Design (7956, 7963 and 7966 Chain Series)

- ⇒ No hold down in the straight sections
- ⇒ Chain can be lifted in the straight section for ease in cleaning and maintenance
- ⇒ For further design recommendations, see the 7956 design manual (8rx7956dm-en) or the 7960 series design manual (FT3-0017960)

Side-Flexing — Positrack Design (7526 Chain Series)

⇒ For further recommendations, see the 7526 section in the Product Catalog (8rxCAT-en) and 7526 Design Manual (8rx7526dm-en)

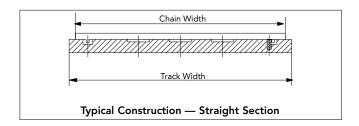

> Guide Clearance

- > Side-Flexing
 TAB, GT and
 Bearing Designs
 (7956 Chain Series)
 ST (Sidetab)
 (7960 Chain Series)
- > Side-Flexing — No TAB Design (7956, 7963, and 7966 Chain Series)
- Side-FlexingPositrack Design(7526 Chain Series)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > Chain Selection
- > Basic Chain
 Dimensions

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


MatTop Chains

CONVEYOR DESIGN RECOMMENDATIONS


Chain Selection

Basic Chain Dimensions


79	7956B, 7956GT, 7956NT and 7956TAB MatTop Chain Minimum Side-Flex Radii											
Standard	l Width (K)	Side-Flex Rad	lius Inside (IR)	Chain Cente	r Radius (CR)	Side-Flex Radi	Side-Flex Radius Outside (OR)					
inch	mm	inch	mm	inch	mm	inch	mm					
6	152	12	305	15	381	18	457					
12	305	24	610	30	762	36	914					
15	381	30	762	37.5	953	45	1143					
18	457	36	914	45	1143	54	1372					
24	610	48	1219	60	1524	72	1829					
30	762	60	1524	75	1905	90	2286					

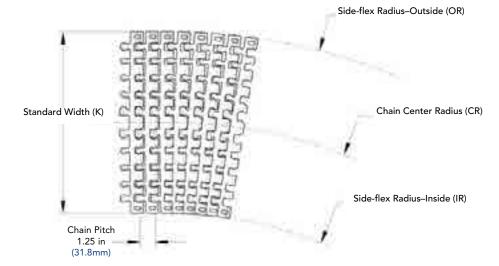


Chain Selection

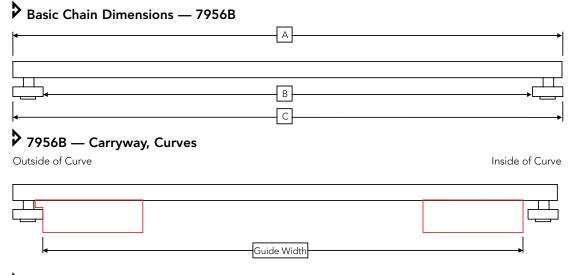

7956B — Carryway, Straights

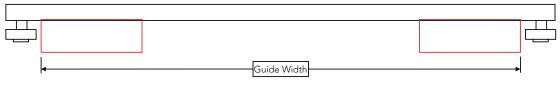

7956B — Returnway, Straights and Curves

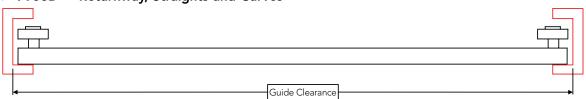

							7956	В						
Chain Width "A"				Carryway Wearstrip Quantities and Locations			Width Dutside Bearing Bearings "B" Width "C"		Recommended Guide Width, Carryway, Straights and Curves		Recommended Guide Clearance, Returnway, Straights and curves			
Non	ninal	Act	:ual	Inside	Middle	Outside	inch	mm	inch	mm	inch	mm	inch	mm
inch	mm	inch	mm											
6	152	6.00	152.4	1	0	0	4.41	112.0	6.16	156.5	4.22	107.2	6.34	161.0
12	305	11.98	304.3	1	1	1	10.35	262.9	12.10	307.3	10.16	258.1	12.28	311.9
15	381	14.92	379.0	1	1	1	13.22	335.8	14.97	380.2	13.03	331.0	15.16	385.1
18	457	17.99	456.9	1	2	1	16.27	413.3	18.02	457.7	16.09	408.7	18.22	462.8
24	610	23.97	608.8	1	3	1	22.26	565.4	24.01	609.9	22.06	560.3	24.19	614.4
30	762	29.96	761.0	1	3	1	28.36	720.3	30.11	764.8	28.16	715.3	30.28	769.1

MatTop Conveyor Design


- > Chain Selection
- Basic Chain
 Dimensions 7956B
- > 7956B Carryway,
- 7956B Carryway, Straights
- 7956B Returnway, Straights and Curves

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

- > Chain Selection
- Basic ChainDimensions —7956GT
- > 7956GT Carryway, Curves
- > 7956GT Carryway, Straights
- > 7956GT Returnway, Straights and Curves

CONVEYOR DESIGN RECOMMENDATIONS

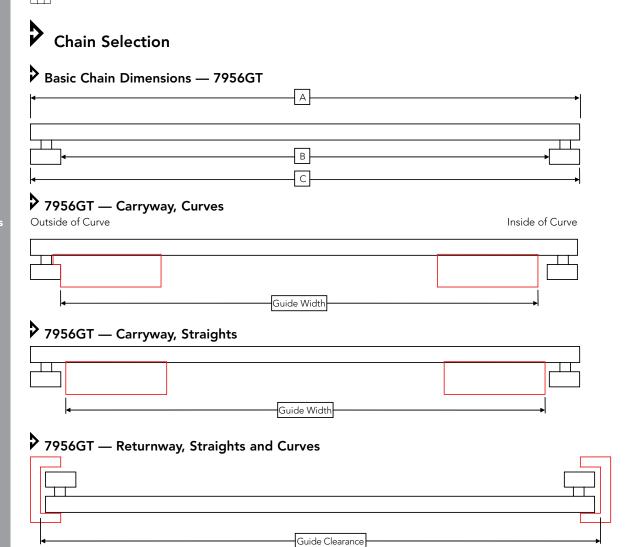

Rexnord, TableTop,
MatTop, HP, UHS, PS,
Platinum Series, DTS,
PosiClean, TwistLock,
Positrack, RexFlex and
DynamicTransfer
System are trademarks
of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

	7956GT													
Chain Width "A"			Carryway Wearstrip Quantities and Locations			Width Dutside GT TAB width TABs "B" "C"		Recommended Guide Width, Carryway, Straights and Curves		Recommended Guide Clearance, Returnway, Straights and Curves				
Non	Nominal Actual		ual	Inside	Middle	Outside	inch	mm	inch	mm	inch	mm	inch	mm
inch	mm	inch	mm											
6	152	5.99	152.1	1	0	0	4.53	115.1	6.04	153.4	4.34	110.2	6.22	158.0
12	305	11.99	304.5	1	1	1	10.48	266.2	11.99	304.5	10.28	261.1	12.19	309.6
15	381	14.92	379.0	1	1	1	13.32	338.3	14.83	376.7	13.13	333.5	15.13	384.3
18	457	18.00	457.2	1	2	1	16.39	416.3	17.90	454.7	16.19	411.2	18.19	462.0
24	610	23.97	608.8	1	3	1	22.36	567.9	23.86	606.0	22.16	562.9	24.16	613.7
30	762	29.96	761.0	1	3	1	28.49	723.6	30.00	762.0	28.28	718.3	30.19	766.8



Chain Selection Basic Chain Dimensions — 7956NT A 7956NT — Carryway and Returnway, Straights and Curves

Guide Clearance

	7956NT											
	Chain W	idth "A'	,		yway Wea ities and L		Recommended Guide Clearance, Carryway and Returnway, Straights and Curves					
Non	ninal	Act	tual	Inside	Middle	Outside	inch	mm				
inch	mm	inch	mm									
6	152	5.99	152.1	1	0	0	6.19	157.2				
12	305	11.99	304.5	1	1	1	12.16	308.9				
15	381	14.92	379.0	1	1	1	15.09	383.3				
18	457	17.99	456.9	1	2	1	18.19	462.0				
24	610	23.97	608.8	1	3	1	24.16	613.7				
30	762	29.96	761.0	1	3	1	30.16	766.1				

MatTop Conveyor Design

- > Chain Selection
- > Basic Chain Dimensions — 7956NT
- 7956NT Carryway and Returnway, Straights and Curves

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > Chain Selection
- Basic ChainDimensions —7956TAB
- > 7956TAB Carryway, Straights and Curves
- > 7956GT Returnway, Straights and Curves


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

CONVEYOR DESIGN RECOMMENDATIONS

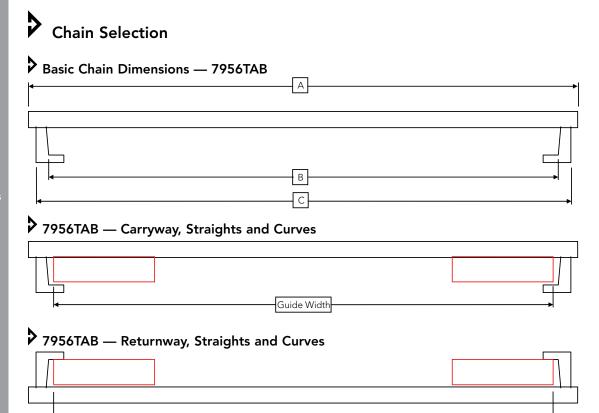

	7956TAB													
	Chain W	idth "A'	· ·	Carryway Wearstrip Quantities and Locations			Width between TABs "B"		Outside TAB Width "C"		Recommended Guide Width, Carryway and Returnway, Straights and Curves			
Non	Nominal Actual		tual	Inside	Middle	Outside	inch	mm	inch	mm	inch	mm		
inch	mm	inch	mm											
6	152	5.99	152.1	1	0	0	4.90	124.5	5.58	141.8	4.72	119.9		
12	305	11.98	304.3	1	1	1	10.85	275.6	11.53	292.9	10.66	270.8		
15	381	14.92	379.0	1	1	1	13.69	347.7	14.37	365.0	13.50	342.9		
18	457	18.00	457.2	1	2	1	16.76	425.7	17.44	443.0	16.56	420.6		
24	610	23.98	609.1	1	3	1	22.74	577.6	23.42	594.9	22.53	572.3		
30	762	29.97	761.2	1	3	1	28.81	731.8	29.49	749.1	28.63	727.2		

Guide Width

MatTop Conveyor Design

>


Carry Section Wearstrips

Straight-Running Styles, 7956B, GT, NT and TAB

7956B, 7956GT, 7956NT and 7956TAB MatTop chain styles must be retained in the straights and curves with either a Rexnord Edge Guide (shown below) or an edge guide manufactured as shown below.

⇒ Extruded 7956 Straight Guide

- ◆ For use with 7956B and 7956GT chains
- Extruded anodized aluminum rail for strength
- Extruded UHMWPE strips for improved friction
- ◆ Mounts with standard carriage bolts
- ◆ Designed for smooth and quiet operation
- ◆ Sold in 10-feet (3.05m) sections

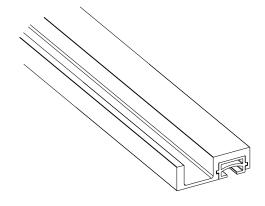


⇒ Extruded 7956 Curve Guide/Wearstrip

- For use with 7956B and 7956GT MatTop chains
- Extruded anodized aluminum rail for strength
- Extruded UHMWPE strips for improved wear
- Mounts with standard carriage bolts
- Designed for smooth and quiet operation
- Sold in 10-feet (3.05m) sections

Curve guides are bent to match specific radius. Contact Application Engineering for information needed to order curve sections.


⇒ 7956TAB Edge Guide

 7956TAB MatTop chain must be retained in straights and corners under the wearstrip as shown

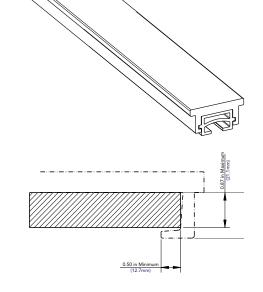

⇒ 7956NT (No TAB) Edge Guide

 7956NT chain straights must be retained in the straight sections using the wearstrip as shown

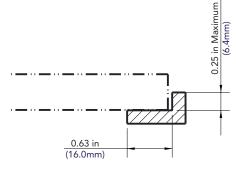

Straight-Running Styles, 7956B, GT, NT and TAB

> Carry Section

Wearstrips

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

Contact Rexnord Application Engineering for more information 1.262.376.4800

- > Carry Section
 Wearstrips
- > Corner Wearstrip Style Options, 7956B, GT, NT and TAB

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains


CONVEYOR DESIGN RECOMMENDATIONS

Carry Section Wearstrips

Corner Wearstrip Style Options, 7956B, GT, NT and TAB


⇒ 7956 B (Bearing) or 7956 GT (Guide TAB) Edge Guide

 7956B and 7956GT MatTop chain styles must be retained in the corner with the edge guide as shown. The 7956B or 7956GT attachment is retained under the lip during operation.

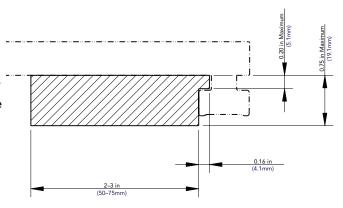


⇒ 7956 TAB Edge Guide

 7956TAB MatTop chain must be retained in straights and corners under the wearstrip as shown.

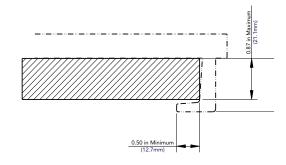

⇒ 7956NT (No TAB) or C (Channel) Edge Guide

◆ 7956NT MatTop chain must be retained in the corner with a pair of edge guides as shown.

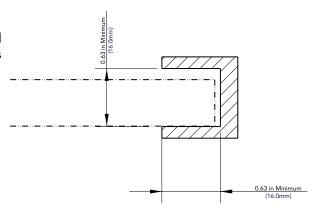


MatTop Conveyor Design

Carry Section Wearstrips

Edge Guide Dimensions in Straights, 7956B, GT, NT and TAB


7956 MatTop Series chains must be retained in the straight as shown if the section is more than 5 feet (1.5m) long. Chain guides are needed to stop the chain from moving side-to-side. If the distance in the straight is less than 5 feet (1.5m), the tension in the chain will keep it straight.

⇒ B and GT Version (option 1)

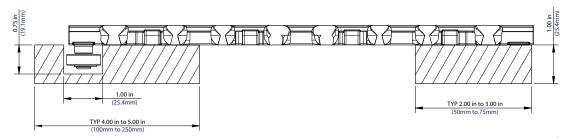


Typical carry configuration—straight (MORE than 5.0 feet [1.5m])

⇒ B and GT Version (option 2)

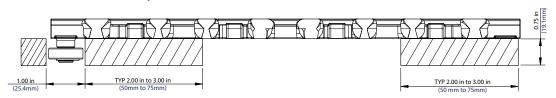


Typical carry configuration—straight (MORE than 5.0 feet [1.5m])

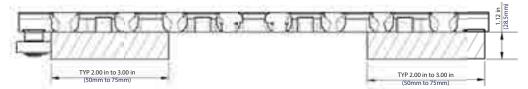


Typical carry configuration—straight (LESS than 5.0 feet [1.5m])

⇒ NT Version

◆ 7956NT MatTop chain must be retained with edge guide through the entire straight as shown

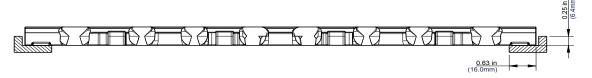

⇒ TAB Version

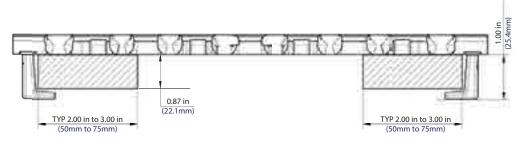

Typical carry configuration

> Carry Section Wearstrips

> Edge Guide Dimensions in Straights, 7956B, GT, NT and TAB

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > Return Section Wearstrips
- Extruded Rexnord 7956 Return Guide
- > Return Shoe Assembly

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains 📑


CONVEYOR DESIGN RECOMMENDATIONS

>

Return Section Wearstrips


Extruded Rexnord 7956 Return Guide

- ⇒ For use with all MatTop chains
- ⇒ Extruded anodized aluminum rail for strength
- ⇒ Extruded UHMWPE strips for improved wear
- ⇒ Mounts with standard carriage bolts
- ⇒ Designed for smooth and quiet operation
- ⇒ Sold in 10-feet (3.05m) sections

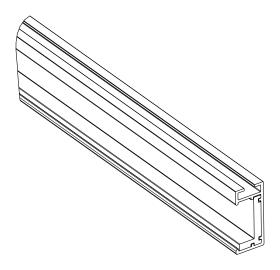

Return Shoe Assembly

- ⇒ For use with most MatTop Chains
- ⇒ Guides chain into extruded return guides
- ⇒ UHMWPE shoe for smooth and quiet operation
- ⇒ Includes mounting hardware for easy mounting to end of return guides
- ⇒ Sold in pairs

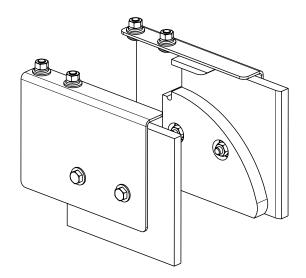




MatTop Conveyor Design

Return Section Wearstrips

Curves and Straights

⇒ C-Channel Return Profile, 7956B, 7956GT and 7956NT

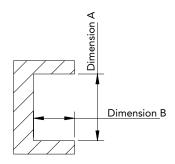

Chain	C-Channel Return Wearstrip Dimensions								
Number	Dimension A (in)	Dimension A (mm)	Dimension B (in)	Dimension B (mm)					
7956B, 7956GT	1.25 ±.03	31.8 ±.8	0.63 ±.13	16.0 ±3.30					
7956NT	0.63 ±.03	16.0 ±.8	0.63 ±.13	16.0 ±3.30					

For 7956NT, this C-Channel Profile can be used in carry and return

> Return Section Wearstrips

> Curves and Straights

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved

> Basic Chain
Dimensions —
7963/7966

CONVEYOR DESIGN RECOMMENDATIONS

>

Basic Chain Dimensions _ 7963/7966

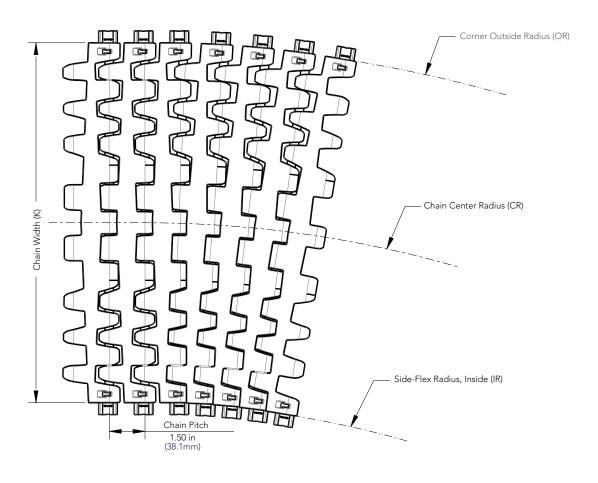

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

(0)		
9		
_		
(O)		
_		
D1		
-4		
01		
u		
=		

Chain		d Width ()	Side-Flex Ra (IF		Chain Radi (CF	us - Center !)**	Side-Flex Radius - Outside (OR)***	
Number	inch	mm	inch	mm	inch	mm	inch	mm
7963NT-12	12	305	21.00	533.4	27.00	685.8	33.00	838.2
7963NT-15	15	381	26.25	666.8	33.75	857.3	41.25	1047.8
7966NT-12	12	305	21.00	533.4	27.00	685.8	33.00	838.2
7966NT-15	15	381	26.25	666.8	33.75	857.3	41.25	1047.8
7963ST-12	12	305	21.00	533.4	27.00	685.8	33.00	838.2
7963ST-15	15	381	26.25	666.8	33.75	857.3	41.25	1047.8
7966ST-12	12	305	21.00	533.4	27.00	685.8	33.00	838.2
7966ST-15	15	381	26.25	666.8	33.75	857.3	41.25	1047.8



Drawing depicts 7966ST chain

- * Sideflex radius inside = $1.75 \times \text{chain width}$
- ** Chain radius-center = $2.25 \times \text{chain width}$
- *** Side-flex radius outside = $2.75 \times \text{chain width}$

MatTop Conveyor Design

>

Edge Guide Dimensions — 7963NT/7966NT


⇒ The Rexnord 7963NT and 7966NT MatTop chain styles are recommended to be retained in straights with the type of edge guide shown.

Critical Straight Wearstrip Dimensions							
Chain	Dimen	sion A*	Dimension B				
Number	inch	mm	inch	mm			
7963NT-12	0.68	17.5	0.50	12.7			
7963NT-15	0.68	17.5	0.50	12.7			
7966NT-12	0.68	17.5	0.50	12.7			
7966NT-15	0.68	17.5	0.50	12.7			


^{*}Maximum allowable height



The Rexnord 7963NT and 7966NT MatTop Chain must be retained in the corner with a pair of edge guides as shown

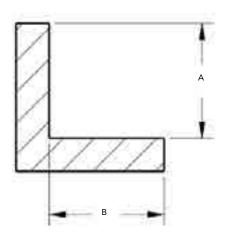

Critical Curve Wearstrip Dimensions						
Chain	Dimen	sion A	Dimension B			
Number	inch	mm	inch	mm		
7963NT-12	0.84	21.4	0.50	12.7		
7963NT-15	0.84	21.4	0.50	12.7		
7966NT-12	0.84	21.4	0.50	12.7		
7966NT-15	0.84	21.4	0.50	12.7		

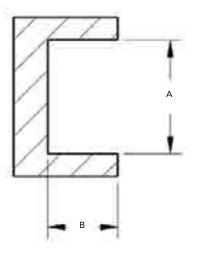

Recommendations for Corners and Straight Sections

- ⇒ UHMWPE wearstrips are recommended
- ⇒ If required for improved performance, Nylatron wearstrips may be used in corners
- \Rightarrow All sharp wearstrip edges, including corner tracks, should be chamfered to ensure smooth chain movement. Recommended contact surface finish of wearstrips is 32 to 125 μ -inch Ra (0.8 to 3.2 μ -m Ra) for best wear performance.
- ⇒ Inside edges of straight and corner sections should contain a lead-in or chamfer for smooth transition
- ⇒ Offset rail, serpentine or chevron patterns are recommended to maximize chain life because they provide uniform wear across the full width of the chain. Refer to the Engineering Manual (8rxEM-en) for more details on carry and return ways.

> Edge Guide Dimensions — 7963NT/7966NT

> Recommendations for Corners and Straight Sections

> Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

> Guide Clearance — 7963NT/7966NT


CONVEYOR DESIGN RECOMMENDATIONS

Guide Clearance — 7963NT/7966NT

12-inch width chain

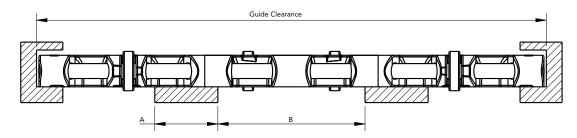

15-inch width chain

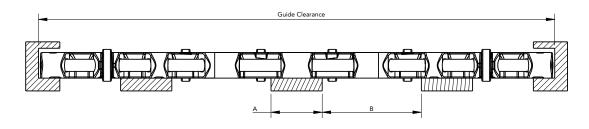

	Wearstrip Setup and Guide Clearance						
Chain Number		Wearstrip Width sion A		een Wearstrips sion B	Guide Clearance Carryway & Returnway, Straights & Curves		
	inch mm		inch	mm	inch	mm	
7963NT-12	1.50	40	3.50	87 *	12.25	310	
7963NT-15	1.50	40	2.91	72 *	15.25	385	
7966NT-12	typ. 1.50	40 min.	typ 3.50	87 max.	12.25	310	
7966NT-15	typ. 1.50	40 min.	typ 2.91	72 max.	15.25	385	

- * Wearstrip location is critical due to LBP roller spacing
- ⇒ Rexnord recommends a minimum 25-30 percent wearstrip coverage of chain surface area in both carry and return
- ⇒ Verify maximum package size to ensure sufficient clearance between corner track hold downs

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.



MatTop Conveyor Design


> 7960ST Edge Guide Dimensions — 7963ST/7966ST

7960ST Edge Guide Dimensions — 7963ST/7966ST

⇒ The Rexnord 7963ST and 7966ST MatTop chain styles must be retained in the corners. We recommend that the chain be retained in the straights with the same type of edge guide shown.

Critical Straight and Curved Wearstrip Dimensions									
Chain Dimension A (max.)			Dimension B		Dimen	Dimension C		Dimension D	
Number	inch	mm	inch	mm	inch	mm	inch	mm	
7963ST-12	0.28	7	0.56	15	0.13	3.2	*	*	
7963ST-15	0.28	7	0.56	15	0.13	3.2	*	*	
7966ST-12	0.28	7	0.56	15	0.13	3.2	*	*	
7966ST-15	0.28	7	0.56	15	0.13	3.2	*	*	

* Dimension D equals the thickness of the wearstrips plus 0.25 in (6.3 mm). This will allow for the bottom of the edge guides and the bottom of the wearstripes to be at the same level for mounting to a common cross support (see page EM - MT - 44).

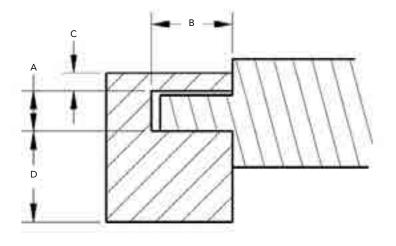

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

> Guide Clearance — 7963ST/7966ST


CONVEYOR DESIGN RECOMMENDATIONS




Guide Clearance — 7963ST/7966ST

⇒ The Rexnord 7963ST and 7966ST MatTop chains must be retained in the corner with a pair of edge guides as shown.

12-inch width chain

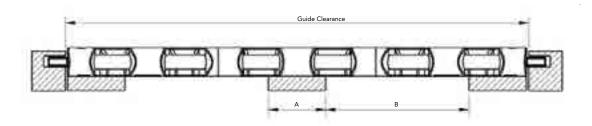

15-inch width chain

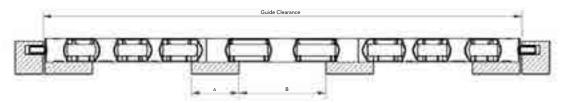



Rexnord 7966ST MatTop chain shown in drawings

Wearstrip Setup and Guide Clearance						
Recommended Wearstrip Width Dimension A Chain Number				een Wearstrips sion B	Guide Clearance Carryway & Returnway, Straights & Curves	
	inch mm		inch	mm	inch	mm
7963ST-12	1.50	40	3.50	87 *	12.25	310
7963ST-15	1.50	40	2.91	72 *	15.25	385
7966ST-12	typ. 1.50	40 min.	typ. 3.50	87 max.	12.25	310
7966ST-15	typ. 1.50	40 min.	typ. 2.91	72 max.	15.25	385

^{*} Wearstrip location is critical due to LBP roller spacing

- ⇒ Rexnord recommends a minimum 25-30 percent wearstrip coverage of chain surface area in both carry and return
- ⇒ Verify maximum package size to ensure sufficient clearance between corner track hold downs

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.




MatTop Conveyor Design

>

Carry Section Wearstrips — 7963/7966, ST and NT

⇒ Aluminum backed edge guides, wearstrips, return guides and return shoe kits are designed specifically for 7960 Series applications, and are available for sale from Rexnord.

 7960NT Straight UHMWPE Edge Guide — 614-586-1

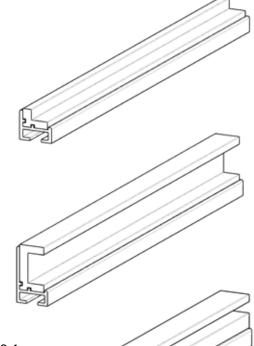


- 7960NT Curved UHMWPE Edge Guide 614-925-1
- ↑ 7960NT Curved Nylatron 614-985-1

7960ST Straight UHMWPE Edge Guide — 614-962-1

Extruded Rexnord 7960 Series Curve Guide/Wearstrip

- ⇒ Extruded anodized aluminum rail for additional strength
- ⇒ UHMWPE or optional Nylatron c-channel for improved performance in corners
- ⇒ Mounts with available standard 5/16-18 UNC carriage bolts
- ⇒ Curved guides are factory-bent to match specific radii per application
- \Rightarrow Designed for smooth, quiet operation
- ⇒ Sold in 10 ft (3.05 m) sections
- ⇒ Contact Rexnord for information requirements 262-376-4800
 - ◆ 7960ST Curved UHMWPE Edge Guide 614-963-1
 - ◆ 7960ST Curved Nylatron Edge Guide 614-973-1
 - Straight UHMWPE Wearstrip 614-570-1

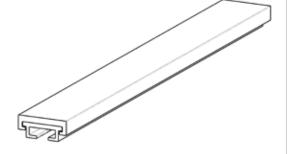

> Carry Section Wearstrips — 7963/7966, ST and NT

> Extruded Rexnord 7960 Series Curve Guide/Wearstrip

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


- > Return Section Wearstrips — 7963/7966, ST and NT
- > Return Shoe Kit

CONVEYOR DESIGN RECOMMENDATIONS



Return Section Wearstrips — 7963/7966, ST and NT

- ⇒ 7960NT Straight UHMWPE Return Guide 614-936-1
- ⇒ 7960NT Curved UHMWPE Return Guide 614-597-1

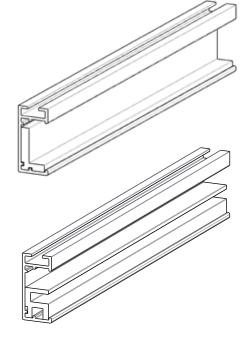

- ⇒ 7960ST Straight UHMWPE Return Guide 614-962-1
- ⇒ 7960ST Curved UHMWPE Return Guide 614-963-1



Return Shoe Kit

- ⇒ For use with all MatTop Chains
- ⇒ Guides chain into return guides
- ⇒ UHMWPE shoe for smooth and quiet operation
- ⇒ Includes mounting hardware for easy mounting to ends of return guides



Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.


NatTop Chains

⇒ 7960NT Return Shoe Kit — 614-774-1

⇒ 7960ST Return Shoe Kit — 614-964-1



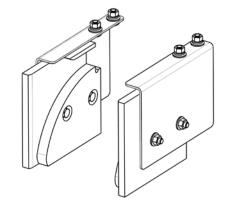

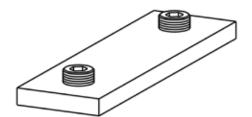


MatTop Conveyor Design

>

Transfers

⇒ In the operation of MatTop chain conveyors, smooth transfer of the conveyed product from one chain to another is essential for product protection and prevention of downtime. The various methods are described below.


Side Transfer

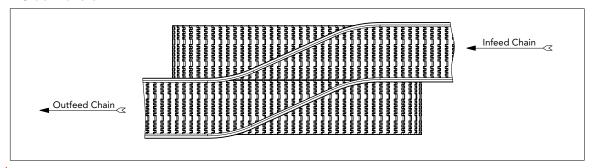

- \checkmark
 - Adjacent strands of chain should share a common wearstrip
 - ⇒ No stranded products

DTS Transfer (DynamicTransfer System)


- DTS is a self-clearing transfer which eliminates stranded product
- ⇒ See the diagram below for left-hand and right-hand transfers

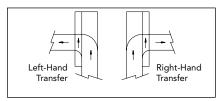



It is difficult to retrofit an existing deadplate transfer with DTS.

 It is recommended to consult with a qualified OEM to discuss the retrofit details

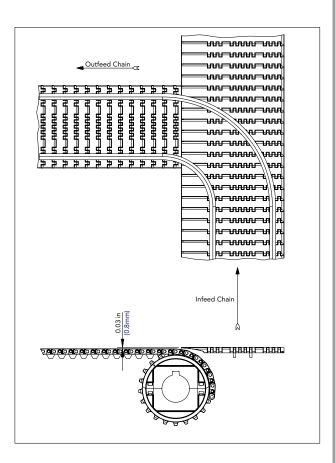

- > Transfers
- > Side Transfer
- DTS Transfer (DynamicTransfer System)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > Transfers
- > Transverse Roller Transfer
- > Inline Transfer

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

MatTop Chains 📑

CONVEYOR DESIGN RECOMMENDATIONS


Transfers

Transverse Roller Transfer

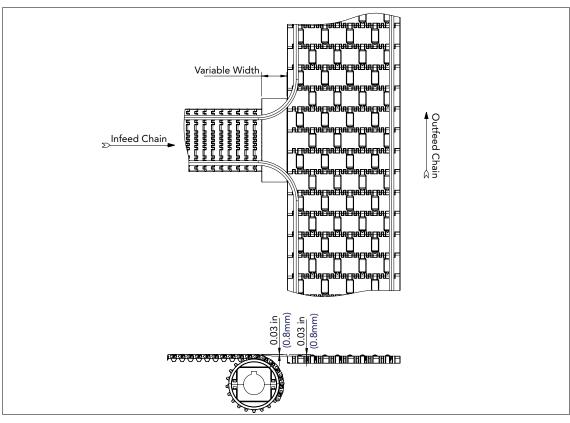

- ⇒ Infeed chain is to be slightly higher than LBP MatTop chain with transverse rollers
- ⇒ Infeed and outfeed conveyors should be mounted as close as possible to each other
- Deadplate should be used if the gap between chains is greater than half of the product bottom surface area to prevent the product from dropping below the LBP chain

Inline Transfer

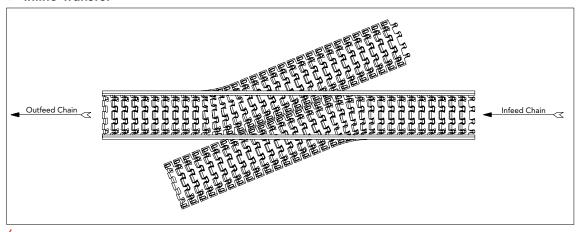


- Adjacent strands of chain should share a common wearstrip
 - ⇒ Allows product to remain in straight line

MatTop Conveyor Design


> T

Transfers

Inline Deadplate Transfer

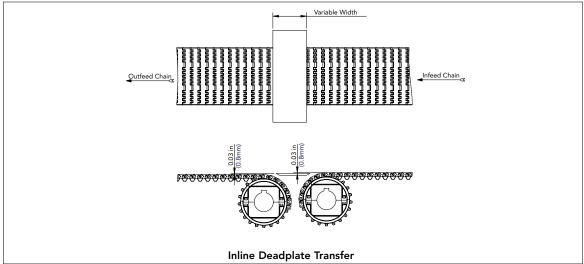

90° Deadplate Transfer

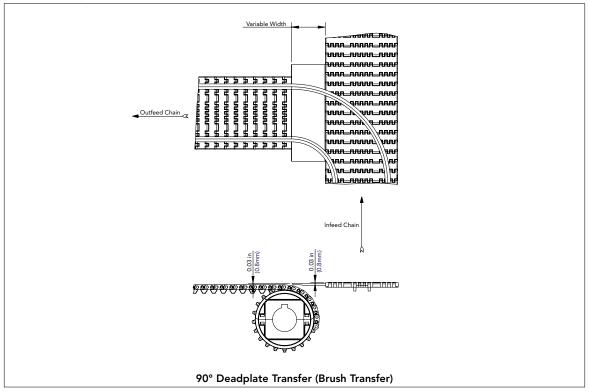

- **/**=
 - ⇒ For deadplate transfers, products should step down to the adjacent chain or deadplate surface (typically 0.03 in [0.8mm] step is recommended)
 - ⇒ Deadplates to be mounted slightly higher than the top surface of the outfeed chain
 - Deadplates should be as short as possible
 - ⇒ Deadplate transfers result in stranded product

> Transfers

- > Inline Deadplate
- > 90° Deadplate Transfer

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > Transfers
- 1500 Series Nose-Over End to End Transfer

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains 🖺


CONVEYOR DESIGN RECOMMENDATIONS



Transfers

1500 Series Nose-Over End to End Transfer


- ⇒ Things to be taken into consideration include:
 - Chordal action (small pitch is recommended)
 - Drive configurations (see page EM MT 57 for details)
 - ◆ Nose-over bar types:
 - Rotating shaft or dynamic
 - Sliding
 - 1500 series nose-over bar design manuals are available for more details (8rxNOdm-en)
 - ◆ PBT (Polyester) pins must be used for 1500 nose-over applications

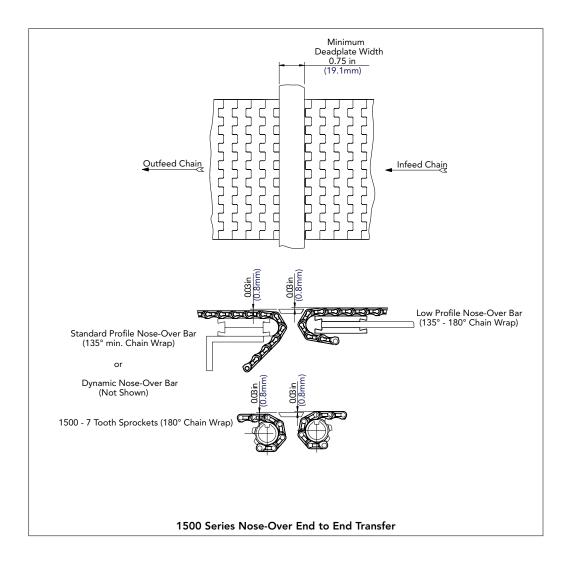

MatTop Conveyor Design

Transfers

> 1500 Series Nose-Over End to End Transfer

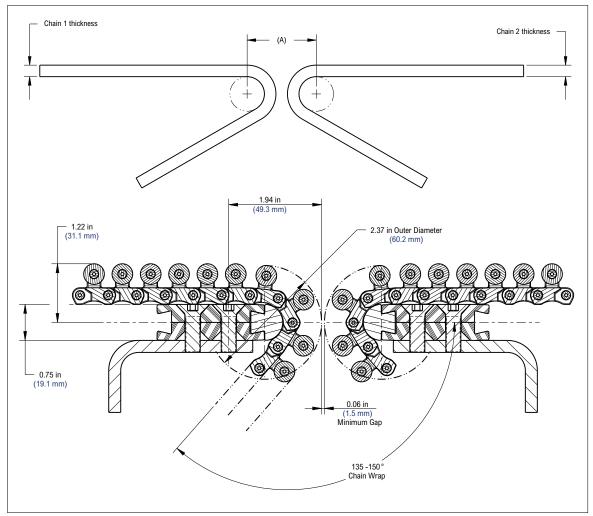

Center to Center Nose Bar Distance (A)

Center to Center Nose Bar Distance (A)						
Ch						
Chain Series	Chain Thickness	Chain Series	Chain Thickness	(A) Dimension		
1505/06	0.34 in (8.7 mm)	1505/06	0.34 in (8.6 mm)	1.53 in (38.8 mm)		
1505/06	0.34 in (8.6 mm)	1505RT	0.43 in (10.9 mm)	1.58 in (40.1 mm)		
1505/06	0.34 in (8.6 mm)	1503	0.40 in (10.2 mm)	1.59 in (40.4 mm)		
1505/06	0.34 in (8.6 mm)	1553	0.85 in (21.5 mm)	1.92 in (48.8 mm)		
1505RT	0.43 in (10.9 mm)	1505RT	0.43 in (10.9 mm)	1.64 in (41.7 mm)		
1505RT	0.43 in (10.9 mm)	1503	0.40 in (10.2 mm)	1.65 in (41.9 mm)		
1505RT	0.43 in (10.9 mm)	1553	0.85 in (21.6 mm)	1.99 in (50.5 mm)		
1503	0.40 in (10.2 mm)	1503	0.40 in (10.2 mm)	1.66 in (42.2 mm)		
1503	0.40 in (10.2 mm)	1553	0.85 in (21.6 mm)	2.00 in (50.8 mm)		
1553	0.85 in (21.6 mm)	1553	0.85 in (21.6 mm)	2.43 in (61.7 mm)		

> Transfers

> 8500 Series Nose-Over End to End Transfer

> Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved






Transfers

8500 Series Nose-Over End to End Transfer

- ⇒ Things to be taken into consideration include:
 - ◆ Chordal action
 - Drive configurations (see page EM MT 57 for details)
 - Dynamic or rotating hex shaft is recommended for 8500 series
 - 8500 series nose-over bar design manuals are available for more details (8rxNOdm-en)

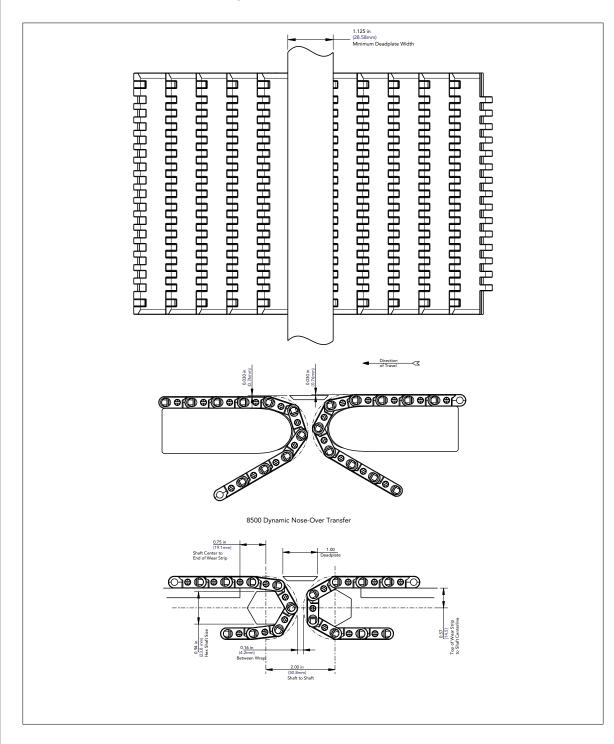

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

NOTES

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > Transfers
- > 1500 Series Nose-Over 90° Head to Side Transfer

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.


MatTop Chains

CONVEYOR DESIGN RECOMMENDATIONS



▶ 1500 Series Nose-Over 90° Head to Side Transfer

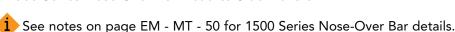


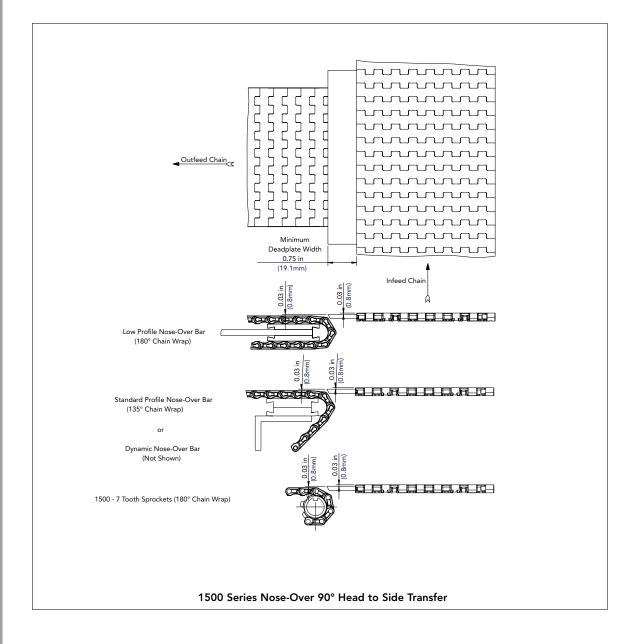



MatTop Conveyor Design

- Transfers
- ▶ 8500 Series Nose-Over 90° Head to Side Transfer
- 1 See notes on page EM MT 52 for 8500 Series Nose-Over Bar details.

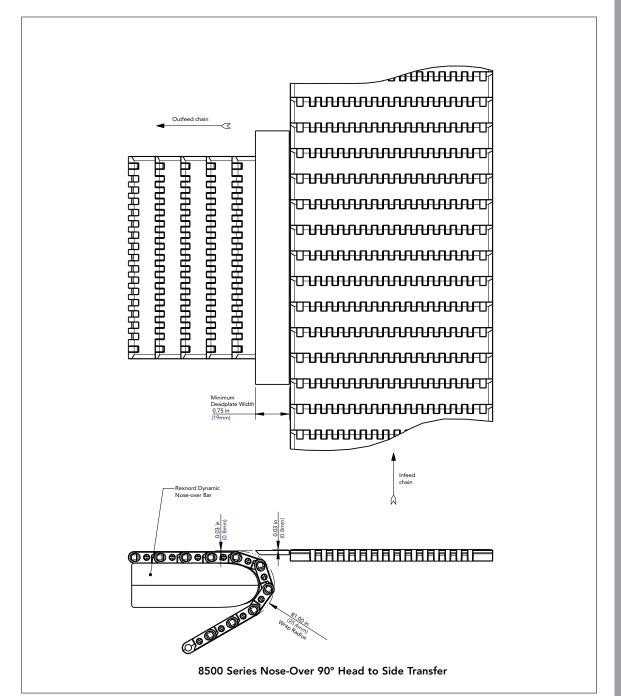

> Transfers

> 8500 Series Nose-Over 90° Head to Side Transfer

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > Transfers

exnord, TableTop, latTop, HP, UHS, PS, atinum Series, DTS, osiClean, TwistLock, ositrack, RexFlex and ynamicTransfer ystem are trademarks Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

CONVEYOR DESIGN RECOMMENDATIONS

Transfers

Combiners/Decombiners

- Combiners take products from en masse (in mass) to single file
- Decombiners take products from single file to en masse (in mass)

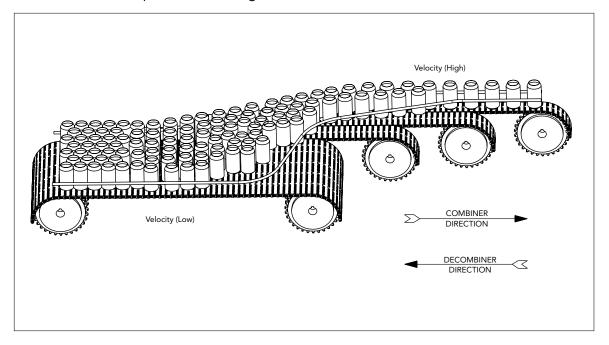



For conveyors using multiple strands of chain, key all sprockets on the head shaft and key only one sprocket on the tail shaft, preferably the center strand.



If space permits, use enough lanes to keep speed differentials between adjacent strands to about 50–75 FPM (15–23MPM), depending on product.



When several chains run side by side, such as on multiple width conveyors and combiners or decombiners, make sure the return chains do not interfere with each other.


MatTop Conveyor Design


>


Alternate Drive Configurations

Nose-Over Bar Conveyors

- ⇒ Catenary or take-up arrangements will vary based on drive configurations
- ⇒ 1500 and 8500 series nose-over bar design manuals are available for more details (8rxNOdm-en)

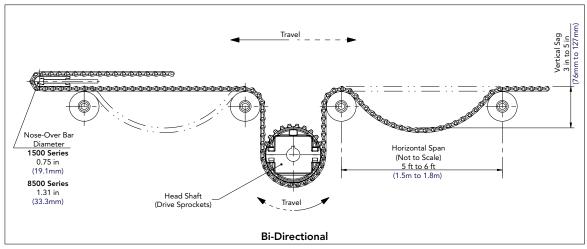

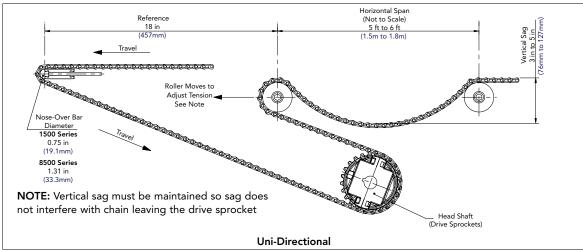

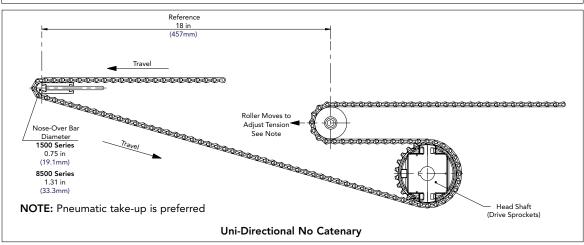

> Alternate Drive Configurations

Nose-Over Bar Conveyors

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

> Alternate Drive **Configurations**

> Bi-Directional **Bottom Drive** Conveyors (for heavy-duty service)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

CONVEYOR DESIGN RECOMMENDATIONS

Alternate Drive Configurations

Bi-Directional Bottom Drive Conveyors (for heavy-duty service)

⇒ Recommended roller spacing is 2 ft to 3 ft (0.5m to 1m), depending on speed and other considerations



Allow for thermal expansion or contraction (see page EM - MT - 24 for chain information or EM - MT - 81 for sprocket information).


⇒ Idler Rollers

- Idler rollers can be continuous drums or a series of individual rollers
- If individual rollers are used, they should be positioned in line with the drive sprockets
- Roller diameter is recommended to be at least two times greater than the minimum backflex radius of the chain

⇒ Bottom Drive

◆ All sprockets must be keyed inline (see page EM - MT - 81)

 For single-strand, continuous-width conveyors, key at least two sprockets, preferably the innermost sprockets

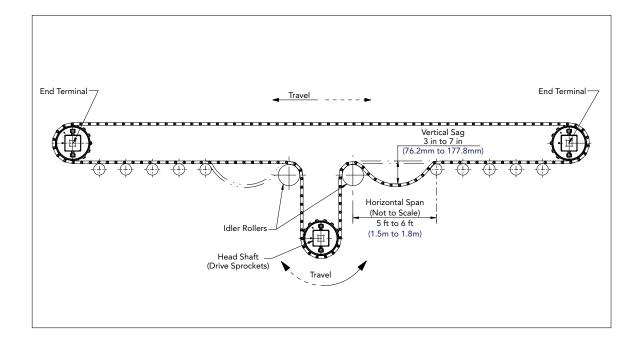



MatTop Conveyor Design

>


Alternate Drive Configurations

Bi-Directional End Drive Conveyors (for light-duty service)

- ⇒ The end drive method is ONLY recommended for very light-duty service conveyors (10 ft to 20 ft [3m to 6m] centers) where the chain tension on the carry side can be balanced by the catenary tension
- ⇒ Call Application Engineering to determine catenary dimensions for specific applications
- ⇒ For applications beyond the capacity of the end drive method, use the bottom drive configuration



 $\stackrel{lack}{ ext{A}}$ Make sure the sprockets are properly aligned on the shaft (see page EM - MT - 81).

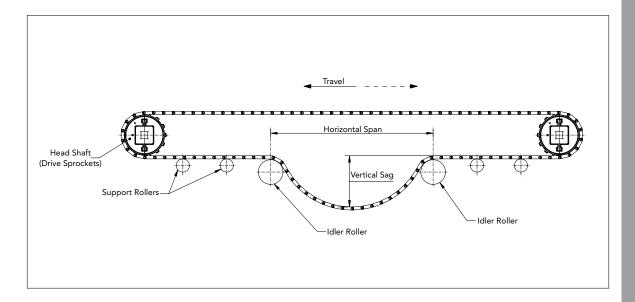

> Alternate Drive Configurations

> Bi-Directional End Drive Conveyors (for light-duty

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > Return Ways
- Wearstrip
- Roller Return


Considerations


CONVEYOR DESIGN RECOMMENDATIONS

Return Ways


Wearstrip Considerations

⇒ Wearstrips will contract and expand due to environmental conditions. Suggested methods to accommodate this are shown below.

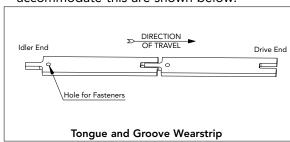

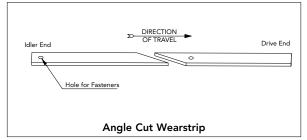

⇒ The first roller should be located far enough away from the head sprocket to allow for proper catenary sag

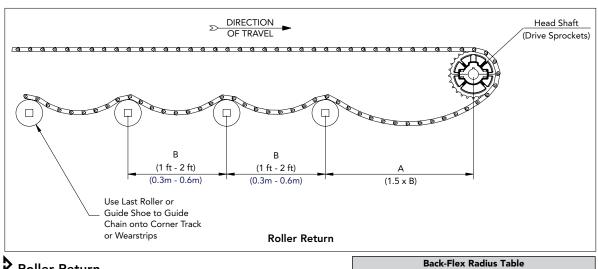

Roller Return

- ⇒ Dimension "A" should be 1.5 to 2 times greater than
- ⇒ Roller diameter is recommended to be at least two times greater than the minimum back-flex radius of the chain

Example: When using 4705 chain series, the chain minimum back-flex radius is 1.50 in (38.1mm); therefore, the minimum roller diameter should be 3.00 in (76.2mm).

- ⇒ Ensure rollers **ALWAYS** spin freely
- ⇒ If rollers do not turn freely, uneven wear patterns or scalloping on the top carry surface can occur
- ⇒ See table for minimum back-flex radii for specific chains
- ⇒ For offset rail, serpentine and chevron wearstrip configurations, see page EM - MT - 26 - 27

Chain Stude	Min. Back-Flex Radiu				
Chain Style	in	mm			
1000	0.98	25.0			
1015	1.50	40.0			
1503/1505/1506/1553	1.00	25.4			
2011/2015/2016	3.43	87.0			
3003/3004	3.75	95.3			
3125/3129	3.00	76.2			
4705/4706	1.50	38.1			
4707	2.00	50.8			
5705/5706	1.50	38.1			
5935/5936	1.00	25.4			
5966	1.50	38.1			
5995/5996/5998/5998HD	1.50	38.1			
5997	2.75	69.9			
6085	2.00	50.8			
6938	1.00	25.4			
6995/6999	2.50	63.5			
7526	0.59	15.0			
7703	2.00	50.8			
7705 RubberTop/7705 Supergrip	2.00	50.8			
7705/7706/7708/7743	1.00	25.4			
7725/7726	1.00	25.4			
7956	6.00	152.4			
7963/7966	2.50	63.5			
8503/8505/8506	1.00	25.4			
8507	3.50	88.9			
9608	1.50	38.1			

Rexnord, TableTop, MatTop, HP, UHS, PS, Ilatinum Series, DTS, osiClean, TwistLock, Iositrack, RexFlex and DynamicTransfer ystem are trademarks f Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

MatTop Conveyor Design

Return Ways


Roller Return — Staggered Rollers

 \Rightarrow See table on page EM - MT - 60 for minimum back-flex radii for specific chains

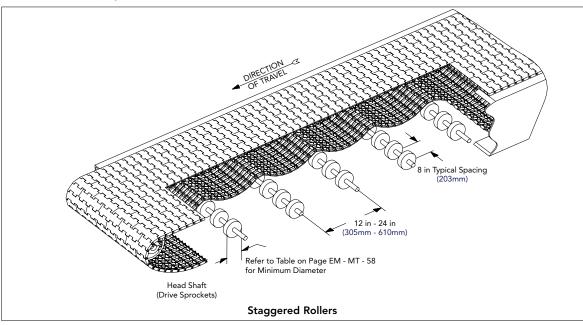

Roller Return — Full-Width Rollers

⇒ See table on page EM - MT - 60 for minimum back-flex radii for specific chains

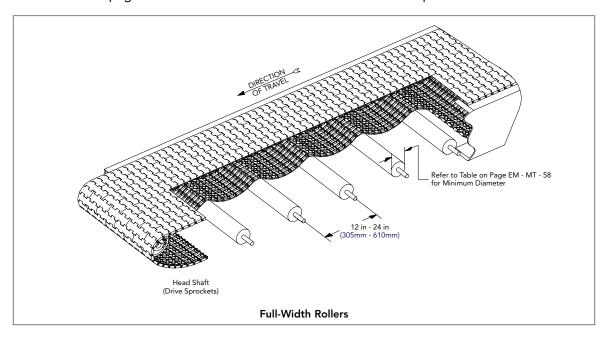

> Return Ways

- > Roller Return Staggered Rollers
- > Roller Return Full-Width Rollers

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Conveyor Design

- > Return Ways
- > Vacuum Breaker
- > Curve Section 7956/7963/7966 Chain Series

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains


CONVEYOR DESIGN RECOMMENDATIONS



Return Ways

Vacuum Breaker

- ⇒ Vacuum breakers can be utilized to reduce "suction" on solid bed returns in "wet" applications
- ⇒ Vacuum breakers are typically spaced 2 ft to 5 ft (0.6m to 1.5m) apart

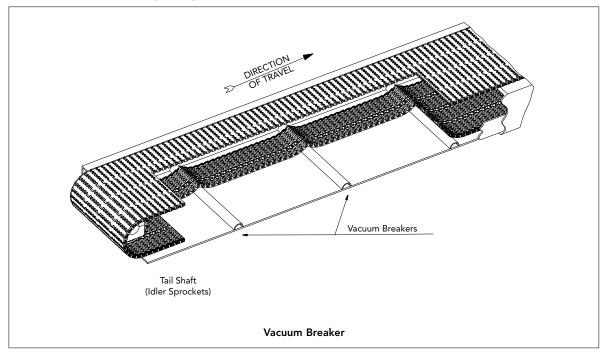

Contact Rexnord Application Engineering for more information 1.262.376.4800




MatTop Conveyor Design

Return Ways


Supports for Chains with Rollers


(17.4mm) Chain Indent Chain shown in drawings is LBP7703 chain. For all other LBP chains (except 1553), the wearstrips should be positioned 0.13 to 0.25 in between the rollers. (3.0 to 6.0mm) Clearance per side


0.69 in

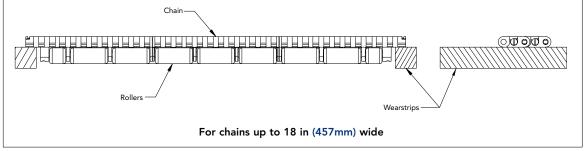

Return Wearstrip Profile

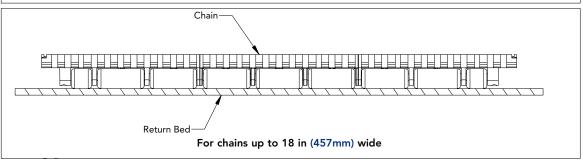

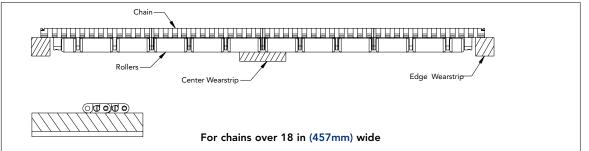

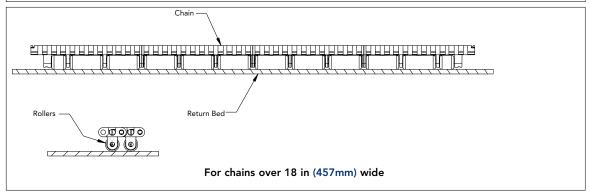

- > Return Ways
- Supports for Chains with Rollers

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Contact Rexnord Application Engineering for more information 1.262.376.4800

MatTop Conveyor Design

- > Return Ways
- > Supports for Chains with Pushers

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


MatTop Chains


CONVEYOR DESIGN RECOMMENDATIONS

Return Ways

Supports for Chains with Pushers

⇒ Allows for reduced top surface wear

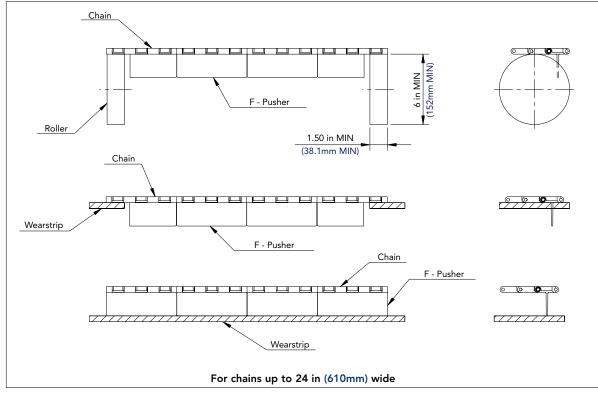

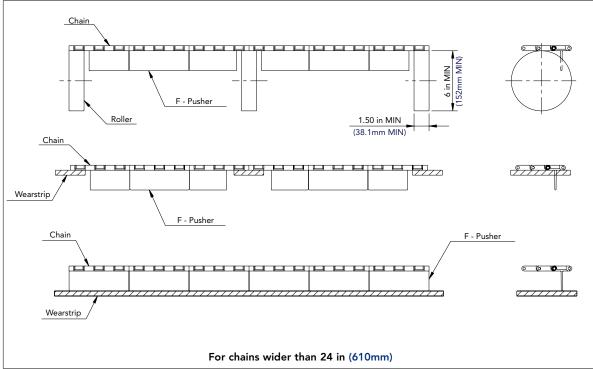





MatTop Conveyor Design

Return Ways

Supports for Chains with High-Friction Inserts

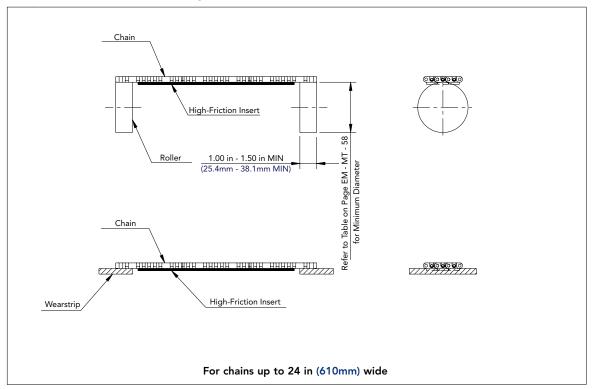

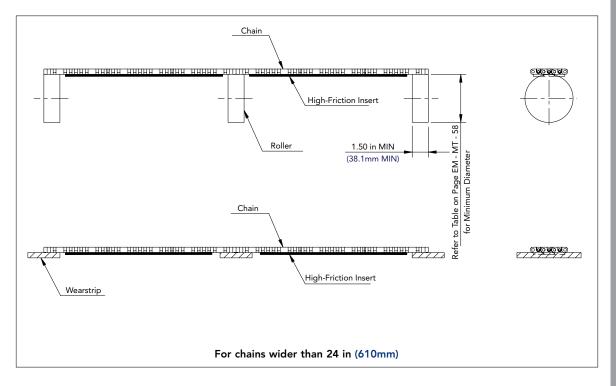

> Return Ways

> Supports for Chains with High-Friction Inserts

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Conveyor Design

- > Return Ways
- > Incline Conveyor

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

MatTop Chains

CONVEYOR DESIGN RECOMMENDATIONS



Incline Conveyor

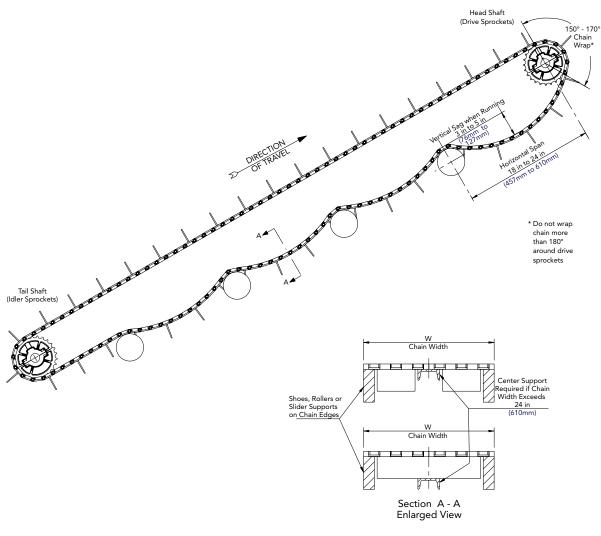


- ⇒ The catenary position depends on the incline angle
- ⇒ Rollers or shoes **MUST** meet the minimum back-flex radius requirements
- ⇒ If the incline angle is severe, take-up units may need to be considered
 - Spring or pneumatic take-up units are preferred
- ⇒ Pusher indents provide surface area for return
- ⇒ Notches within the pusher attachment help to extend the life of the pusher
- ⇒ A pusher center return support is required for chains wider than 24 in (610mm)
- ⇒ Slider supports, shoes or rollers can be utilized in the return sections
- ⇒ Sideguards can be utilized to capture product
- ⇒ When abrasives are present, the use of drums or abrasion resistant idler sprockets should be considered
- ⇒ Use guard or drip pans when required

MatTop Conveyor Design

Return Ways

Incline Conveyor with Transitions

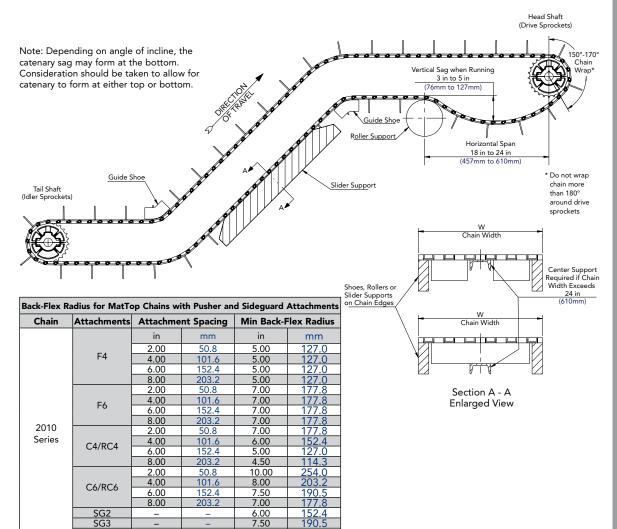

- ⇒ The catenary position depends on the incline angle
- ⇒ Rollers or shoes MUST meet the minimum back-flex radius requirements

9.00

- ⇒ In carry transition areas, the radius should be as large as possible
- \Rightarrow If the incline angle is severe, take-up units may need to be considered
 - Spring or pneumatic take-up units are preferred
- ⇒ Pusher indents provide surface area for return
- ⇒ Notches within the pusher attachment help to extend the life of the pusher
- ⇒ A pusher center return support is required for chains wider than 24 in (610mm)
- ⇒ Slider supports, shoes or rollers can be utilized in the return sections
- ⇒ Sideguards can be utilized to capture product
- ⇒ When abrasives are present, the use of drums or abrasion resistant idler sprockets should be considered
- ⇒ Use guard or drip pans when required

> Return Ways

> Incline Conveyor with Transitions

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

MatTop Chains

CONVEYOR DESIGN RECOMMENDATIONS




Decline Conveyor

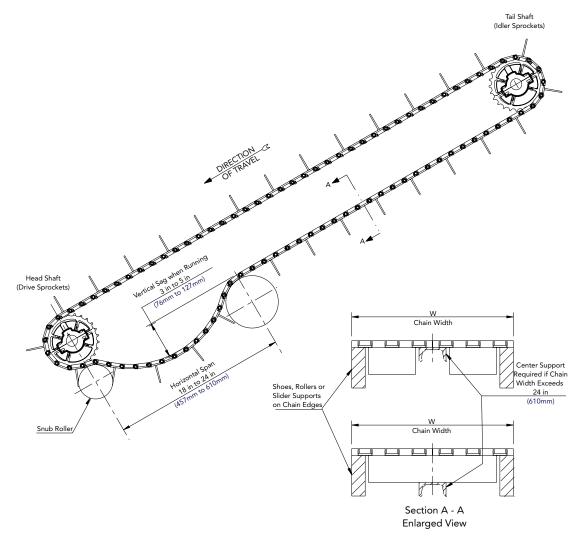

- ⇒ A snubber roller can be utilized to maintain a 150° to 180° wrap on drive sprocket
- ⇒ The catenary position depends on the incline angle
- ⇒ Rollers or shoes MUST meet the minimum back-flex radius requirements
- ⇒ In carry transition areas, the radius should be as large as possible
- ⇒ If the decline angle is severe, take-up units may need to be considered
 - Spring or pneumatic take-up units are preferred
- ⇒ Pusher indents provide surface area for return
- ⇒ Notches within the pusher attachment help to extend the life of the pusher
- ⇒ A pusher center return support is required for chains wider than 24 in (610mm)
- ⇒ Slider supports, shoes or rollers can be utilized in the return sections
- ⇒ Sideguards can be utilized to capture product
- ⇒ When abrasives are present, the use of drums or abrasion resistant idler sprockets should be considered
- ⇒ Use guard or drip pans when required

Return Ways

Decline Conveyor with Transitions

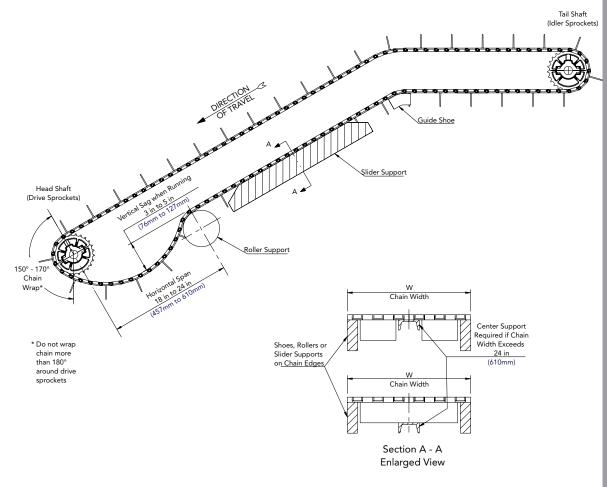

- ⇒ A snubber roller can be utilized to maintain a 150° to 180° wrap on drive sprocket
- ⇒ The catenary position depends on the incline angle
- ⇒ Rollers or shoes MUST meet the minimum back-flex radius requirements
- ⇒ In carry transition areas, the radius should be as large as possible
- ⇒ If the decline angle is severe, take-up units may need to be considered
 - Spring or pneumatic take-up units are preferred
- ⇒ Pusher indents provide surface area for return
- ⇒ Notches within the pusher attachment help to extend the life of the pusher
- ⇒ A pusher center return support is required for chains wider than 24 in (610mm)
- ⇒ Slider supports, shoes or rollers can be utilized in the return sections
- ⇒ Sidequards can be utilized to capture product
- ⇒ When abrasives are present, the use of drums or abrasion resistant idler sprockets should be considered
- ⇒ Use guard or drip pans when required
- ⇒ See table on page EM MT 60 for back-flex information

> Return Ways

> Decline Conveyor with Transitions

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

> Return Ways

> Catenary Sag


CONVEYOR DESIGN RECOMMENDATIONS


>


Return Ways


Catenary Sag

- ⇒ The function of the catenary is to allow a place for excess chain to accumulate
- ⇒ MatTop chains should never be run tight
- ⇒ The catenary sag should be measured when running
- ⇒ If the catenary sag is excessive or increases due to wear, it should be adjusted by removing links to obtain the proper sag (2 pitches must be removed for LBP 3000 series chains and any chain with sidguards)
- ⇒ Take-ups are typically not recommended
- ⇒ The catenary sag should be located as close to the drive as possible

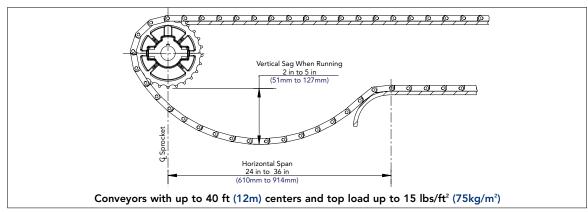

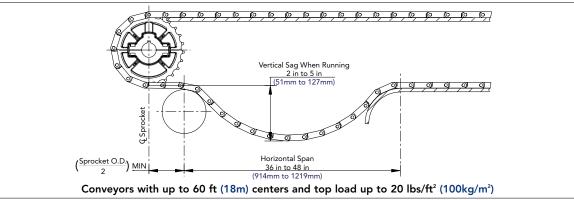

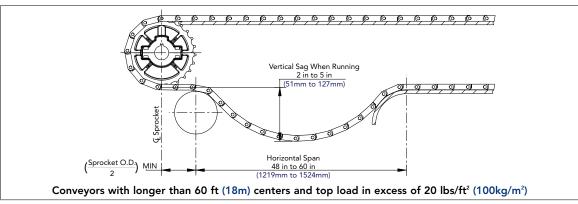



Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

The catenary sag area must be free of all obstructions, such as frame cross-members, supports, drive components, that can damage chain or inhibit proper catenary sag.



It is recommended to keep the sprockets and chain clean of debris and foreign matter. If this is not done, the chain can stick to (not release freely from) the drive sprockets causing the catenary to bounce leading to possible chain damage or breakage. In cases of extreme environments, a hold down roller can be positioned above the catenary near the drive sprocket(s) to keep the chain from overwrapping the drive sprocket(s).

Contact Rexnord Application Engineering for more information 1.262.376.4800



MatTop Conveyor Design


>

Return Ways

Entry Radius for Sliding Returns



- ⇒ Provide a generous entry radius to the return section which permits the chain to feed smoothly into the return ways
- ⇒ The entry radius should be greater than the minimum back-flex radius of the chain (see table on page EM MT 60)
- ⇒ Rexnord recommends a 6 in (152mm) minimum entry radius to prevent non-uniform wear
- ⇒ When returning 7956 chain on its TABs, guide the chain onto the return wearstrips using a guide shoe (see table on page EM MT 34 for proper guide clearance)
- ⇒ At the entry of the return wearstrips, provide rounded corners to prevent catching or snagging of the chain flights

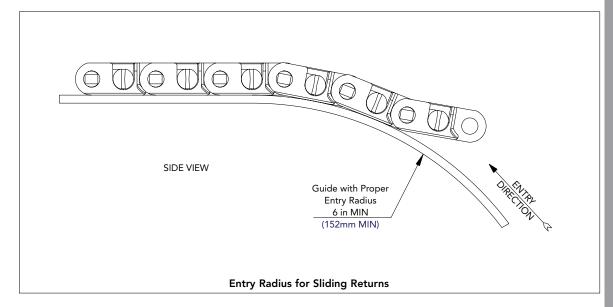

> Return Ways

> Entry Radius for Sliding Returns

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Sprocket and Wearstrip Location

CONVEYOR DESIGN RECOMMENDATIONS


- ⇒ The distance from the end of the wearstrip to the sprocket shaft centerline should equal dimension "C" (one chain pitch); otherwise, the wearstrip will interfere with the free articulation of the chain as it enters the sprocket
- ⇒ The leading edges of the wearstrip should be beveled
- ⇒ The following formulas and dimensions used in conjunction with the figure will give the proper shaft and wearstrip positioning

Sprocket Location For Conventional Chains:

A = (Pitch Diameter/2) - E

C = One Chain Pitch (see table below)

"C" equals one chain pitch which ensures support under chain at all times.

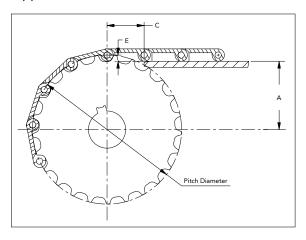

i Dimensions apply for both head and tail shafts

	Shaft Drop Values for Conventional Chain								
Chain	Chain	C Dime	ension	E Dim	ension				
Series	Number	in	mm	in	mm				
1000	1000FT/1000FG	1.00	25.4	0.170	4.32				
1010	1015	1.00	25.4	0.200	5.08				
1500	1503/1505/1506/1553	0.59	15.0	0.190	4.83				
2010	2011/2015/2016	2.00	50.8	0.320	8.00				
3000	3003/3004	2.50	63.5	0.438	11.11				
3120	3125/3129	3.00	76.2	0.630	15.88				
4700	4705/4706	1.50	38.1	0.250	6.35				
5700	5705/5706	1.50	38.1	0.250	6.35				
5930	5935/5936	0.75	19.1	0.170	4.32				
5966	5966	1.50	38.1	0.250	6.35				
5990	5995/5996/ 5998/5998HD	2.25	57.2	0.360	9.14				
6085	6085	2.00	50.8	0.310	7.87				
6938	6938	0.75	19.1	0.170	4.32				
6990	6995/6999	2.25	57.2	0.360	9.14				
6990H	6995/6999 H4/H8	2.25	57.2	0.380	9.65				
7526	7526	0.50	12.7	0.250	6.35				
7700	7703/7705/ 7706/7708/7743	1.00	25.4	0.250	6.35				
7950	7956	1.25	31.8	0.250	6.35				
7960	7963/7966	1.50	38.1	0.375	9.53				
8500	8503/8505/8506	0.75	19.1	0.170	4.32				
9600	9608	1.50	38.1	0.380	9.65				

Example:

For a 5996 chain utilizing a 14T sprocket:

A = (Pitch Diameter/2) - E

= (10.111 in/2) - 0.360 in = 4.696 in

C = 2.25 in

Metric:

A = (Pitch Diameter/2) - E

= (256.82 mm/2) - 9.14 mm = 119.27 mm

C = 57.1 mm

Tolerances:

A = +.03 in / -.00 in (+.8 mm / -.0 mm)

C = +.25 in / -.00 in (+6.3 mm / -.0 mm)

s apply for both



Above values are good only for sprockets mounted between support tracks. For sprockets mounted in line with support tracks:

$$C = \sqrt{\left(\frac{O.D.}{2}\right)^2 - \left(A-t\right)^2} + 0.125$$

A = (Pitch Diameter/2) - E O.D. = Outside Diameter of Sprockets t = Wearstrip Thickness

⇒ Wearstrips in line with sprockets can also be angled back on the bottom for more clearance

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

exnord, TableTop, NatTop, HP, UHS, PS, Ilatinum Series, DTS, osiClean, TwistLock, Iositrack, RexFlex and DynamicTransfer ystem are trademarks f Rexnord.




MatTop Conveyor Design

>

Sprocket Pitch Diameter vs. Outside Diameter

In some instances, it is possible for a sprocket's pitch diameter to be larger than the outside diameter. This is not a problem because the link does not contact the sprocket on the pitch circle.

Why Pitch Diameter Is Larger Than the Outside Diameter on Small Sprockets

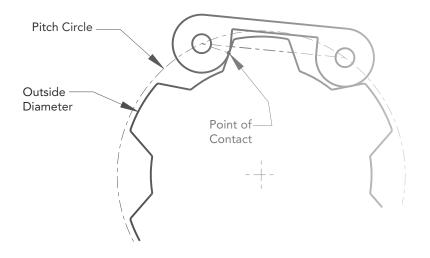

- ⇒ The outside diameter is to the outer tips of the teeth.
- ⇒ The chain's pins are on the pitch diameter. On a very small sprocket, the chord created by the link causes the point where the sprocket contacts the tooth to be much closer to the sprocket center than the pins and the pitch circle.
- i Chordal action is defined as the up and down motion of the chain over top dead center of the sprocket centerline. Excessive chordal action can lead to product tippage.

> Sprocket Pitch
Diameter
vs. Outside
Diameter

Why Pitch Diameter
 Is Larger Than the
 Outside Diameter
 on Small Sprockets

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Conveyor Design

- > Sprocket and Wearstrip Location with Raised-Rib Chains
- Sprocket Location for Raised-Rib Chains

CONVEYOR DESIGN RECOMMENDATIONS

Sprocket and Wearstrip Location with Raised-Rib Chains

- ⇒ The distance from the end of the wearstrip to the sprocket shaft centerline should equal dimension "C" (one chain pitch); otherwise, the wearstrip will interfere with the free articulation of the chain as it enters the sprocket
- ⇒ The leading edges of the wearstrip should be beveled
- ⇒ The following formula and dimensions used in conjunction with the figure will give the proper shaft and wearstrip positioning

Sprocket Location for Raised-Rib Chains:

A = (Pitch Diameter/2) - E

C = One Chain Pitch (see table below)

D = (Pitch Diameter/2) + F

T = Comb Thickness (see Product Catalog for dimensions)

"C" equals one chain pitch which ensures support under chain at all times.

Example:

For a 5997 chain utilizing a 14T sprocket:

A = (Pitch Diameter/2) - E

= (10.111 in/2) - 0.360 in = 4.696 in

B = 3.25 in

C = 2.25 in

D = (Pitch Diameter/2) + F

= (10.111in/2) + 0.610 in = 5.666 in

T = 0.25 in

Metric:

A = (Pitch Diameter/2) - E

= (256.82 mm/2) - 9.14 mm = 119.27 mm

B = 82.6 mm

C = 57.2 mm

D = (Pitch Diameter/2) + F

= (256.82 mm/2) + 15.49 mm = 143.90 mm

T = 6.4mm



A = +.03 in / -.00 in (+.8 mm / -.0 mm)

C = +.25 in / -.00 in (+6.3 mm / -.0 mm)

D = +.00 in / -.03 in (+.0 mm / -.8 mm)



"B" dimension is flexible. One must ensure that the comb fingers extend beyond the sprocket centerline to avoid transfer problems.




Mounting sprockets in line with wearstrips is not recommended for chains using comb transfer plates.

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

NatTop Chains 🗐

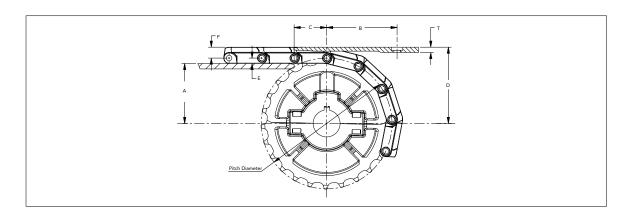



	Shaft Drop Values for Conventional Chain								
Chain	B Dim	Dimension C Dimension E Dimension F Dimension							
Series	in	mm	in	in	mm				
4707	3.25	82.6	1.50	38.1	0.250	6.35	0.500	12.70	
5997	3.25	82.6	2.25	57.2	0.360	9.14	0.610	15.49	
8507	3.25	82.6	0.75	19.1	0.170	4.32	0.390	9.91	


MatTop Conveyor Design

>

Layout Dimensions for DTS Chains

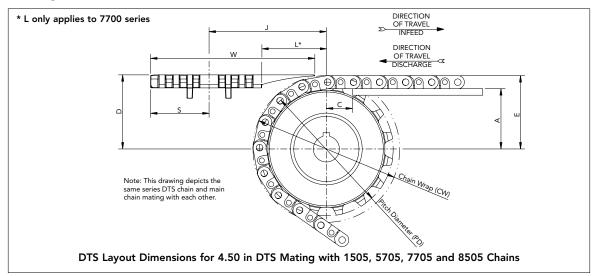

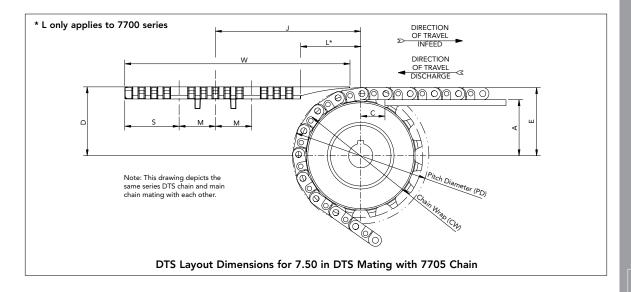

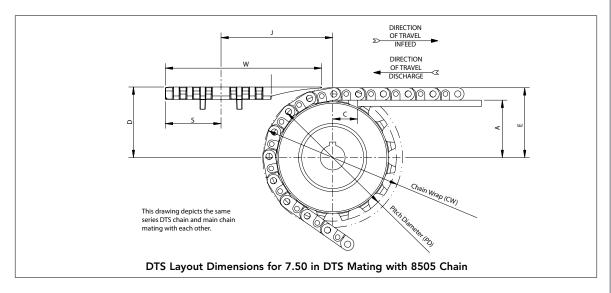

> Layout
Dimensions for
DTS Chains

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Conveyor Design

> Layout
Dimensions for
DTS Chains



Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

NatTop Chains 📑

CONVEYOR DESIGN RECOMMENDATIONS



Layout Dimensions for DTS® Chains


	1505 — 4.50 DTS Mating with 1505										
No. of			_	6147	CW D		J				
Spkt. Teeth	PD	A	C	cw	Infeed	Discharge	E	Infeed	Discharge	5	W
24T	4.524	2.07		4.84	2.45	2.40	2.42	4.17	4.40		
241	114.9	52.6	0.59	122.9	62.2	61.0	61.5	105.9	111.8	2.62	6.29
32T	6.040	2.83	15.0	6.35	3.21	3.15	3.18	4.24	4.51	66.5	159.8
321	153.4	71.8		161.3	81.5	80.0	80.8	107.7	114.6		

	5705 — 4.50 DTS Mating with 5705										
No. of	200		_	CW		D	E	J		_	w
Spkt. Teeth	PD	A	С	cw	Infeed	Discharge	-	Infeed	Discharge	S	VV
21T	5.089	2.30		5.59	2.83	2.77	2.80	4.98	5.28		
211	129.3	58.4		142.0	71.9	70.4	71.1	126.5	134.1		
ээт	5.560	2.53		6.06	3.06	3.00	3.03	4.99	5.31		
23T	141.2	64.3	1.50	153.9	77.7	76.2	77.0	126.7	134.9	2.25	6.82
2FT	6.032	2.77	38.1	6.53	3.30	3.24	3.27	5.01	5.33	57.2	173.2
25T	153.2	70.4		165.9	83.8	82.3	83.1	127.3	135.4		
27T	6.504	3.00		7.00	3.53	3.47	3.50	5.03	5.36		
27T	165.2	76.2		177.8	89.7	88.1	88.9	127.8	136.1		

	7705 — 4.50 and 7.50 DTS Mating with 7705																	
No. of Spkt.	PD	A	С	cw		D		D E			4.50	J	7.50		L	М	s	w
Teeth					Infeed	Discharge		Infeed	Discharge	Infeed	Discharge	Infeed	Discharge	7.50				
16T	5.126	2.31		5.63	2.84	2.78	2.81	4.58	4.84	6.08	6.34	2.56	2.82					
101	130.2	58.7		143.0	72.1	70.6	71.4	116.3	122.9	154.4	161.0	65.0	71.6					
18T	5.759	2.63		6.26	3.16	3.10	3.13	4.61	4.88	6.11	6.38	2.59	2.86					
101	146.3	66.8	1.00	159.0	80.3	78.7	79.5	117.1	124.0	155.2	162.1	65.8	72.6	1.50	2.25	6.30		
21T	6.710	3.11	25.4	7.21	3.64	3.58	3.61	4.65	4.94	6.15	6.44	2.63	2.92	38.1	57.2	160.0		
211	170.4	79.0		183.1	92.5	90.9	91.7	118.1	125.5	156.2	163.6	66.8	74.2					
31T	9.885	4.69		10.39	5.22	5.16	5.19	4.77	5.12	6.27	6.62	2.75	3.10					
311	251.1	119.1		263.9	132.6	131.1	131.8	121.2	130.0	159.3	168.1	69.9	78.7					

	8505 — 4.50 DTS Mating with 8505										
No. of	PD	Α	С	cw		D	Е		J	s	w
Spkt. Teeth	PD	_ ^		CVV	Infeed	Discharge		Infeed	Discharge	.	vv
17T	4.120	1.89		4.46	2.26	2.20	2.23	4.44	4.67		
171	104.6	48.0		113.3	57.4	55.9	56.6	112.8	118.6		
21T	5.079	2.37		5.42	2.74	2.68	2.71	4.50	4.75		
211	129.0	60.2		137.7	69.6	68.1	68.8	114.3	120.7		
24T	5.800	2.73	0.75	6.14	3.10	3.04	3.07	4.53	4.79	2.32	6.30
241	147.3	69.3	19.1	156.1	78.7	77.2	78.0	115.1	121.7	58.9	160.0
25T	6.040	2.85		6.38	3.22	3.16	3.19	4.54	4.81		
231	153.4	72.4		162.2	81.8	80.3	81.0	115.3	122.2		
27T	6.521	3.09		6.87	3.46	3.40	3.43	4.56	4.84		
2/1	165.6	78.5		174.5	87.9	86.4	87.1	115.8	122.9		


	8505 — 7.50 DTS Mating with 8505										
No. of	200			CVA		D	Е		J	_	14/
Spkt. Teeth	PD	A	С	cw	Infeed	Discharge	=	Infeed	Discharge	S	W
17T	4.120	1.89		4.46	2.26	2.20	2.23	6.10	6.33		
'/'	104.6	48.0		113.3	57.4	55.9	56.7	154.9	160.8		
21T	5.079	2.37		5.42	2.74	2.68	2.71	6.16	6.41		
211	129.0	60.2		137.7	69.6	68.1	68.8	156.5	162.8		
24T	5.800	2.73	0.75	6.14	3.10	3.04	3.07	6.19	6.46	3.66	9.30
241	147.3	69.3	19.1	156.0	78.7	77.2	78.0	157.2	164.1	93.0	236.3
25T	6.040	2.85		6.38	3.22	3.16	3.19	6.20	6.48		
251	153.4	72.4		162.1	81.8	80.3	81.0	157.5	164.6		
27T	6.521	3.09		6.87	3.46	3.40	3.43	6.23	6.51		
2/1	165.6	78.5		174.5	87.9	86.4	87.1	158.2	165.4		

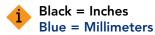


MatTop Conveyor Design

>

Layout Dimensions for DTS Chains

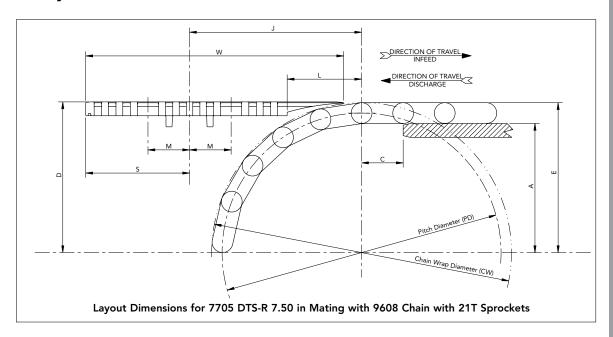

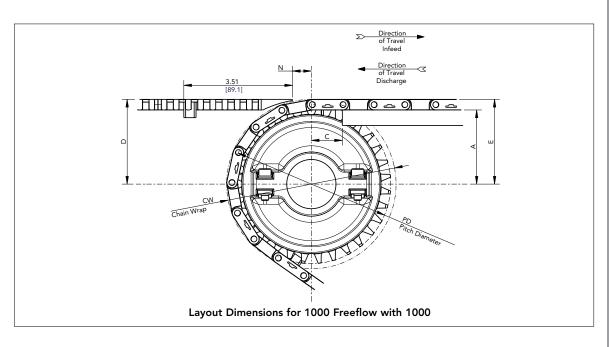

> Layout
Dimensions for
DTS Chains

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Conveyor Design

> Layout
Dimensions for
DTS Chains

CONVEYOR DESIGN RECOMMENDATIONS



Layout Dimensions for DTS Chains

	7705 — 4.50 DTS Mating with 9608								
No. of	DD.		_	CM		D	-		N
Spkt. Teeth	PD	A	С	cw	Infeed	Discharge	E	Infeed	Discharge
16T	5.13	2.39	1.00	5.47	2.77	2.71	2.74	0.47	0.73
101	130.2	60.7	25.4	138.9	70.2	68.7	69.5	11.6	18.4
18T	5.76	2.71	1.00	6.10	3.08	3.02	3.05	0.48	0.77
101	146.3	77.5	25.4	155.0	78.2	76.7	77.5	12.2	19.6
20T	6.39	3.02	1.00	6.70	3.40	3.34	3.37	0.50	0.81
201	162.4	85.6	25.7	171.1	86.4	84.8	85.6	12.7	20.6

	9608 - 7.50 in Single Module DTS														
No. of	PD	•	_	CVA		D		E		J		L	N4	_	14/
Spkt. Teeth	ן אם	Α	C	cw	Infeed	d Discharge Infeed Discharge Infeed Discharge Infeed Discharge									W
21T	10.064	4.66	1.50	10.81	5.44	5.41	5.41	5.33	6.21	6.35	2.68	2.83	1.50	3.75	9.30
211	255.6	118.4	38.1	274.7	138.1	138.1 137.4 137.4 135.4 157.7 161.3 68.2 71.9 38.1 95.1 236.2						236.2			

	1000 Freeflow with 1000												
No. of				6147	D		D				_	ı	N
Spkt. Teeth	PD	A	С	cw	Infeed	Discharge	E	Infeed	Discharge				
16T	5.13	2.39	1.00	5.47	2.77	2.71	2.74	0.47	0.73				
101	130.2	60.7	25.4	138.9	70.2	68.7	69.5	11.6	18.4				
10T	5.76	2.71	1.00	6.10	3.08	3.02	3.05	0.48	0.77				
18T	146.3	77.5	25.4	155.0	78.2	76.7	77.5	12.2	19.6				
20T	6.39	3.02	1.00	6.70	3.40	3.34	3.37	0.50	0.81				
201	162.4	85.6	25.7	171.1	86.4	84.8	85.6	12.7	20.6				



Black = Inches

Blue = Millimeters



DTS-C design manual is available for more details (8rxDTS-Cdm-en)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved

MatTop Conveyor Design

>


Transfer Comb Installation

Low-Temperature Application

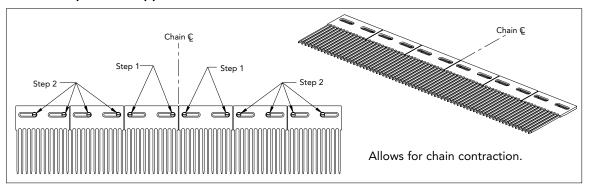

STEP 1 Secure the two centermost transfer plates in order to track the chain

STEP 2 Position the fasteners in the remaining transfer plates to the corresponding right side or left side of the slots to allow for contraction at low temperatures

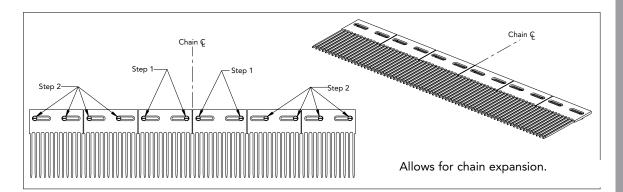

High-Temperature Application

STEP 1 Secure the two centermost transfer plates in order to track the chain

STEP 2 Position the fasteners in the remaining transfer plates to the corresponding right side or left side of the slots to allow for expansion at high temperatures



This arrangement will allow these transfer plates to move as required to accommodate changes in the chain width up to 1.50 in (38.1mm).


Room Temperature Application

STEP 1 Secure the two centermost transfer plates in order to track the chain

STEP 2 The transfer plates to the left and right should have fasteners centered in the mounting slots

Combs

⇒ A variety of styles and materials are available

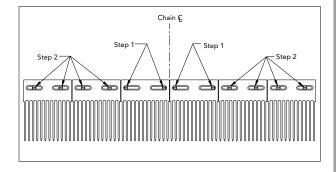

> Transfer Comb Installation

- Low-Temperature Application
- > High-Temperature Application
- > Room Temperature Application
- > Com

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Conveyor Design

- > Shafting Recommendations for Rotating Shafts
- > Recommended Materials
- > Suggested Hardness
- > Suggested Surface Finish
- > Straightness Tolerance
- > Twist Tolerance
- TIR Tolerance (Total Indicator Run-out)
- > Shafting Recommendations for Stationary Tail Shafts
- Recommended Materials
- > Suggested Hardness
- > Suggested Surface Finish

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

CONVEYOR DESIGN RECOMMENDATIONS

Shafting Recommendations for Rotating Shafts

Recommended Materials:

- ⇒ Carbon Steel best for obtaining high hardness and good finish; used only in non-corrosive environments
- ⇒ Stainless Steel good finish and chemical resistance; best for wash down or wet applications

Suggested Hardness:

- ⇒ Shaft material and finish affect sprocket bore wear; typically the harder the shaft, the better the wear
- ⇒ General recommendation is 25 to 30 Rc

Suggested Surface Finish:

- ⇒ Surface finish of the shaft affects wear; rough surfaces will abrade the sprocket bores
- ⇒ General recommendation is 63 μ-in Ra

Straightness Tolerance:


⇒ General recommendation is within 1/32 inch (0.8mm) over the shaft length

> Twist Tolerance:

⇒ General recommendation is maximum of 1/8 degree/ft (0.4 degree/m) of shaft length

TIR Tolerance (Total Indicator Run-out):

⇒ General recommendation is maximum of 1/32 inch (0.8mm)

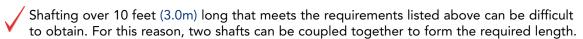

In using split shafts, it is important to ensure that the shafts are coupled in time with respect to the sprocket keyway or the flats of the square.

Shafting Recommendations for Stationary Tail Shafts

Recommended Materials:

- ⇒ Carbon Steel (dry environments only)
- ⇒ Stainless Steel

Suggested Hardness:

⇒ 25 to 30 Rc

Suggested Surface Finish:


⇒ 63 μ-in Ra

Rexnord recommends rotating shafts in bearings. If bearings are not used, the following are guidelines for operating MatTop sprockets on stationary shafts:

Sprocket	Max. Recommen	ded Chain Speed
Sprocket	FPM	МРМ
N - Acetal	0–50	0–15
UHMWPE	0–50	0–15
NS - Nylon, Split	0–100	0–30
LF Bushing (Idler Wheel)	0–300	0–90
Bronze Bushing	0–500	0–150
Bearings	Recommended for Speeds > 500	Recommended for Speeds > 150


MatTop Conveyor Design

Round Bore Sprockets

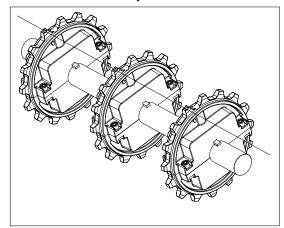

- ⇒ Use round bore sprockets on conveyors operating at room temperature
- ⇒ When installing the sprockets, make sure that all sprocket faces are positioned the same way on the shaft (shown in drawing)
- ⇒ After positioning all the sprockets in line with the sprocket tooth pockets in the chain, secure the sprockets with setscrews or set collars

Square and Hex Bore Sprockets

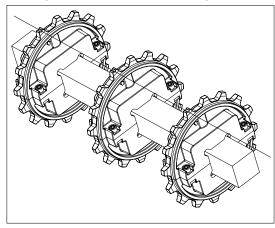


- ⇒ Use square bore sprockets on conveyors intended for use at elevated or lower temperatures (warmer, pasteurizer, cooler and freezer applications)
- ⇒ When installing the sprockets, make sure that all sprocket faces are positioned the same way on the shaft (shown in drawing)

- > Round Bore Sprockets
- > Square and Hex **Bore Sprockets**
- > Locking Methods

Locking Methods

⇒ It is generally recommended to lock the center sprocket(s) to the shaft using setscrews or set collars. The other sprockets should "float" axially.

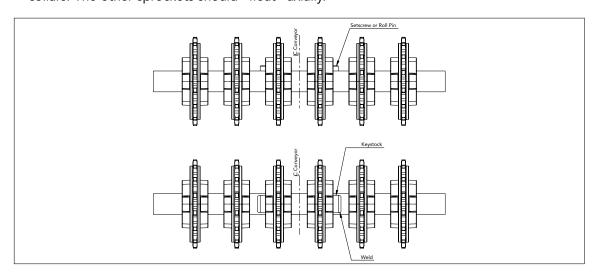

Close up view of the center sprocket(s) indicates the method of locking the sprocket to the shaft (i.e. keystock, roll pin, snap rings, set collars).



For 6085 chains, lock all sprockets in place.

ylatron is a registered ademark of Quadrant ngineering Plastics oducts.

All rights reserved.

> Keyway and **Setscrew Sizes Split Sprocket Bore** Nomenclature


CONVEYOR DESIGN RECOMMENDATIONS

Keyway and Setscrew Sizes

English:				
Shaft Diameter	Key Width (w)	Key Height (h)	Keyseat Depth (h/2)	Setscrew Size
> 9/16" to 7/8"	3/16"	3/16"	3/32"	1/4-20
> 7/8" to 1-1/4"	1/4"	1/4"	1/8"	3/8-16
> 1-1/4" to 1-3/8"	5/16"	5/16"	5/32"	3/8-16
> 1-3/8" to 1-3/4"	3/8"	3/8"	3/16"	3/8-16
> 1-3/4" to 2-1/4"	1/2"	1/2"	1/4"	1/2-13
> 2-1/4" to 2-3/4"	5/8"	5/8"	5/16"	1/2-13

Metric:

Shaft Diameter	Key Width (w)	Key Height (h)	Keyseat Depth (h/2)	Setscrew Size			
> 22mm to 30mm	8mm	7mm	3.5mm	M6 x 1			
> 30mm to 38mm	10mm	8mm	4mm	M8 x 1.25			
> 38mm to 44mm	12mm	8mm	4mm	M10 x 1.5			
> 44mm to 50mm	14mm	9mm	4.5mm	M10 x 1.5			
> 50mm to 58mm	16mm	10mm	5mm	M12 x 1.75			
> 58mm to 65mm	18mm	11mm	5.5mm	M12 x 1.75			

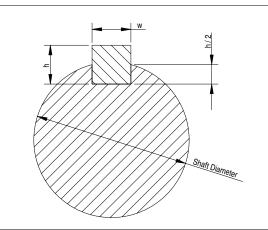

English keyed round bore sprockets are available with one setscrew as standard. Additional setscrews can be provided upon request. Metric keyed round bore sprockets are not supplied with a setscrew as standard.



If multiple strands share a tail shaft, key only one sprocket and allow others to rotate. Collars should be utilized to prevent lateral movement.

Split Sprocket Bore Nomenclature Shaft Ready — Tight fit on the shaft with a keyway and setscrew.

Plain Bore — Same tight fit bore as a shaft ready bore, but without a keyway and setscrew.

Idler Bore — Round bore with a clearance fit (no keyway or setscrew). Designed to spin freely on the shaft.

Rough Stock Bore — Wide tolerance bore used for work in process. Not for use on any shaft. Must be further machined for actual use.

Over Sized Bore — Round bore with a slightly loose fit on the shaft with keyway but no setscrew. Designed to move laterally on the shaft during setup and still transmit torque through the keyway as a drive sprocket in the actual application. Not recommended for axial float in thermal applications.

Rexnord, TableTop, MatTop, HP, UHS, PS, Ilatinum Series, DTS, osiClean, TwistLock, Iositrack, RexFlex and DynamicTransfer ystem are trademarks f Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.



MatTop Conveyor Design

>

Available Chain Widths (MTW vs Standard vs Nonstandard)

Availab	MTW	VVICITIS (IVI I VV VS STANCIARCI VS INONSTANCIARCI) Standard (uncut) Nonstandard (cut) Accessories														
								 								
Chain Series	Molded to Width Chains	Minimum Chain Width		Chain Width Increment		Minimum Chain Width		Chain Width Increment		Pushers	Curved Pushers	Buckets	Sideguards	DTS®-C	Hold Down TAB's	Vacuum Holes
		(in)	(mm)	(in)	(mm)	(in)	(mm)	(in)	(mm)	ers	ushers	ets	ards	-C	ın TAB's	Holes
1000 FG/FT Metric	84mm	3.35	85	3.35	85	1.97	50	0.20	5							
1000 FFTP/FFGP FreeFlow Metric	85mm	3.35	85	3.35	85	1.97	50	0.20	5							
1000 RRR	38mm	<u> </u>	_	_	_	_	_	_	_							\vdash
1015	24in	24	609.6	_	_	4 (1/2 in	crements		ncrements							
	2-111			,	450.4		o 24)		d wider)	-		-				_
1503	3in, 4.5in, 6in,	12	304.8	6	152.4	6	152.4	3	76.2							+-
1505 / 1506	38mm, 46mm	3	76.2	3	76.2	4.5	114.3	0.75	19.05	•			-			
1505 RubberTop®	-	3	76.2	3	76.2	4.5	114.3	0.75	19.05							_
1505 DTS® (w/PT) 1553	6.3in -	10.04	255	3.35	85	_	-	_	_							\vdash
1625B-TAB		12	304.8	3	76.2	_	-	-	-							
2011	-	8	203.2	2	50.8	6	152.4	2/3	16.93	-	•	•	•			\perp
2015 2016		8	152.4 203.2	2	50.8 50.8	4 2/3	118.53 152.4	2/3 2/3	16.93 16.93	-	•	•	•			+-
3000		4.5	114.3	1.5	38.1	-	132.4		10.73	-	•	-	•			\vdash
3125 / 3129	4in, 8in	4	101.6	4	101.6	6	152.4		2				-			
3185	3.2in	-	-	-	-	-	-	-	-							_
3185 RubberTop® 4705	3.2in 6in	6	- 152.4	6	- 152.4	2	50.8	– Δny widt	h possible	•		-	-		-	-
4705	6in	6	152.4	6	152.4	2	50.8		n possible n possible	-		1	÷		-	† -
4707	6in	6	152.4	6	152.4	2	50.8	1	25.4				Ė	•		
5705 / 5706	3.25in, 4.5in, 6in, 7.5in, 15in	6	152.4	3	76.2	3	76.2	1	25.4	•						
5705 RubberTop®	-	6	152.4	3	76.2	3	76.2	1	25.4							
5705 / 5706 (w/PT) 5705 DTS® (w/PT)	3.25in, 4.5in	-	-	-	-							-				₩
5935	6.3in 3in	9	228.6	3	76.2	3	76.2	0.75	19.05				-		-	-
5936	-	18	457.2	6	152.4	2.25	57.15	0.75	19.05	-			-		-	
5966	-	18	457.2	6	152.4		/16 in ossible)		Rexnord eering	•			-			
5995	-	9	228.6	3	76.2	3	76.2	0.5	12.7							
5996		18	457.2	6	152.4	4.5	114.3	0.5	12.7	•			-	_		₩
5997 5998		18 18	457.2 457.2	6	152.4 152.4	4.5 5	114.3 127	0.5	12.7 12.7					•		+
6085	3in, 6in	3	76.2	3	76.2	3 3/5	91.44	3/5	15.24	-			-			T
6938	3in, 6in	3	76.2	3	76.2	3.75	95.25	0.75	19.05	-						\perp
6995 / 6999 6995H / 6999H		18 12	457.2 304.8	3	152.4 76.2	5 9	127 228.6	0.5	12.7 76.2	•			-			\vdash
7526 Metric	_	10.04	255	3.34	85	6.69	170	0.66	17							+
7703	-	9	228.6	3	76.2		possible)	1	25.4							
7705 / 7706	3.25in, 4.5in, 6in, 7.5in, 15in	6	152.4	3	76.2	5in (3in	possible)	0.5	12.7							L
7705 (w/PT)	3.25in, 4.5in, 7.5in, 84mm	-	-	-	-	-	-	_	-							
7706 (w/PT)	3.25in, 4.5in, 7.5in	-	-	-	-	-	-	-	-							
7705 DTS [®] (w/PT) 7705 DTS [®] -R (w/PT)	6.3in, 9.3in 6.3in, 9.3in	-	_	_	-	-	_	_	_							\vdash
7705 / 7706 Metric	-	10.04	255	3.34	85	5.59	142	Contact	Rexnord							
7705 Metric (w/PT)	_	10.04	255	3.34	85	5.59	142	Contact	eering Rexnord							\vdash
7705 RubberTop®		9	228.6	3.34	76.2	9.5	241.3	Engin 0.5	eering 12.7	-						\vdash
7705 Rubberlop [™]	4in, 6in	9	228.6	3	76.2	9.5	241.3	0.5	12.7			1				+
7708	-	9	228.6	3	76.2		possible)	0.5	12.7							
7743	- 6in, 12in, 15in,	9	228.6	3	76.2	-	-	-	-						Bearing,	_
7956	18in, 24in, 30in	-	-	-	- 40.7		-	-	-						GT, TAB	₩
7963/7966 8503	12in, 15in –	12 3	304.8 76.2	0.5	12.7 76.2	_	-	-	_							+
8505	2.33in, 3.25in, 85mm, 4.5in, 6in, 7.5in, 12in	9	228.6	3	76.2	2 1/3	59.26	1/3	8.5	-			•		•	•
8505 DTS® (w/PT)	6.3in, 9.3in	-	-	-	-	-	-	-	-							\blacksquare
8505 Metric 8505 RubberTop®		10.04	255 228.6	3.34	85 76.2	3.34 2 1/3	85 59.26	1/3	8.5 8.5			1			-	\vdash
8506	2.33in, 3.25in, 85mm, 4.5in, 6in, 7.5in, 12in	9	228.6	3	76.2	2 1/3	59.26	1/3	8.5	-					•	
8505 / 8506 (w/PT)	2.33 in, 3.25in, 85mm, 4.5in, 6in, 7.5in, 12in	9	228.6	3	76.2	2 1/3	59.26	1/3	8.5	•			•		•	
8507	-	18	457.2	6	152.4	3	76.2	0.5	12.7							
9608 9217, 9227, 9237 *	<u> </u>	18 36	457.2 914.4	3	152.4	5	127	0.5	12.7	-	-	1		_		+
7211,7221,7231 ^	_	30	714.4		76.2	_	_		_					•		

> Available Chain Widths (MTW vs Standard vs Nonstandard)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved

^{*} Actual Chain Width = Effective (or Nominal) Chain Width (Multiples of 3 in [76.2 mm] + 0.75 in [19.0mm])

MatTop Sprocket Locations

SPROCKET LOCATIONS

1000 Chain Series (FT, FTDP, FFTP, FG, FGDP, FFGP)
See 1000 Series Design Manual

> 1000 Chain Series (FT, FTDP, FFTP, FG, FGDP, FFGP)


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved

SPROCKET LOCATIONS

1010 Chain Series (1015)

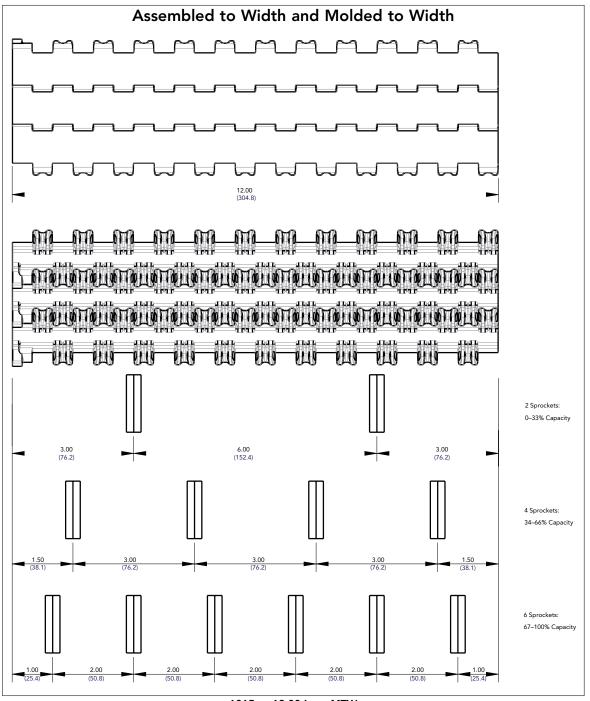

1015 — 12.00 in — MTW

MatTop Sprocket Locations

- > 1010 Chain Series (1015)
- > Assembled to Width — 1015
- > 1015 12.00 in -MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

MatTop Sprocket Locations

SPROCKET LOCATIONS

1500 Chain Series (1503/1505/1506)

- > 1500 Chain Series (1503/1505/ 1506)
- > Assembled to Width — 1503/ 1505/1506
- > 1503 12.00 in —

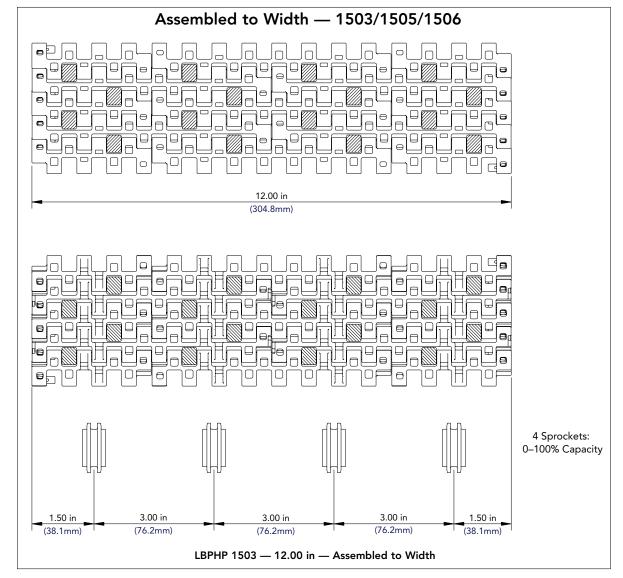

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

SPROCKET LOCATIONS

MatTop Sprocket Locations

1500 Chain Series (1553)

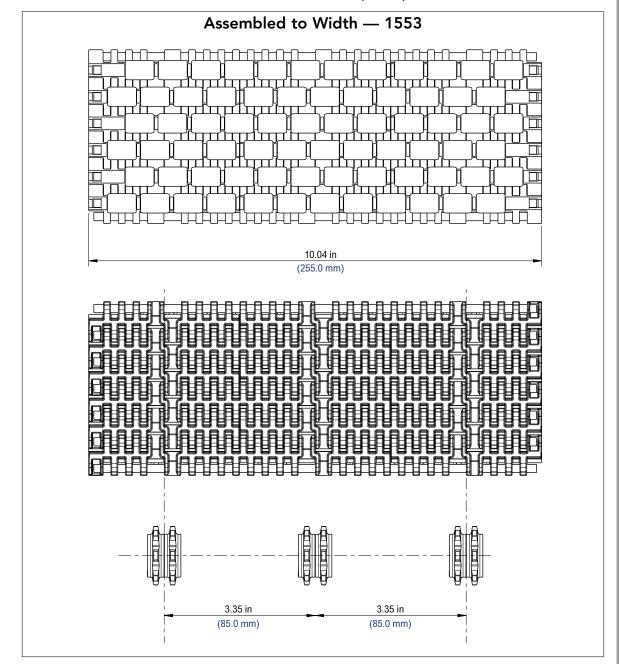

> 1500 Chain Series (1553)

> Assembled to Width — 1553

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved


MatTop Sprocket Locations


SPROCKET LOCATIONS

1500 Chain Series (1505/1506)

- > 1500 Chain (1505/1506)
- > Molded to Width -1505/1506
- > 1505 6.00 in MTW
- > 1505 4.50 in MTW > 1505 3.00 in MTW

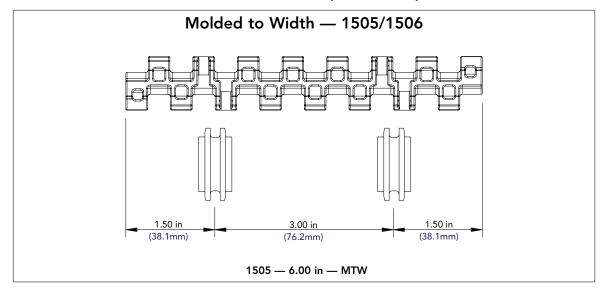

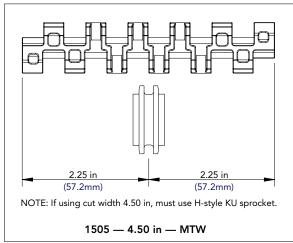

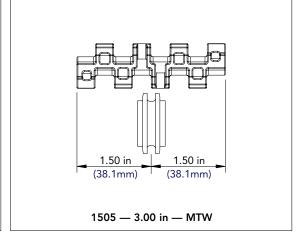


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

2010 Chain Series (2011/2015/2016)

Assembled to Width — 2011/2015/2016

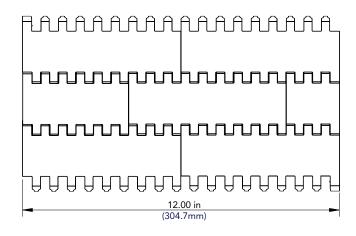

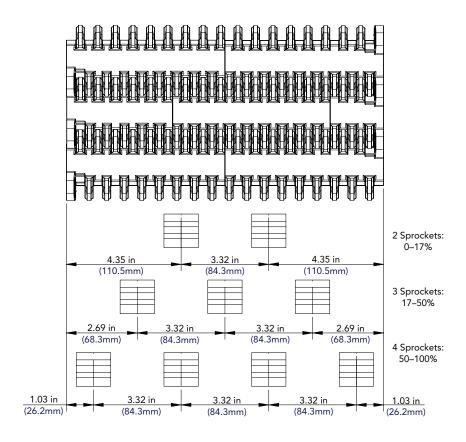

2015 — 12.00 in — Assembled to Width

> 2010 Chain Series (2011/ 2015/2016)

> Assembled to Width — 2011/ 2015/2016

> 2015 — 12.00 in — Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Sprocket Locations

SPROCKET LOCATIONS

3000 Chain Series (3003/3004)

> 3000 Chain **Series (3003/** 3004)


- > Assembled to Width 3003/3004

3004 — 12.00 in — Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

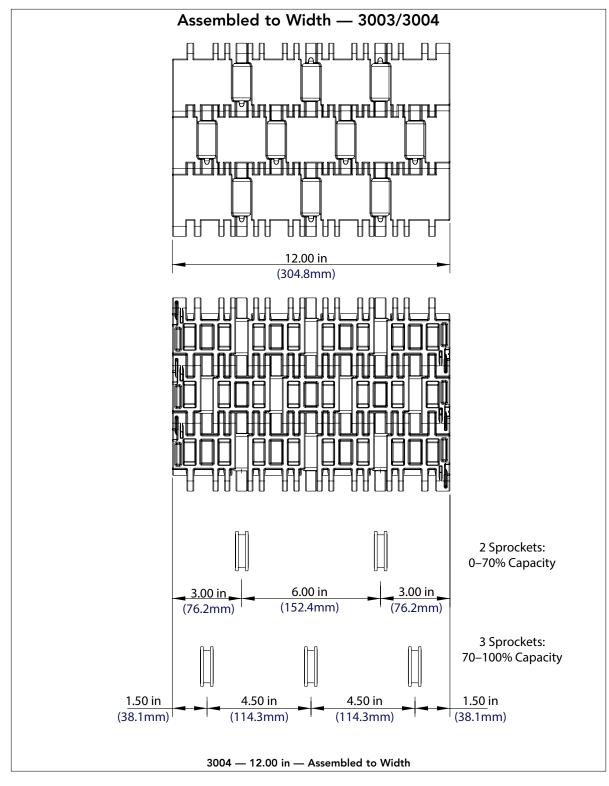



SPROCKET LOCATIONS

3120 Chain Series (3125/3129)

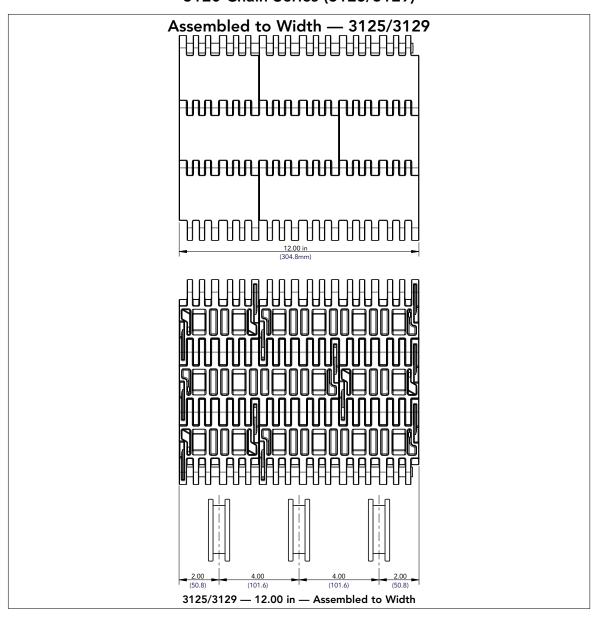

Molded to Width — 3125/3129

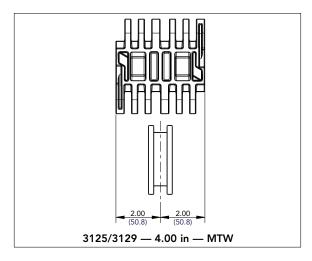

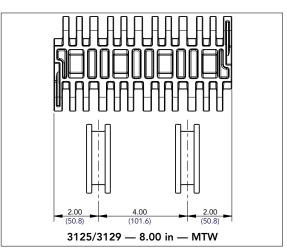

MatTop Sprocket Locations

- > 3120 Chain Series (3125/ 3129)
- > Assembled to Width 3125/3129
- > 3125/3129 12.00 in — Assembled to Width
- > Molded to Width 3125/3129
- > 3125/3129 4.00 in — MTW
- > 3125/3129 8.00 in — MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains


Contact Rexnord Application Engineering for more information 1.262.376.4800

MatTop Sprocket Locations

SPROCKET LOCATIONS

4700 Chain Series Using 5700 Sprockets (4705/4706)

- > 4700 Chain Series Using 5700 Sprockets (4705/4706)
- > Assembled to Width — 4705/4706
- > 4705 12.00 in Assembled to Width
- > Molded to Width -4705/4706
- > 4505 6.00 in MTV

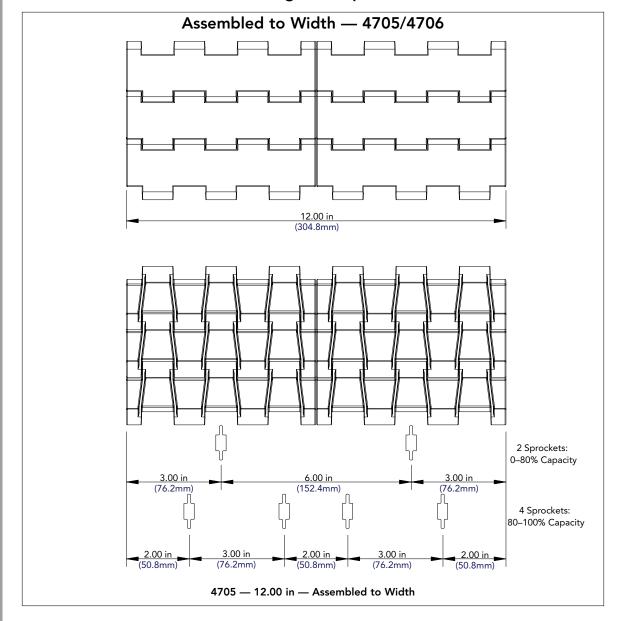


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains 🖺


Molded to Width — 4705/4706

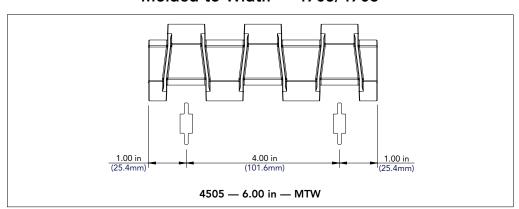

SPROCKET LOCATIONS

MatTop Sprocket Locations

4700 Chain Series Using 5700 Sprockets (4707)

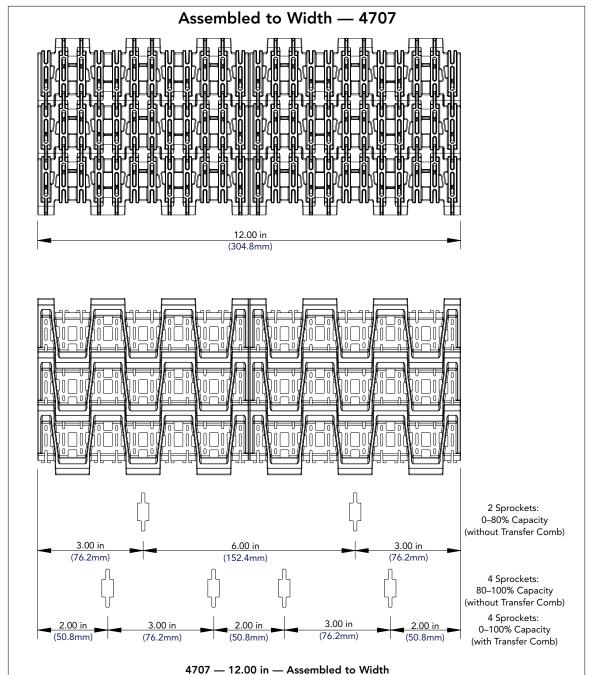

> 4700 Chain Series Using 5700 Sprockets (4707)

- Assembled to Width — 4707
- > 4707 12.00 in Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Sprocket Locations

- > 4700 Chain Series Using 820 Sprocket (4705/4706)
- Assembled to Width 4705/4706
- > 4705 12.00 in Assembled to Width
- > Molded to Width -


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

SPROCKET LOCATIONS

4700 Chain Series Using 820 Sprocket (4705/4706)

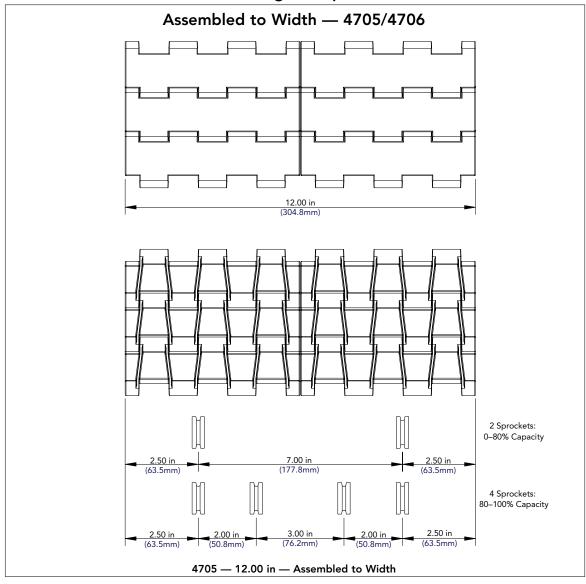


Molded to Width — 4705/4706

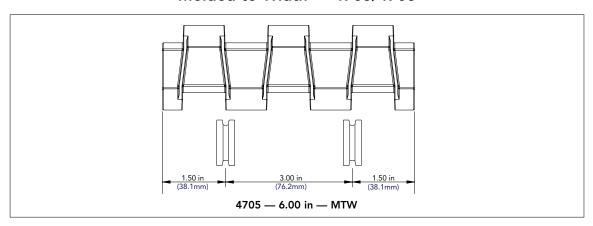

SPROCKET LOCATIONS

MatTop Sprocket Locations

4700 Chain Series Using 820 Sprockets (4707)

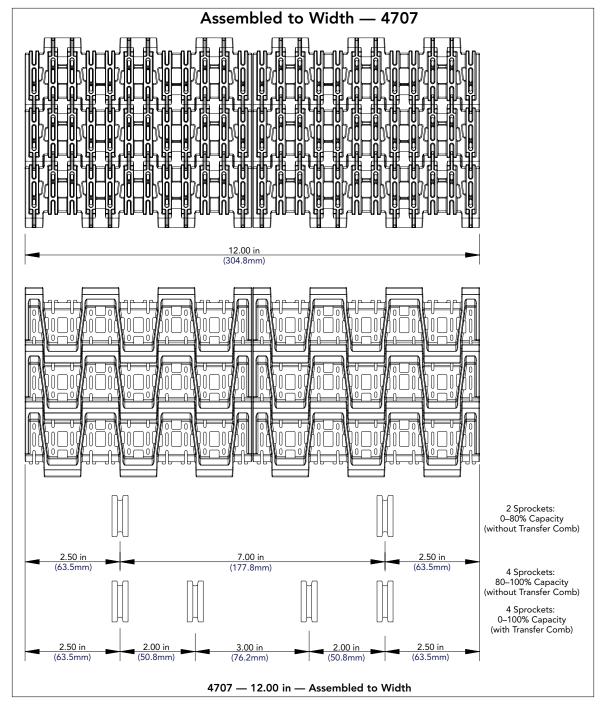

> 4700 Chain Series Using 820 Sprockets (4707)

> Assembled to Width — 4707

> 4707 — 12.00 in — Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > 5700 Chain Series Using 5700 Sprockets (5705/5706)
- > Assembled to Width — 5707/5706
- > 5705 12.00 in Assembled to Width
- > Molded to Width 5705/5706
- > 5705 15.00 in MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


MatTop Chains

SPROCKET LOCATIONS

5700 Chain Series Using 5700 Sprockets (5705/5706)

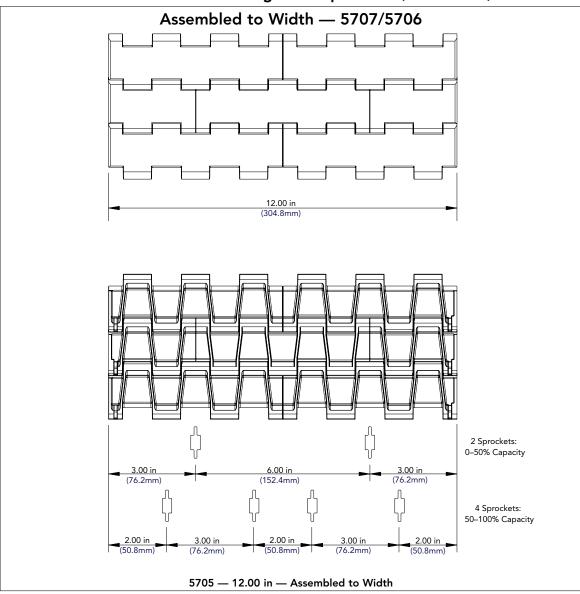


Molded to Width — 5705/5706

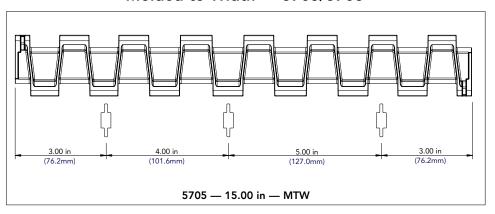






MatTop Sprocket Locations

5700 Chain Series Using 5700 Sprockets (5705/5706)

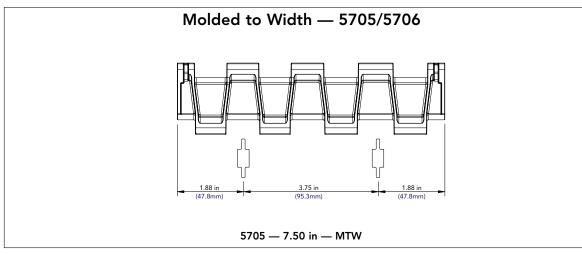

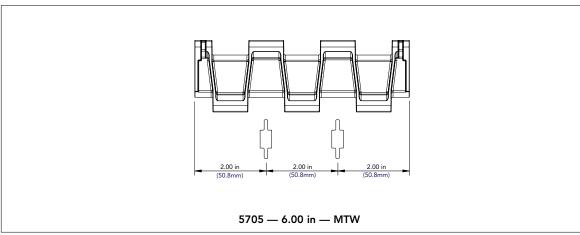

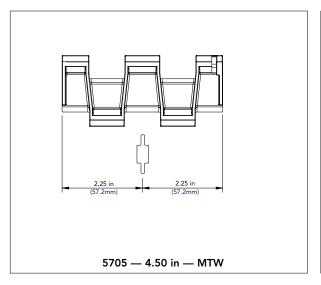

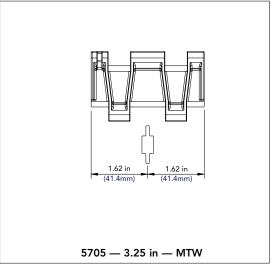

> 5700 Chain Series Using 5700 Sprockets (5705/5706)

- > Molded to Width 5705/5706
- > 5705 7.50 in MTW
- > 5705 6.00 in MTW
- > 5705 4.50 in MTV
- > 5705 3.25 in MT\

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > 5700 Chain Series with Positrack Tracking Guide Using 5700
- > Molded to Width 5705/5706

Sprockets (5705/5706)

- > 5705 4.50 in MTW Positrack Tracking Guides
- > 5705 3.25 in MTW Positrack Tracking Guides

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

MatTop Chains


SPROCKET LOCATIONS

5700 Chain Series with Positrack Tracking Guide Using 5700 Sprockets (5705/5706)

Molded to Width — 5705/5706

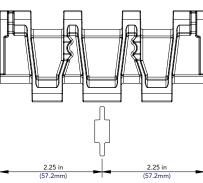


5705 — 4.50 in — MTW Positrack Tracking Guides

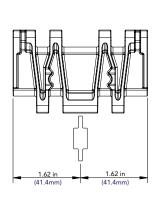


5705 — 3.25 in — MTW Positrack Tracking Guides


MatTop Sprocket Locations

5700 Chain Series Using 820 Sprockets (5705/5706)

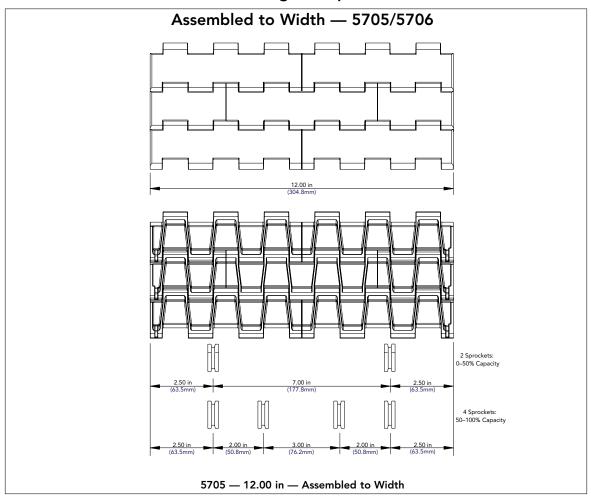

Molded to Width — 5705/5706

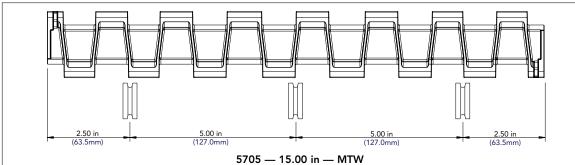

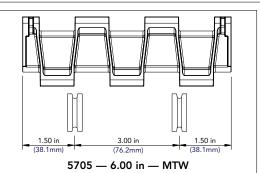

820 Style Sprockets not recommended for 5705 MTW 3 in and 4.50 in (sprockets will be off center)

Contact Rexnord Application Engineering for more information 1.262.376.4800

> 5700 Chain Series Using 820 Sprockets (5705/5706)

- > Assembled to Width — 5705/5706
- > 5705 12.00 in Assembled to Width
- > Molded to Width 5705/5706
- > 5705 15.00 in MTW
- > 5705 6.00 in MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

SPROCKET LOCATIONS

5930 Chain Series (5935/5936)



- > Assembled to Width — 5935/5936
- > 5935 12.00 in Assembled to Width

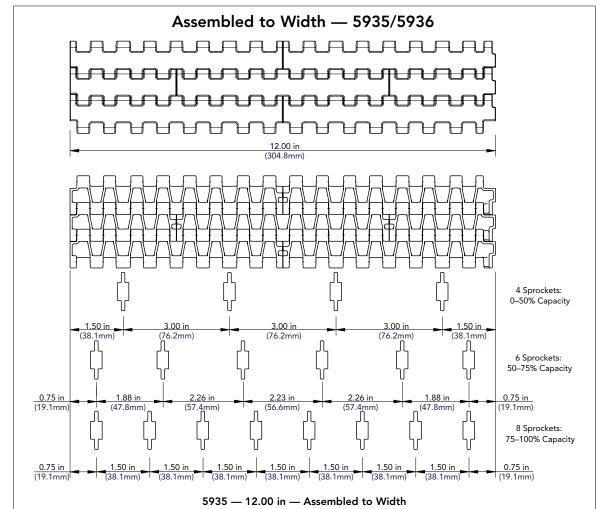

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

5936 — 12 in Assembled to Width chain has a different bricking pattern than above, but has the same sprocket locations.




Do not position sprockets at seam between link modules.



MatTop Sprocket Locations

5930 Chain Series (5935)

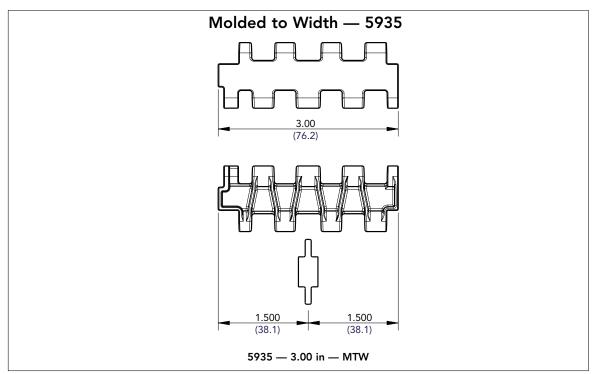

> 5930 Chain Series (5935)

> Molded to Width — 5935MTW

> 5935 — 3.00 in — MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


t

SPROCKET LOCATIONS

5960 Chain Series (5966)



- Assembled to Width 5966
- > 5966 12.00 in Assembled to Width

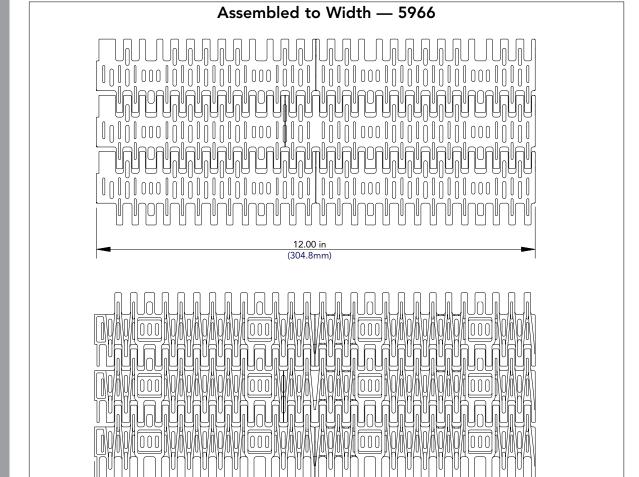

9.00 in

(228.6mm)

3.00 in

(76.2mm)

5966 — 12.00 in — Assembled to Width

3.00 in

(76.2mm)

3.00 in

(76.2mm)

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

1.50 in

(38.1mm)

1.50 in

(38.1mm)

2 Sprockets: 0–50% Capacity

1.50 in


(38.1mm) 4 Sprockets:

(38.1mm)

50–100% Capacity 1.50 in



5990 Chain Series (5995/5998/5998HD)

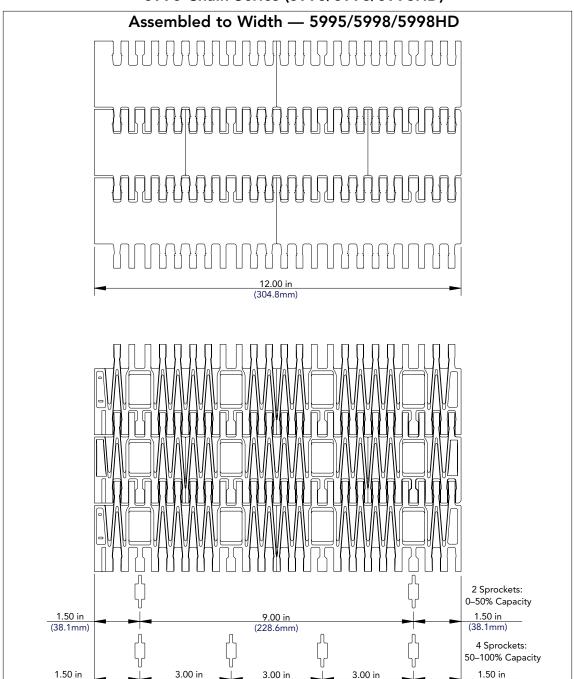

i

(38.1mm)

5998 and 5998HD — 12 in Assembled to Width chains have a different bricking pattern than above but have the same sprocket locations.

5995 — 12.00 in — Assembled to Width

(76.2 mm)

(76.2mm)

(76.2mm)

MatTop Sprocket Locations

- > 5990 Chain Series (5995/5998/ 5998HD)
- > Assembled to Width — 5995/5998/5998HD
- > 5995 12.00 in Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

(38.1mm)

SPROCKET LOCATIONS

- > Assembled to
- Width 5996

> 5990 Chain **Series (5996)**


> 5996 — 12.00 in — Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

5990 Chain Series (5996)

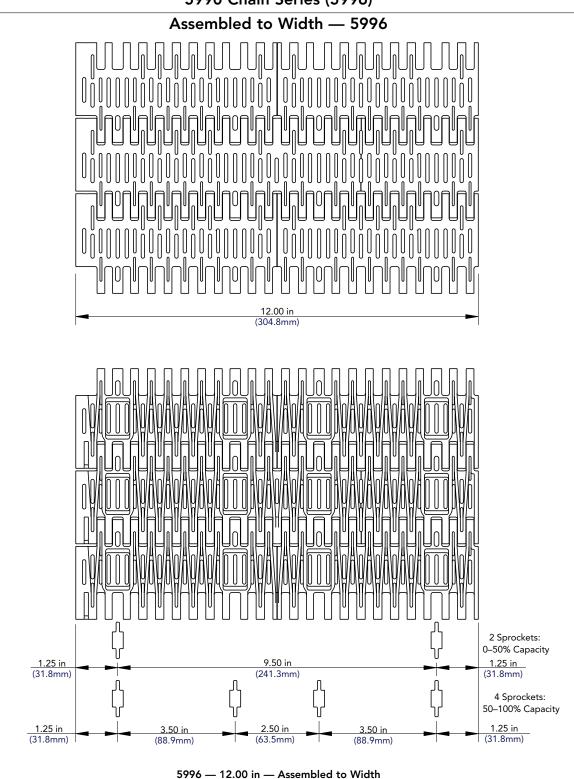

MatTop Sprocket Locations

5990 Chain Series (5997)

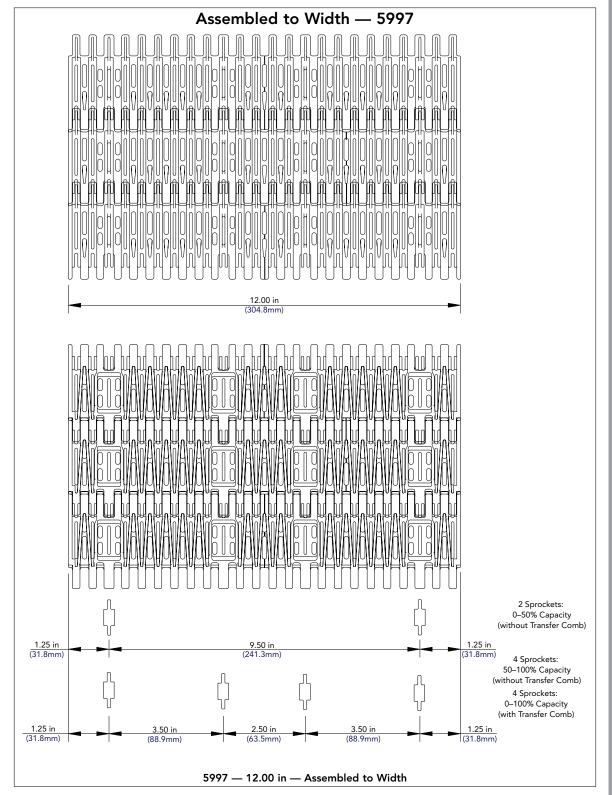

> 5990 Chain Series (5997)

- Assembled to Width— 5997
- > 5997 12.00 in Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

SPROCKET LOCATIONS


6080 Chain Series (6085)

- > 6080 Chain Series (6085)
- Assembled to
- 6085 12.00 in Assembled to Width

Width — 6085

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

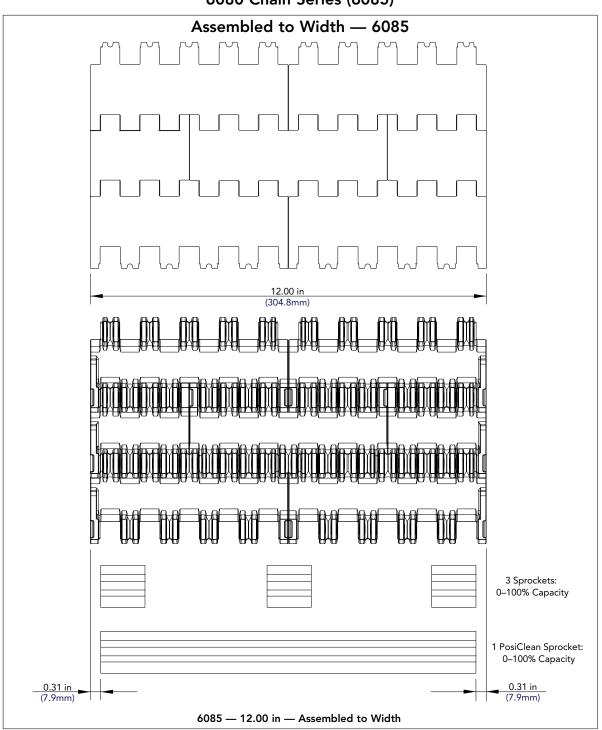





6085 has no sprocket pockets. Sprockets can be placed anywhere along the width of the chain inside the 0.31 in (7.9mm) edge dimensions.



6080 Chain Series (6085)

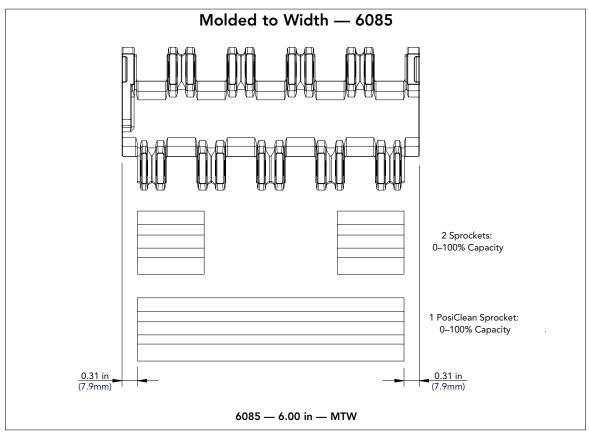

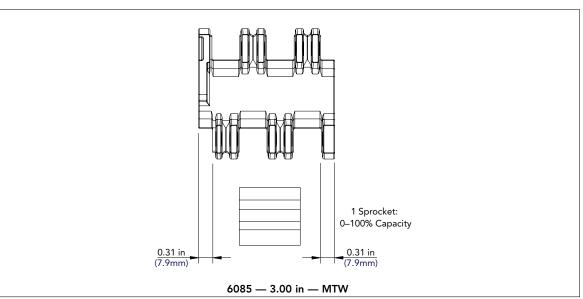



6085 has no sprocket pockets. Sprockets can be placed anywhere along the width of the chain inside the 0.31 in (7.9mm) edge dimensions.

MatTop Sprocket Locations

- > 6080 Chain Series (6085)
 - Assembled to Width 6085
- > 6085 6.00 in MTW
- > 6085 3.00 in MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved

- > 6930 Chain Series (6938)
- Assembled to Width — 6938
- 6938 12.00 in Assembled to Width
- > Molded to Width -

SPROCKET LOCATIONS

6930 Chain Series (6938)

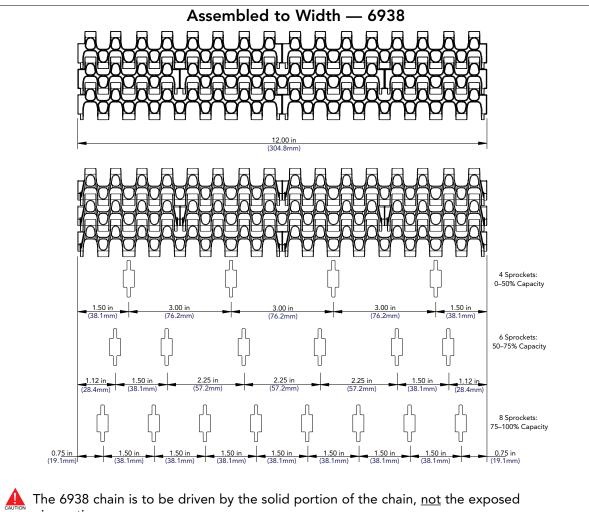

pin portion.


6938 — 12.00 in — Assembled to Width


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


Molded to Width — 6938

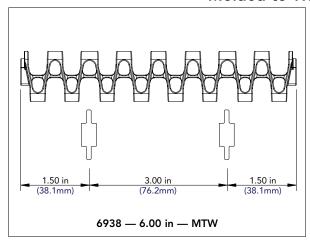

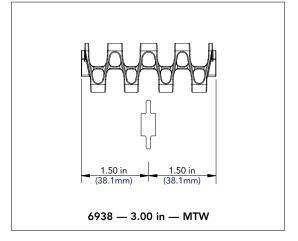

MatTop Sprocket Locations

6990 Chain Series (6995/6999)

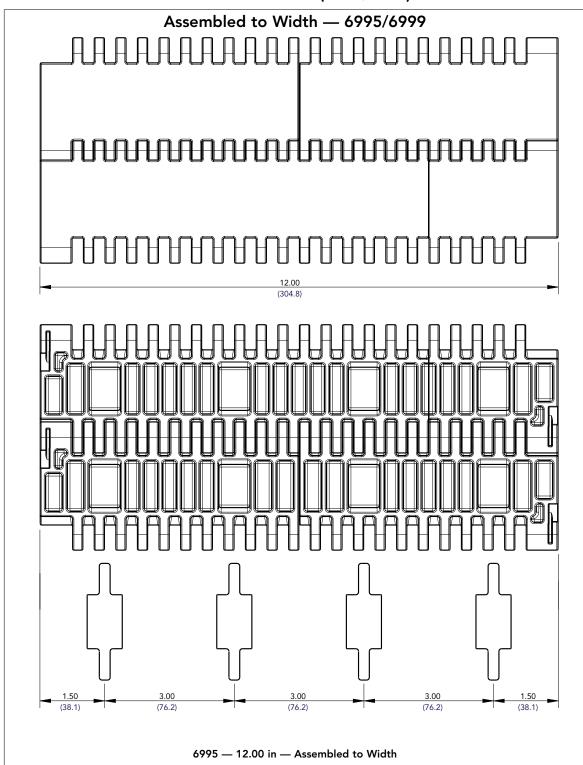

> 6990 Chain Series (6995/6999)

> Assembled to Width — 6995/6999

> 6995 — 12.00 in — Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > 6990 Chain Series (6995H4/ 6995H8/ 6999H4/ 6999H8)
- > Assembled to Width and Molded to Width — 6995H4/6999H4
- > 6995H4 12.00 in MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains 📑

SPROCKET LOCATIONS

6990 Chain Series (6995H4/6995H8/6999H4/6999H8)

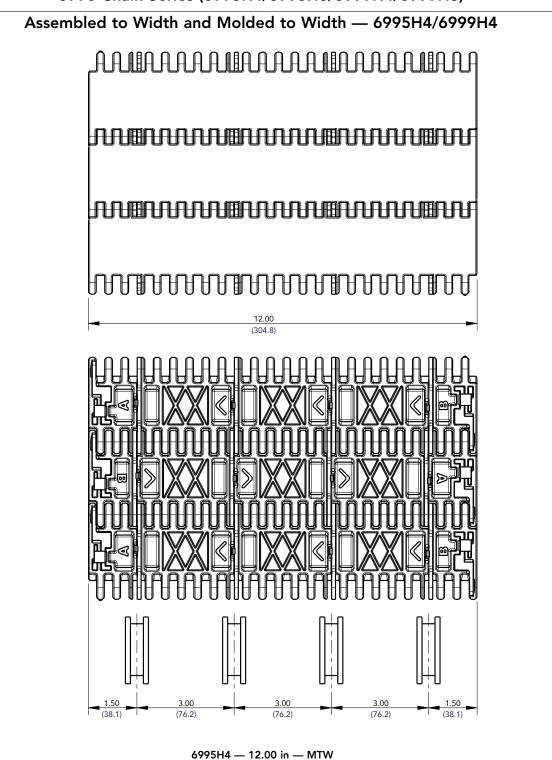

MatTop Sprocket Locations

6990 Chain Series (6995H4/6995H8/6999H4/6999H8)

Molded to Width — 6995H8/6999H8 — 12.00 in ARARARARARARARARA 12.00 (304.8mm)

> 6990 Chain Series (6995H4/ 6995H8/ 6999H4/ 6999H8)

- > Molded to Width 6995H8/6999H8 — 12.00 in
- > 6995H8 12.00 in —

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

6995H8 — 12.00 in — MTW

1.50

(38.1mm) Typical

0.75

(19mm)

0.75 (19mm)

> 6990 Chain Series (6995H4/ 6995H8/ 6999H4/

6999H8)

- > Assembled to Width — 6995H8/6999H8 – 15.00 in
- > 6995H8 15.00 in Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains


SPROCKET LOCATIONS

6990 Chain Series (6995H4/6995H8/6999H4/6999H8)

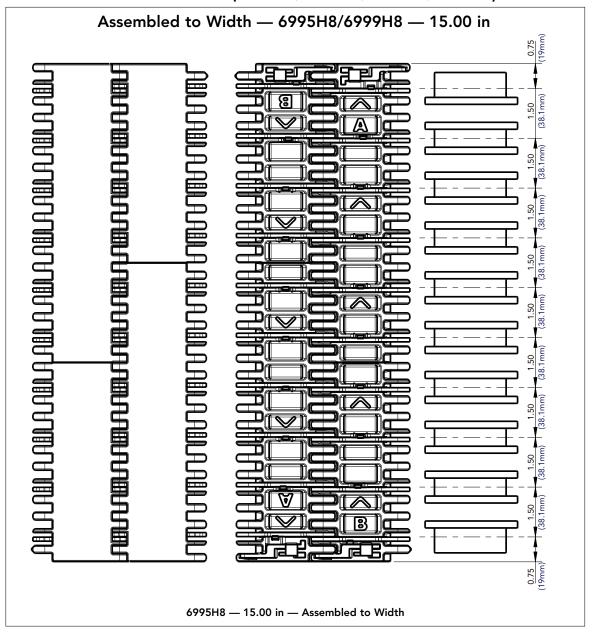

MatTop Sprocket Locations

6990 Chain Series (6995H4/6995H8/6999H4/6999H8)

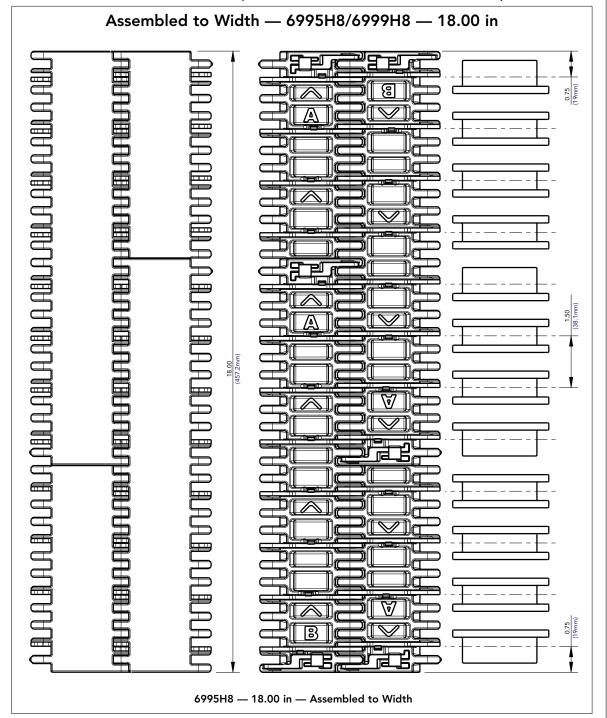

> 6990 Chain Series (6995H4/ 6995H8/ 6999H4/ 6999H8)

- > Assembled to Width — 6995H8/6999H8 — 18.00 in
- > 6995H8 18.00 in Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

SPROCKET LOCATIONS


6990 Chain Series (6995H4/6995H8/6999H4/6999H8)

- > 6990 Chain Series (6995H4/ 6995H8/ 6999H4/ 6999H8)
- > Assembled to Width — 6995H8/6999H8 – 21.00 in
- > 6995H8 21.00 in Assembled to Width


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

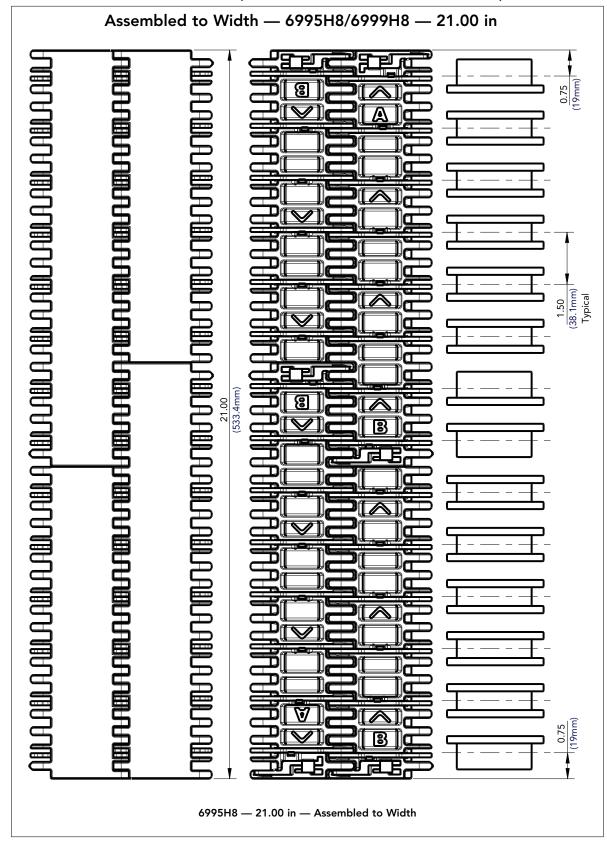

6990 Chain Series (6995H4/6995H8/6999H4/6999H8)

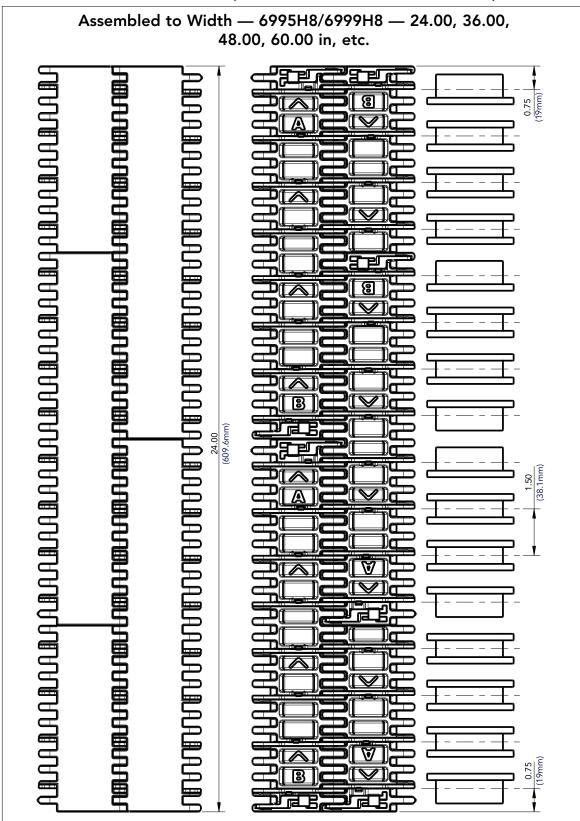

> 6990 Chain Series (6995H4/ 6995H8/ 6999H4/ 6999H8)

- Assembled to Width — 6995H8/6999H8 — 24.00, 36.00, 48.00, 60.00 in, etc.
- > 6995H8 24.00 in Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

6995H8 - 24.00 in - Assembled to Width

SPROCKET LOCATIONS


6990 Chain Series (6995H4/6995H8/6999H4/6999H8)

- > 6990 Chain Series (6995H4/ 6995H8/ 6999H4/ 6999H8)
- > Assembled to Width — 6995H8/6999H8 – 27.00 in
- > 6995H8 27.00 in Assembled to Width


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved

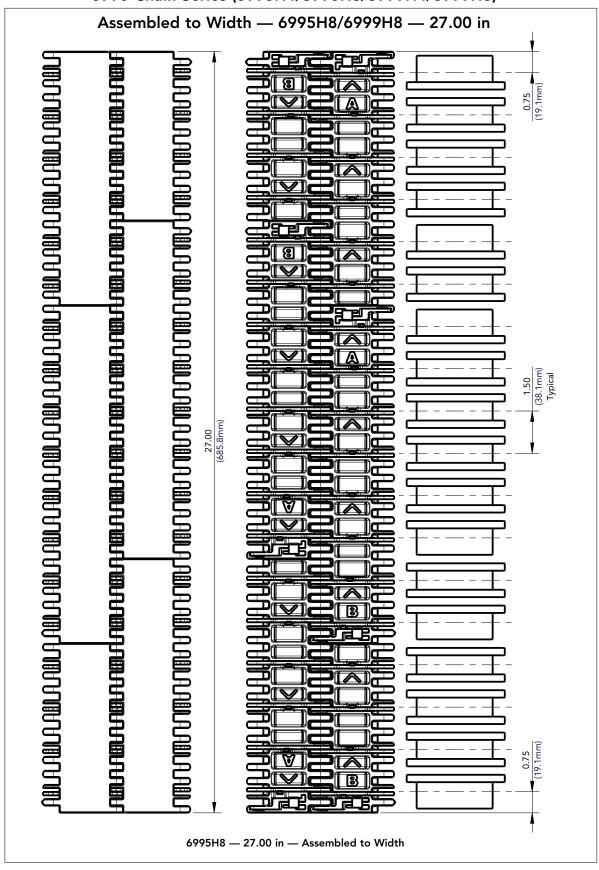

6990 Chain Series (6995H4/6995H8/6999H4/6999H8)

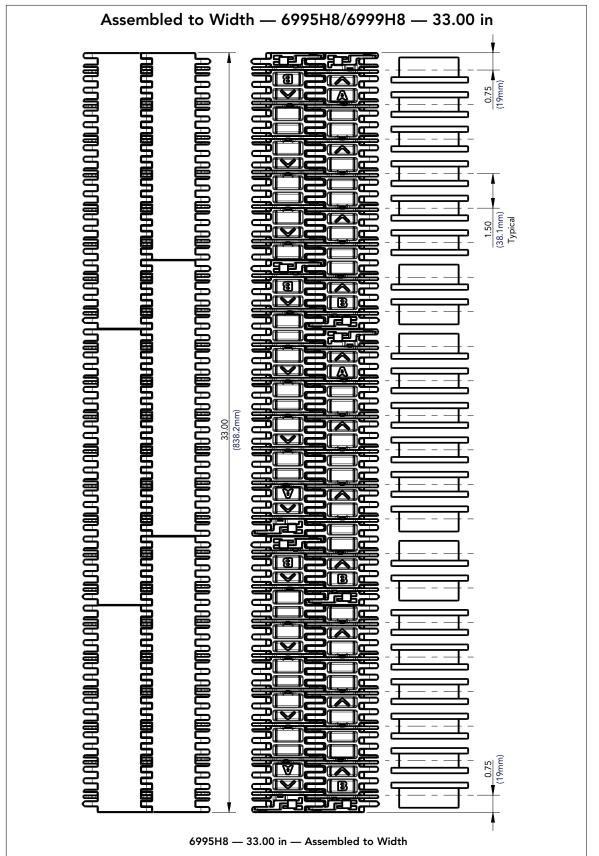

> 6990 Chain Series (6995H4/ 6995H8/ 6999H4/ 6999H8)

Assembled to
 Width —
 6995H8/6999H8 —
 33.00 in

> 6995H8 — 33.00 in – Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

SPROCKET LOCATIONS


6990 Chain Series (6995H4/6995H8/6999H4/6999H8)

- > 6990 Chain (6995H4/ 6995H8/ 6999H4/ 6999H8)
- Assembled to 6995H8/6999H8 -39.00, 51.00, 63.00, 75.00 in, etc.
- 6995H8 39.00 in -Assembled to Width


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

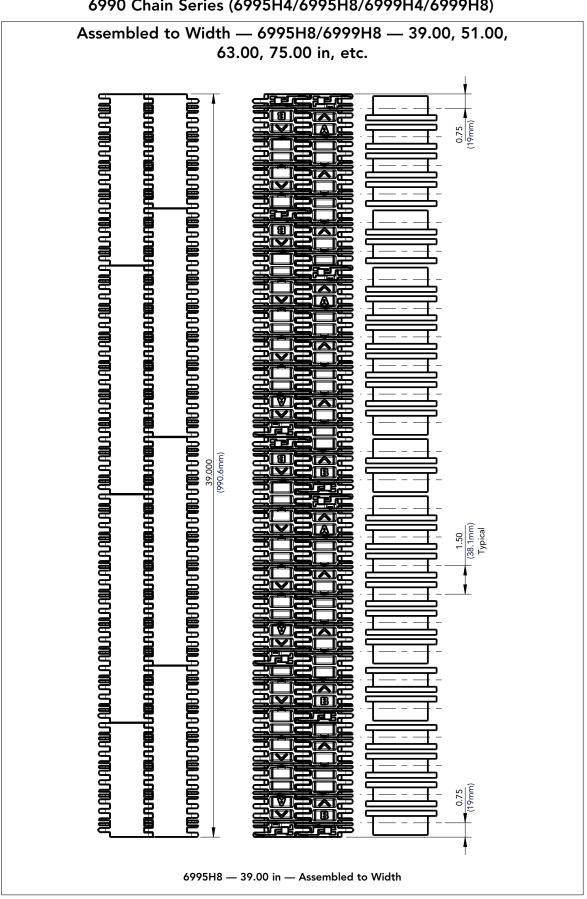

6990 Chain Series (6995H4/6995H8/6999H4/6999H8)

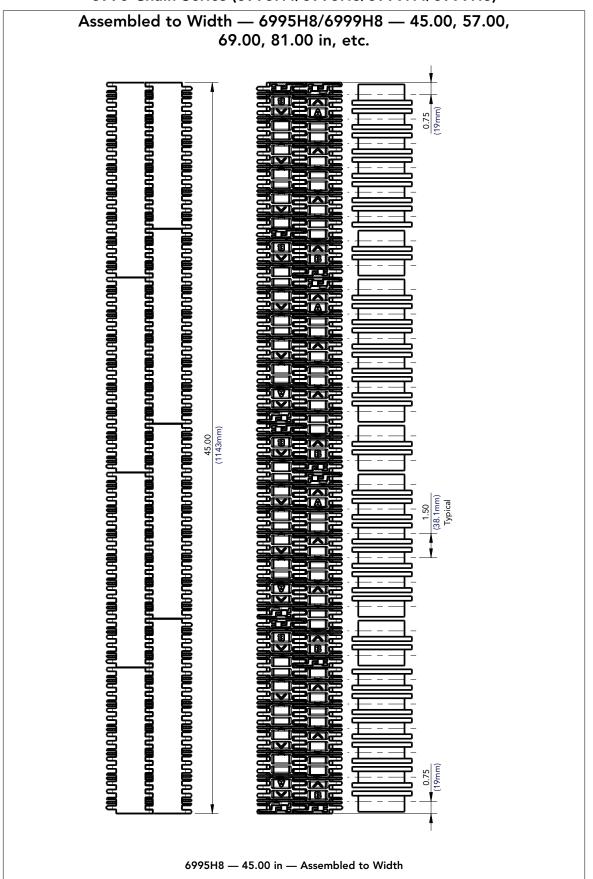

> 6990 Chain Series (6995H4/ 6995H8/ 6999H4/ 6999H8)

Assembled to
Width —
6995H8/6999H8 —
45.00, 57.00, 69.00,
81.00 in, etc.

> 6995H8 — 45.00 in – Assembled to Width


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

SPROCKET LOCATIONS

7526 Chain Series (7526)

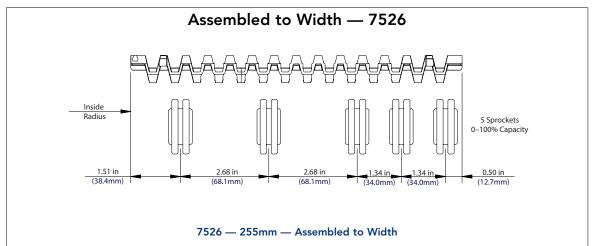

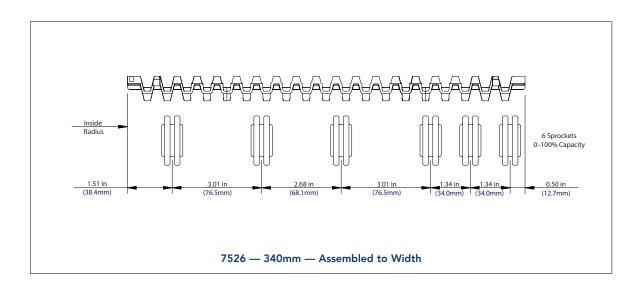

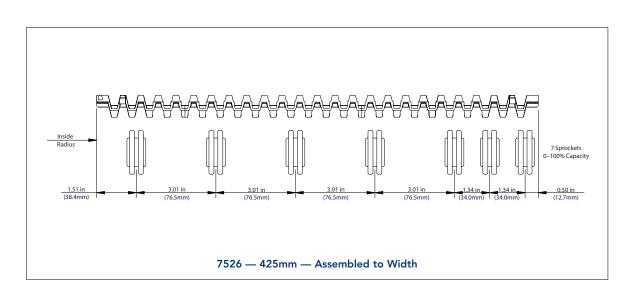

> 7526 Chain Series (7526)

Assembled to Width — 7526

> 7526 — 255mm — Assembled to Width

> 7526 — 340mm — Assembled to Width

> 7526 — 425mm — Assembled to Width


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

MatTop Sprocket Locations

7700 Chain Series (7705/7706)

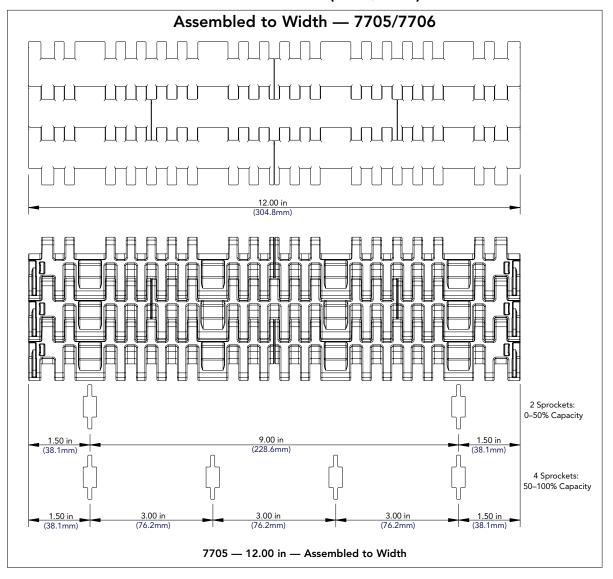

Molded to Width — 7705/7706

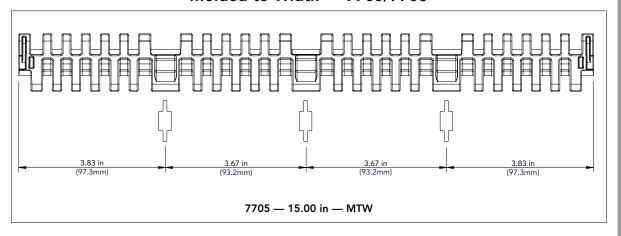

7705 MTW and 7705 ATW cannot couple.

> 7700 Chain Series (7705/ 7706)

> Assembled to _____Width_— 7705/7706

> 7705 — 12.00 in — Assembled to Width

> Molded to Width — 7705/7706

> 7705 — 15.00 in – MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


- > 7700 Chain Series (7703/ 7705SG/7743)
- Assembled to Width 7703
- > 7703 Assembled to
- > Molded to Width 7705SG
- > 7705SG 4.00 in MTW
- > 7705SG 6.00 in —
- > Assembled to Width 7743
- > 7743 Assembled to Width


SPROCKET LOCATIONS

7700 Chain Series (7703/7705SG/7743)

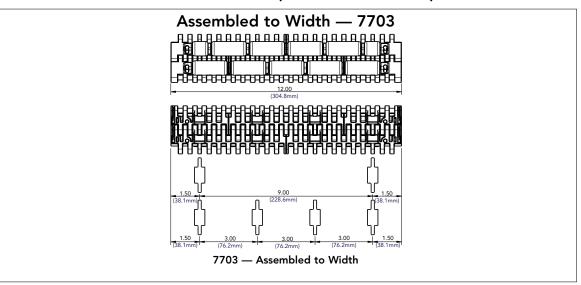

Molded to Width — 7705SG

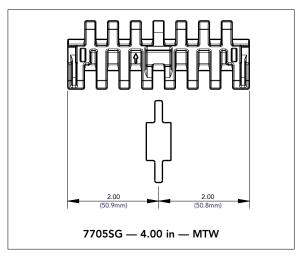


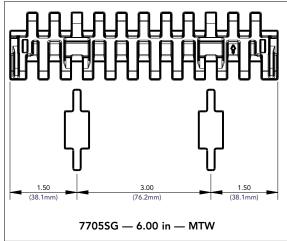

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

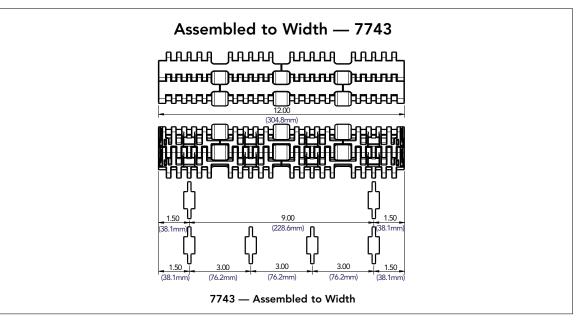






MatTop Sprocket Locations

7700 Chain Series (7705/7705)

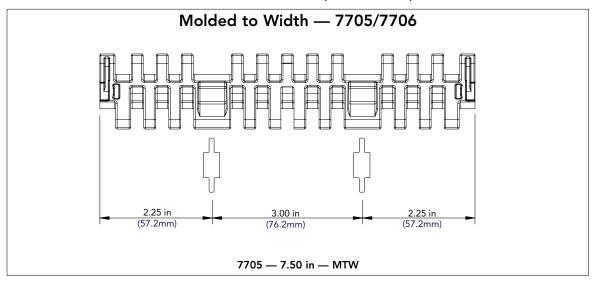

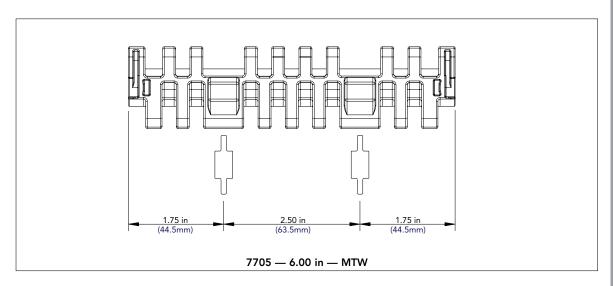

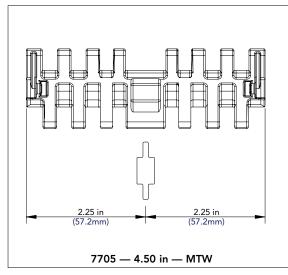

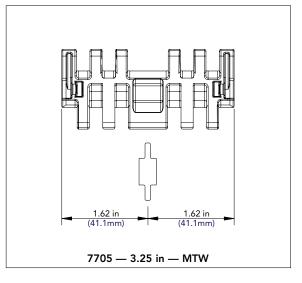

> 7700 Chain Series (7705/7705)

> Molded to Width — 7705/7706

> 7705 — 7.50 in — MTW

> 7705 — 6.00 in — MT

> 7705 — 4.50 in — MT\

> 7705 — 3.25 in — MTV

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

- > 7700 Chain Series with Positrack Tracking Guides (7705/7705 Metric/7706)
- > Molded to Width 7705/7706
- > 7705 7.50 in MTW Positrack Tracking Guides
- > 7705 4.50 in MTW Positrack Tracking Guides
- > 7705 84mm MTW Positrack Tracking Guides
- > 7705 3.25 in MTW
 Positrack Tracking
 Guides

SPROCKET LOCATIONS

7700 Chain Series with Positrack Tracking Guides (7705/7705 Metric/7706)

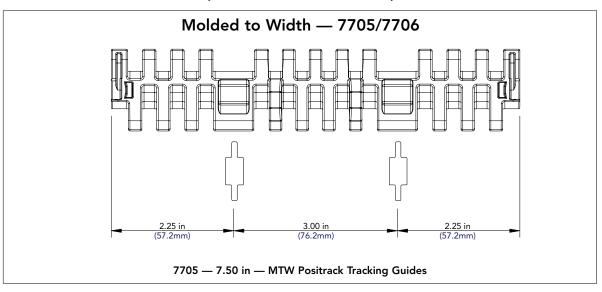


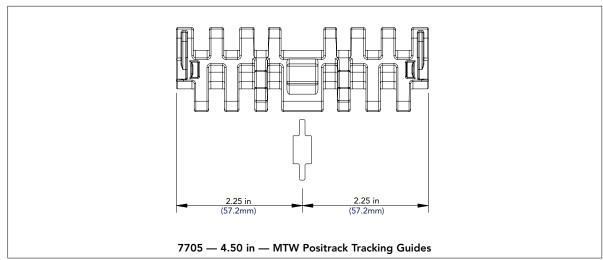


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

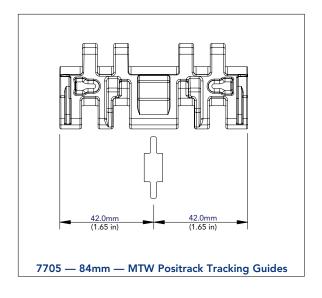

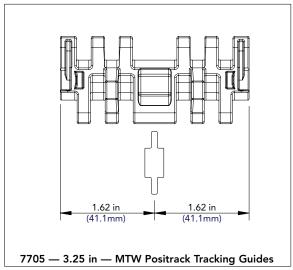

MatTop Sprocket Locations

7700 Metric Chain Series (7705)

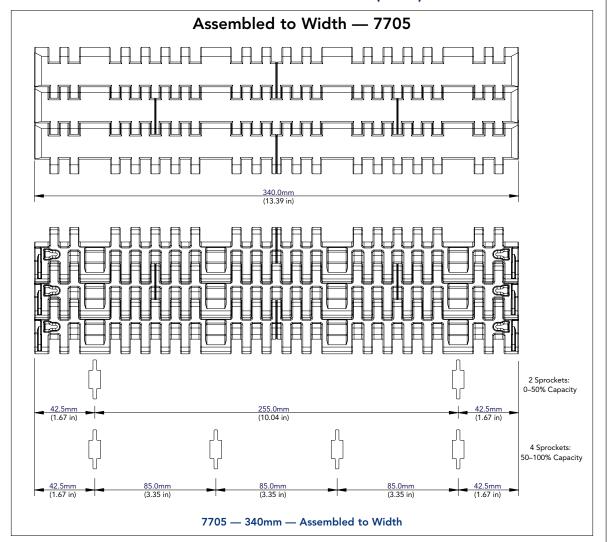

> 7700 Metric Chain Series (7705)

- > Assembled to Width — 7705
- > 7705 340mm Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

SPROCKET LOCATIONS

7700 Chain Series (7708)

> 7700 Chain Series (7708)

- Assembled to Width 7708
- > 7708 12.00 in Assembled to Width

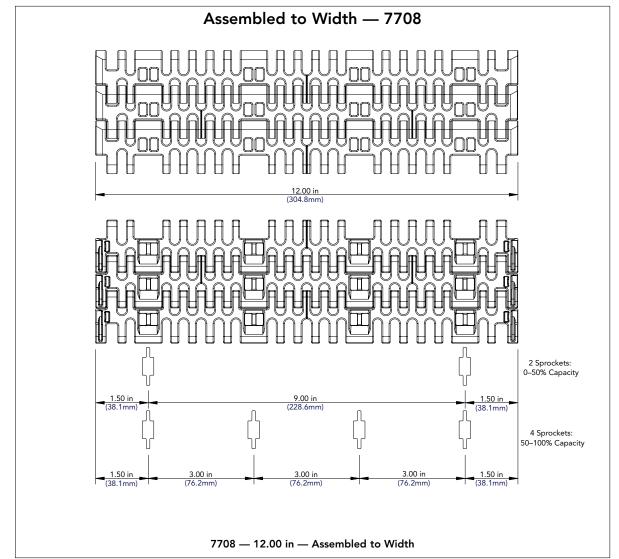


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.


7956 Chain Series (7956TAB, 7956NT, 7956B and 7956GT)

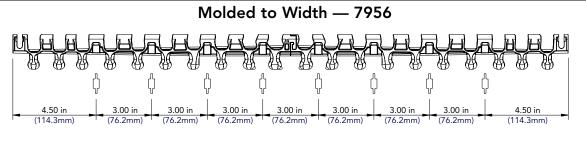


7956 — 30.00 in — MTW

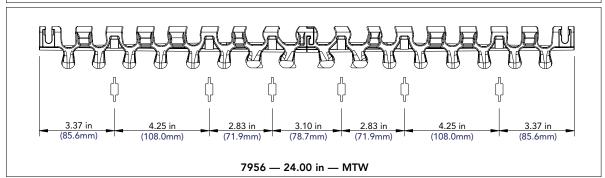


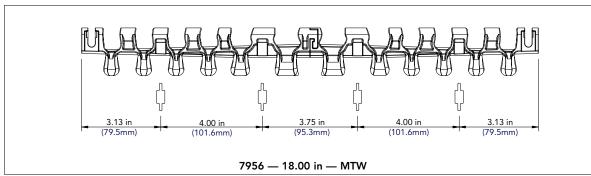

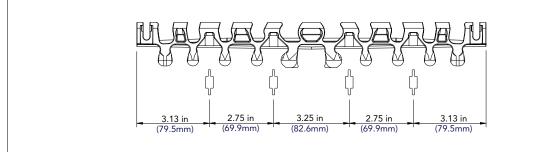

7956 — 15.00 in — MTW

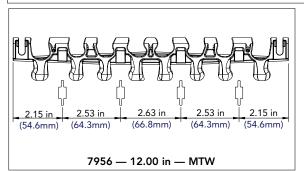

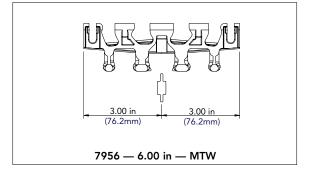

MatTop Sprocket Locations

- > 7956 Chain Series (7956TAB, 7956NT, 7956B and 7956GT)
- > Molded to Width 7956
- > 7956 30.00 in MTW
- > 7956 24.00 in MTW
- > 7956 18.00 in MTW
- > 7956 15.00 in MTW
- > 7956 12.00 in —
- > 7956 6.00 in —

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

- > 7960 Chain Series (7963NT/ 7963ST/ 7966NT/ 7966ST)
- > Molded to Width 7960
- > 7966 15.00 in MTW
- > Molded to Width 7960
- > 7966 12.00 in MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

MatTop Chains


SPROCKET LOCATIONS

7960 Chain Series (7963NT/7963ST/7966NT/7966ST)

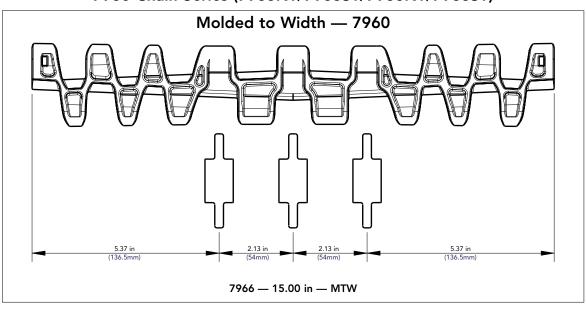


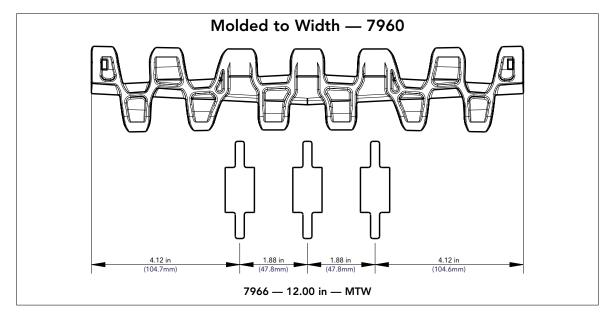


8500 Chain Series (8503)

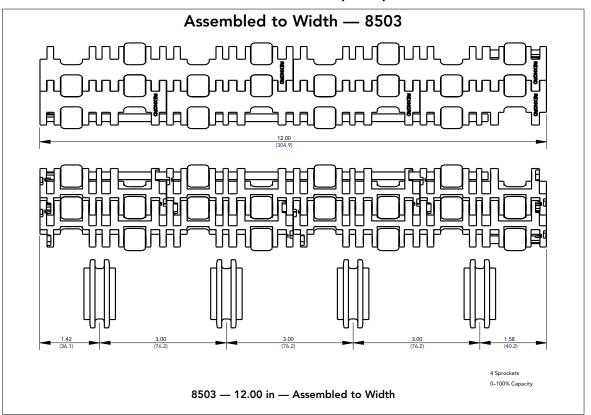

Molded to Width — 8503

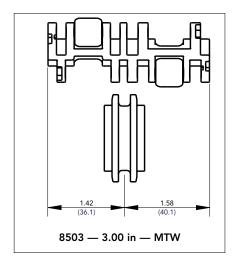

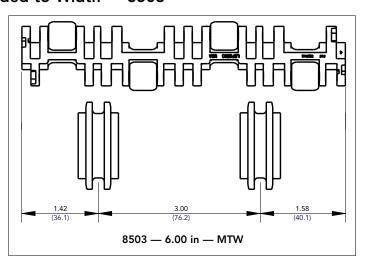

MatTop Sprocket Locations

- > 8500 Chain Series (8503)
- > Assembled to Width — 8503
- > 8503 12.00 in Assembled to Width
- > Molded to Width 8503
- > 8503 3.00 in MTW
- > 8503 6.00 in MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

SPROCKET LOCATIONS

8500 Chain Series (8505/8505RT/8506)

> 8500 Chain Series (8505/8505RT/ 8506)

- > Assembled to Width — 8505/ 8505RT/8506
- > 8505 18.00 in Assembled to Width

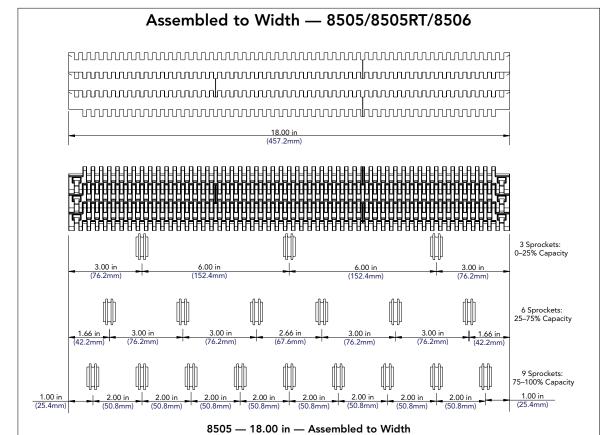



Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

8500 Chain Series (8505/8506)

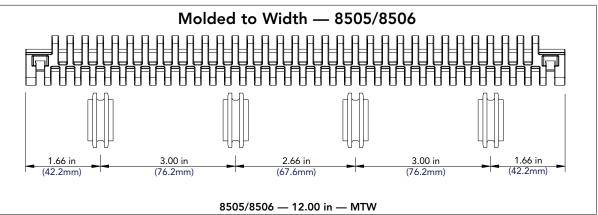

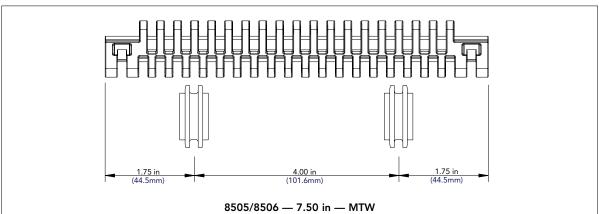

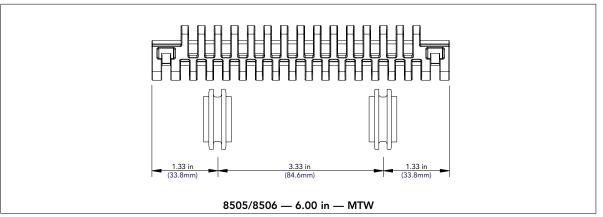

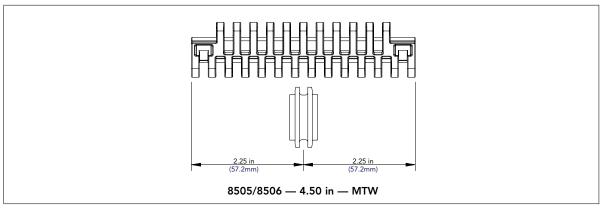

MatTop Sprocket Locations

- > 8500 Chain Series (8505/8506)
- > Molded to Width 8505/8506
- > 8505/8506 12.00 in — MTW
- > 8505/8506 7.50 in — MTW
- > 8505/8506 6.00 in — MTW
- > 8505/8506 4.50 in — MTW

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


MatTop Sprocket Locations


SPROCKET LOCATIONS


8500 Chain Series (8505/8506)

- > 8500 Chain Series (8505/ 8506 Metric/ 8505/8506)
- Molded to Width -8505/8506
- > 8505/8506 85mm MTW
- 8505/8506 3.25 in MTW

8505/8506 — 2.33 in — MTW

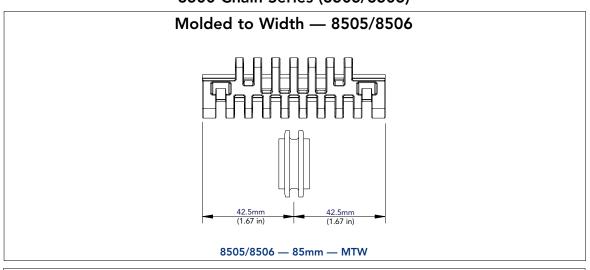

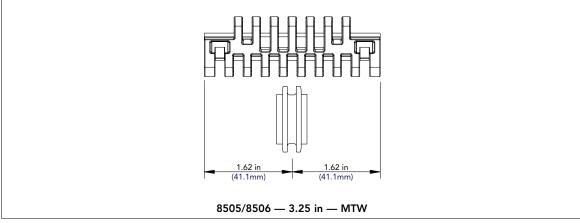

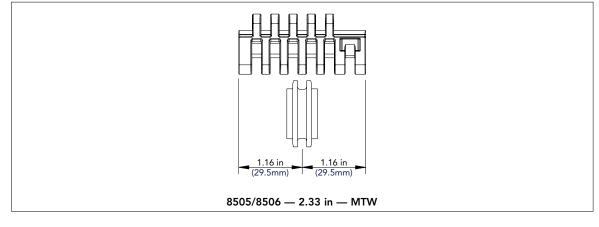


Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.





SPROCKET LOCATIONS


8500 Chain Series with Positrack Tracking Guides (8505/8506/8506 Metric)

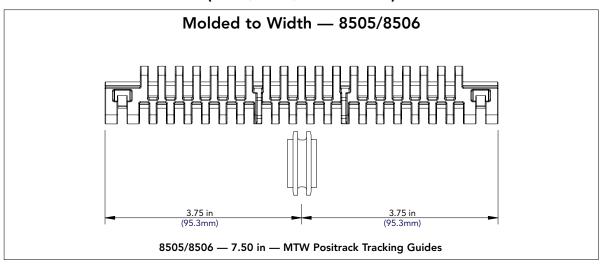

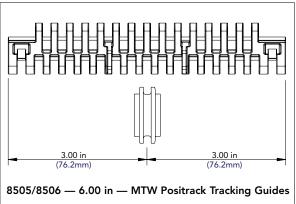

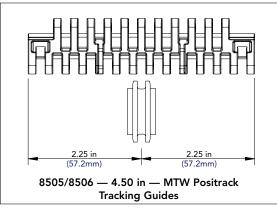

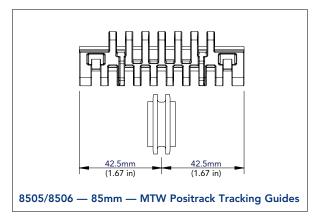

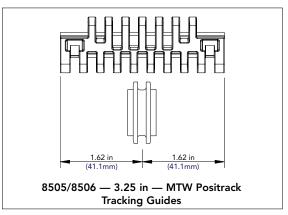

MatTop Sprocket Locations

- > 8500 Chain Series with Positrack Tracking Guides (8505/8505 Metric/ 8506/8506 Metric)
- > Molded to Width 8505/8506
- > 8505/8506 7.50 in — MTW Positrack Tracking Guides
- > 8505/8506 6.00 in — MTW Positrack Tracking Guides
- 8505/8506 4.50 in –
 MTW Positrack
 Tracking Guides
- > 8505/8506 85mm — MTW Positrack Tracking Guides
- > 8505/8506 3.25 in MTW Positrack Tracking Guides

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


MatTop Chains

MatTop Sprocket Locations

SPROCKET LOCATIONS

8500 Chain Series (8507)

- > 8500 Chain Series (8507)
- Assembled to Width 8507
- > 8507 12.00 in Assembled to Width

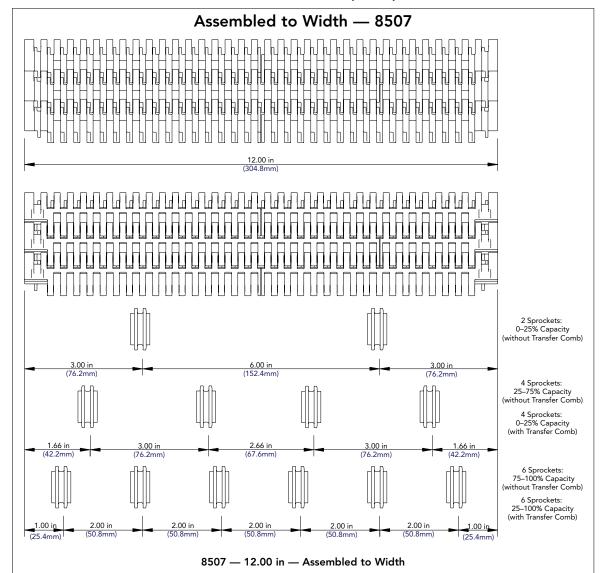

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


MatTop Chains



SPROCKET LOCATIONS

MatTop Sprocket Locations

9600 Chain Series (9608)

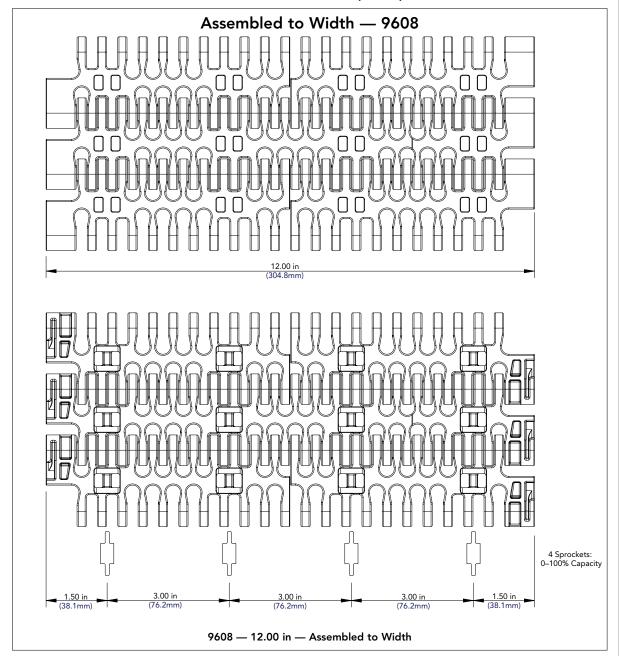

> 9600 Chain Series (9608)

> Assembled to Width — 9608

> 9608 — 12.00 in — Assembled to Width

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chain:

MatTop Calculation **Program**

> Chain Pull Calculations

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop CALCULATION PROGRAM

The MatTop Calculation Program is available to perform chain pull calculations for specific conveyor applications.

Chain Pull Calculations

⇒ To obtain the most recent calculation program:


- Download from Technical Support at: http://www.rexnord.com/flattop
- Contact Application Engineering

⇒ Prior to performing chain pull calculations, the following information is needed:

- Chain style, material and width
- Drive configuration (i.e. end drive, bottom drive)
- Wearstrip material
- Corner track material (if utilizing a sideflexing chain)
- ◆ Lubrication conditions (i.e. dry, water, soap and water, oil)
- Chain speed (FPM) or (MPM)
- ◆ Product weight (lbs/ft²) or (kg/m²)
- Product material
- Percent of time product accumulation occurs (i.e. slippage)
- Portion of conveyor where product accumulation occurs
- Conveyor layout with dimensions
- Change in elevation
- Sprocket pitch diameter

⇒ The calculation output sheet contains the following information:

- Maximum allowable headshaft chain tension (per temperature)
- ◆ Percent of allowable chain tension (per temperature)
- Number of sprockets required per shaft
- Tension per chain width
- ◆ Total horsepower required with an assumed gearbox efficiency of 100%
- Total torque required
- Minimum shaft diameter required

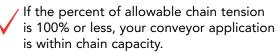



The horsepower requirement the program calculates is the "design horse power" that is required to power the conveyor based on the input parameters. Additional considerations should be made for the type of drive used, efficiency losses in the power train, appropriate service factors, as well as any gearbox manufacturer's recommendations.



Rexnord recommends some sort of soft start for all FlatTop chain conveyor motors, but especially for higher speeds and conveyors with bottom drives. Hard starts add peak loads to the chain, which will shorten the service life. Hard starts can also cause the chain to stretch and bounce in the catenary sag section, sometimes causing the chain to catch in the conveyor frame and become damaged. On bottom drives, hard starts can cause the chain to fall off the drive sprockets and skip teeth.

⇒ For a side-flexing conveyor, the calculation output sheet contains the following information:

- Calculated corner tension (PV)
- Maximum allowable corner tension



If the calculated corner tension is less than the maximum allowable corner tension, your conveyor application is within chain PV capacity.

⇒ The MatTop Calculation Program calculates the following:

- MatTop conveyor and shafting analysis
- Catenary sag vs. length vs. tension
- ◆ Catenary sag vs. length vs. excess chain
- ◆ Product backline pressure (due to accumulation)



The MatTop Calculation Program does not take environmental conditions into consideration. This calculation program **ONLY** provides information on whether the chain is within capacity.

MatTop CALCULATION PROGRAM

MatTop Calculation **Program**

> MatTop Calculation **Program**

> Important Formulas

IMPORTANT FORMULAS

IMPORTANT FORMULAS

Conveyor Speed Containers:	peed	Product Weight	Conveyor Speed Containers:	Product Weight
Single File: Containers/ft	= 12 in/ft Dia. or Length of Container (in)	lbs/ft = Containers/ft x lbs/Container	Single File: Containers/m = 1000 mm/m Dia. or Length of Container (mm)	kg/m = Containers/m x kg/Container
FPM	= CPM Containers/ft		m/min = CPM Containers/m	
Mass Flow:		For Matton Chain:	Mass Flow: MatToo Chain:	For MatTop Chain:
Containers/ft²	$= \frac{166.277}{\text{Dia.(in)}^2}$	lbs/ft² = Containers/ft² x lbs/Container	Containers/m ² = $\frac{1,150,000}{\text{Dia.(mm)}^2}$	kg/m² = Containers/m² x kg/Container
FPM	= Containers/ft² x (Width [in]/12 in/ft)	For TableTop Chain: Ibs/ft = Containers/ft² x lbs/Container x (Flight Width [in]/12in/ft)	m/min = CPM Containers/m² x (Width [mm]/1000 mm/m)	For TableTop Chain: kg/m = Containers/m² x kg/Container x (Flight Width [mm]/1000mm/m)
Note: For TableTop Chain: Conveyor Width = :	op Chain: = # of Strands x Flight Width (in)		Note: For TableTop Chain: Conveyor Width = # of Strands x Flight Width (mm) (mm)	
Bulk Flow: Ibs/min	= <u>TPH x 2000 lbs/lon</u> 60 min/hour	lbs/ft² = Density (lbs/ft²) x H (ft)	Bulk Flow: $kg/min = \frac{1 \text{ onnes/hour x } 1000 \text{ kg/Tonne}}{60 \text{ min/hour}}$	kg/m^2 = Density $(kg/m^3) \times H(m)$
FPM	= lbs/min Density (lbs/ft²) x H (ft) x W (ft)		m/min = $\frac{kg/min}{Density (kg/m^3)_X H (m) \times W (m)}$	

Knowing Headshaft RPM: $= \underbrace{Eff. Spkt Teeth (n) \times Pitch (in) \times RPM}_{12 in/ft}$ $OR: OR: $ $\sim \underbrace{P.D. (in) \times Pi \times RPM}_{12 in/ft}$		Knowing Headshaft RPM: m/min = Eff. Spkt Teeth (n) x Pitc 1000 mm/r OR: - P.D. (mm) x Pix RPM 1000 mm/r
= Chain Pull (lbs) x FPM F S 3,000 C C O C C O C C C C C C C C C C C C	NOTES ON HORSEPOWER: For TableTop Chain: Chain Pull = chain tension x # of strands Where chain tension is in Ibs	Power Chain Pull (n) x m/min 60,000 OR: OR: = Torque (N-m) x RPM
Spkt P.D. = Chain Pitch (in) Spkt P.D. = SiN (180/N) Fig. 1	For MatTop Chain: Chain Pull = chain tension x chain width (ft) Where chain tension is in lbs/ft of MatTop chain width Remember to apply appropriate service factors and take drive train efficiencies into account.	9550 Spkt P.D. = Chain Pitch (mm) Sin (180/n)

Chain Pull = chain tension x chain width (m)

For MatTop Chain:

where chain tension is in N/m of MatTop chain width

Remember to apply appropriate service factors and take drive train efficiencies

For TableTop Chain: Chain Pull = chain tension x # of strands where chain tension is in newtons

NOTES ON POWER:

Knowing Headshaft RPM: m/min = _Eff. Spkt Teeth (n) x Pitch (mm) x RPM

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

MatTop Calculation Program

- > Calculating Chain Speed, Given Production Output
- > Unit Handling
- > Example

Rexnord, labie lop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains


MatTop CALCULATION PROGRAM



Calculating Chain Speed, Given Production Output

Unit Handling

⇒ When handling individual containers or packages, the speed of MatTop Chain is determined using the same method as for TableTop Chain (see pages EM - TT - 38 - 41). Likewise, the product weight is figured in the same manner, with one exception: for en masse (in mass) conveyors, always use the product weight per area (ft² or m²), regardless of the actual chain width.

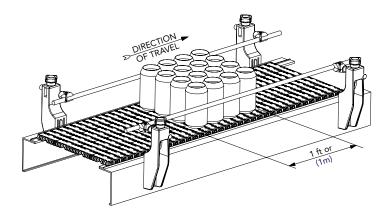

Example:

An incline dewatering belt must run tomatoes at a speed of 100 tons per hour (TPH) (90.7 tonnes per hour). The density of the tomatoes is 65 lbs/ft 3 (1041kg/m 3). The chain width is 3.00 ft (0.91m) and the estimated average height of the product on the incline is 0.25 ft (0.08m).

⇒ Initial chain selection = HUV5998-36 in w/ F4 Pusher Flights every 6th Pitch

English

$$\frac{\text{TPH x 2000 lbs/ton}}{60 \text{ min/hour}} = \frac{100 \times 2000}{60} = 3,333 \text{ lbs/min}$$

$$\frac{\text{Chain Speed (FPM)}}{\text{Density (lbs/ft³) x H (ft) x W (ft)}} = \frac{3,333}{65 \times 0.25 \times 3.00} = 68 \text{ FPM}$$

Metric

$$kg/min = \frac{Tonnes/hour \times 1000kg/tonne}{60 \text{ min/hour}} = \frac{90.7 \times 1000}{60} = 1512kg/min$$

$$Chain Speed (MPM) = kg/min = 1512 = 20MPM$$

î

The actual conveyor speeds are usually about 10–15% faster than the calculated required speed in order to provide good "product take-away" from the adjacent machinery.



MatTop CALCULATION PROGRAM

MatTop Calculation Program

>

Calculating Product Weight, Given Production Output

Bulk Handling

⇒ For bulk product conveying, the chain speed depends on the production speed (tons per hour), the product density (weight or mass per unit of volume), the chain width and the estimated height of the product on the chain



When calculating chain tension, the weight of product per area (lbs/ft 2 or kg/m 2) is required.

Example:

An incline dewatering belt must run tomatoes at a speed of 100 tons per hour (TPH) (90.7 tonnes per hour). The density of the tomatoes is 65 lbs/ft 3 (1041kg/m 3). The chain width is 3.00 ft (0.91m) and the estimated average height of product on the incline is 0.25 ft (0.08m).

⇒ Initial chain selection = HUV5998-36 in w/ F4 Pusher Flights every 6th Pitch

English

lbs/ft = Density (lbs/ft) x H (ft) = 65×0.25 = 16.3 lbs/ft

Metric

kg/m = Density (kg/m) x H (m) = 1041 x 0.08 = 83.3 kg/m



The actual conveyor speeds are usually about 10–15% faster than the calculated required speeds in order to provide good "product take-away" from the adjacent machinery.

⇒ The following table provides an estimate of bulk density for various produce products:

	Bulk D	Pensity
Product	Imperial	Metric
	lb/ft³	kg/m³
Beets	44	700
Cabbage	31	500
Carrots	34	550
Parsnips	34	550
Potatoes	42	670
Pumpkins & Squash	37	600
Rutabagas & Turnips	37	600
Tomatoes — Small	42.5	681
Tomatoes — Medium	42.9	687
Tomatoes — Large	38.6	619
Tomatoes — Mixed	43.3	694
Onions	41	650

> Calculating Product Weight, Given Production Output

- > Bulk Handling
- > Example

Rexnord, TableTop, MatTop, HP, UHS, PS, Platinum Series, DTS, PosiClean, TwistLock, Positrack, RexFlex and DynamicTransfer System are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

MatTop Chains

MatTop Calculation Program

> Typical Product Sizes and Weights



Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved

MatTop Chains

MatTop CALCULATION PROGRAM




Typical Product Sizes and Weights

	Content	Container	Container Size	Base Din	nensions	Weig	ht Full	Single	File	En M	lasse
		Material		inches	mm	lbs	kg	lbs/ft	kg/m	lbs/ft²	kg/m²
		Paper	1/2 Pint	3 x 3	76.2 x 76.2	0.60	0.27	2.4	3.6	-	-
	Milk	Paper	Pint Quart	3 x 3	76.2 x 76.2	1.10 2.30	0.50 1.04	4.4 8.8	6.5 13.1	-	-
	IVIIIK	Paper Paper	1/2 Gallon	3-1/8 x 3-1/8 4-1/8 x 4-1/8	79.4 x 79.4 104.8 x 104.8	4.50	2.04	13.1	19.5		
		Plastic	Gallon	6 x 6	152.4 x 152.4	8.90	4.04	17.8	26.5	_	<u> </u>
Dairy		Plastic	6 oz	2-5/8 Ø	66.7Ø	0.40	0.18	1.8	2.7	9.7	46.9
	Yogurt	Plastic	6 Pack / 4 oz Containers	5 x 7	127 x 177.8	1.57	0.71	3.8	5.6	-	-
		Plastic	1/2 lb	4 Ø	101.6Ø	0.60	0.27	1.8	2.7	6.2	30.3
	Cottage Cheese	Plastic	1 lb	4-3/4 Ø	120.7Ø	1.10	0.50	2.8	4.1	8.1	39.4
		Plastic	2 lb	5 Ø	127Ø	2.30	1.04	5.5	8.2	15.3	74.4
	Concentrated Juice	Paper	12 oz	2-5/8 Ø	66.7Ø	1.00	0.45	4.6	6.8	24.1 5.4	117.2
		Plastic Glass	Gallon Gallon	6 Ø	152.4Ø 152.4Ø	1.17 3.59	0.53 1.63	2.3 7.2	3.5 10.7	16.6	26.3 80.6
	Juice	Paper	6.75 oz Box (Tetra)	1-1/2 x 2-1/4	38.1 x 57.2	0.48	0.22	3.8	5.7	-	-
		Plastic	10 Pack / 6.75 Boxes (Tetra)	3 x 10-1/2	76.2 x 266.7	4.87	2.21	19.5	29.0	_	-
		Aluminum	250ml PET	2-5/64 Ø	52.9Ø	0.63	0.29	3.6	5.4	24.3	117.4
		Aluminum	12 oz	2.6 Ø	66.0Ø	0.85	0.39	3.9	5.8	20.9	101.8
		Plastic	500ml PET	2-37/64 Ø	65.5Ø	1.16	0.53	5.4	8.0	29.0	141.0
	Soft Drink	Plastic	20 oz PET	2-7/8 Ø	73.0Ø	1.37	0.62	5.7	8.5	27.6	134.1
	ook Billik	Plastic	1 Liter PET	3-3/16 Ø	81.0Ø	2.31	1.05	8.7	12.9	37.8	183.7
		Plastic	1-1/2 Liter PET	4-3/16 Ø	106.4Ø	3.40	1.54	9.7	14.5	32.2	156.7
		Plastic	2 Liter PET 3 Liter PET	4-1/2 Ø	114.3Ø	4.40	2.00	11.7	17.5	36.1 40.4	175.7
		Plastic Glass	3 Liter PE I 12 oz	5-1/8 Ø 2-1/2 Ø	130.2Ø 63.5Ø	6.38 1.50	2.89 0.68	14.9 7.2	22.2 10.7	40.4 39.9	196.3 194.0
		Glass	12 oz 12 oz Non-Returnable	2-1/2 Ø 2-3/4 Ø	63.5Ø 69.9Ø	1.20	0.68	5.2	7.8	26.4	194.0
		Glass	16 oz Non-Returnable	2-3/4 Ø 2-3/4 Ø	69.9Ø	1.60	0.54	7.0	10.4	35.2	170.8
Beverages		Glass	32 oz	2-5/4 Ø	66.7Ø	3.40	1.54	15.5	23.1	82.0	398.6
2010.4900		Glass	64 oz	3-5/8 Ø	92.1Ø	3.88	1.76	12.8	19.1	49.1	238.6
	D	Aluminum	12 oz	2.6 Ø	66.0Ø	0.85	0.39	3.9	5.8	20.9	101.8
	Beer	Paper	12 Pack / 12 oz Cans	10-3/4 x 7-3/4	273.1 x 196.9	10.40	4.72	11.6	17.3	-	-
		Paper	12 Pack Fridge Pack	16 x 4-7/8	406.4 x 123.8	10.32	4.68	7.7	11.5	-	-
		Paper	24 Pack / 12 oz Cans	16 x 10-3/4	406.4 x 273.1	20.16	9.14	15.1	22.5	-	-
		Paper	24 Pack / 12 oz Cans (cube)	10-3/4 x 7-3/4	273.1 x 196.9	20.16	9.14	22.5	33.5	-	_
		Paper	18 Pack / 12 oz Cans	16 x 7-3/4	406.4 x 196.9	14.69	6.66	11.0	16.4	-	-
		Paper	30 Pack / 12 oz Cans	13-1/2 x 7-3/4	342.9 x 196.9	24.48	11.10	21.8	32.4	-	- 004.0
		Glass	750ml	2-7/8 Ø	73.0Ø	2.88	1.31	12.0	17.9	57.9	281.9
	Wine / Champagne	Glass Glass	1.5 Liter 12 oz	4-1/4 Ø 2-1/2 Ø	108.0Ø 63.5Ø	6.37 1.22	2.89 0.55	18.0 5.9	26.8 8.7	58.6 32.5	284.9 157.8
		Paper	4 Pack / 12 oz Bottles	5-1/8 x 5-1/4	130.2 x 133.4	5.07	2.30	11.9	17.7	-	-
		Metal	1/2 lb	4-1/8 Ø	104.8Ø	0.80	0.36	2.3	3.5	7.8	38.0
	C "	Metal	1 lb	4-1/8 Ø	104.8Ø	1.30	0.59	3.8	5.6	12.7	61.7
	Coffee	Metal	2 lb	5-1/4 Ø	133.4Ø	2.50	1.13	5.7	8.5	15.1	73.3
		Metal	3 lb	6-1/4 Ø	158.8Ø	3.80	1.72	7.3	10.9	16.2	78.6
	Baby Food	Glass	Regular	2-3/8 Ø	60.3Ø	0.56	0.25	2.8	4.2	16.5	80.3
	Baby Food	Glass	Junior	2-3/8 Ø	60.3Ø	0.80	0.36	4.0	6.0	23.6	114.8
	Soup	Metal	10.5 oz	2-5/8 Ø	66.7Ø	0.76	0.34	3.5	5.2	18.3	89.1
	Soup	Metal	18.5 oz	3-1/8 Ø	79.4Ø	1.33	0.60	5.1	7.6	22.6	110.0
	Soup	Metal	32 oz	4 Ø	101.6Ø	1.90	0.86	5.7	8.5	19.7	96.0
	Cracker Peanut Butter	Paper Plastic	10 oz Box 18 oz	2-1/4 x 5-1/4 3 Ø	57.2 x 133.4 76.2Ø	0.72 1.15	0.33	3.8 4.6	5.7 6.8	21.2	103.3
	Jelly	Glass	32 oz	3-5/16 Ø	76.2Ø 84.1Ø	2.15	0.32	7.8	11.6	32.6	158.6
Food	Jelly	Glass	18 oz	2-5/8 Ø	66.7Ø	1.62	0.73	7.4	11.0	39.1	189.9
	Catsup	Plastic	24 oz	2-1/4 x 3-3/4	57.2 x 95.3	1.63	0.74	8.7	12.9	-	-
	Apple Sauce	Glass	23 oz	3-5/16 Ø	84.1Ø	2.05	0.93	7.4	11.1	31.1	151.2
	Mayonnaise	Glass	32 oz	4 Ø	101.6Ø	3.03	1.37	9.1	13.5	31.5	153.1
	Cereal	Paper	14 oz Box	2-3/8 x 7-1/2	60.3 x 190.5	1.06	0.48	5.4	8.0	-	-
	Vegetable	Metal	14.5 oz	2-15/16 Ø	74.6Ø	1.04	0.47	4.2	6.3	20.0	97.5
	Tuna	Metal	12 oz Can	4 Ø	101.6Ø	0.88	0.40	2.6	3.9	9.1	44.5
	Tomato Sauce	Metal	29 oz	4 Ø	101.6Ø	2.07	0.94	6.2	9.2	21.5	104.6
	Dish Soap	Plastic	25 oz	2-7/16 x 3-3/8	61.9 x 85.7	1.78	0.81	8.8	13.0	_	-
	Liquid Laundry Soap	Plastic	22 oz	2 x 3-3/8	50.8 x 85.7	1.60	0.73 1.04	9.6 10.5	14.3	-	-
	Liquid Laundry Soap Liquid Laundry Soap	Plastic Plastic	32 oz 100 oz	2-5/8 x 4-1/2 5-1/2 x 7-3/4	66.7 x 114.3 139.7 x 196	2.30 7.01	3.18	15.3	15.6 22.8	_	_
Cleaners	Liquid Bleach	Plastic	Quart	3-1/4 Ø	82.6Ø	2.40	1.09	8.9	13.2	37.8	183.5
	Liquid Bleach	Plastic	1/2 Gallon	4-3/4 Ø	120.7Ø	4.80	2.18	12.1	18.0	35.4	171.9
	Liquid Bleach	Plastic	Gallon	6-1/4 Ø	158.8Ø	9.50	4.31	18.2	27.1	40.4	196.5
	Liquid Bleach	Plastic	182 oz	7-1/4 Ø	184.2Ø	8.16	3.70	13.5	20.1	25.8	125.5
	Toilet Paper	Paper	Individual Roll	4-1/4 Ø	108.0Ø	0.23	0.10	0.6	1.0	2.1	10.3
Toiletries	Toilet Paper	Plastic	4 Pack	4-1/4 x 8-1/2	108 x 215.9	0.93	0.42	2.6	3.9	-	-
	Toilet Paper	Plastic	24 Pack	12 x 15-1/2	304.8 x 393.7	5.67	2.57	5.7	8.4	-	-
Automotive	Tire	Passenger	Typical	28 Ø	711.2Ø	35.00	15.87	_	-	-	-
	Tire	Truck	Typical	48 Ø	1219.2Ø	150.00	68.03	-	-	-	-

Contact Rexnord Application Engineering for more information 1.262.376.4800

Multiflex Chains

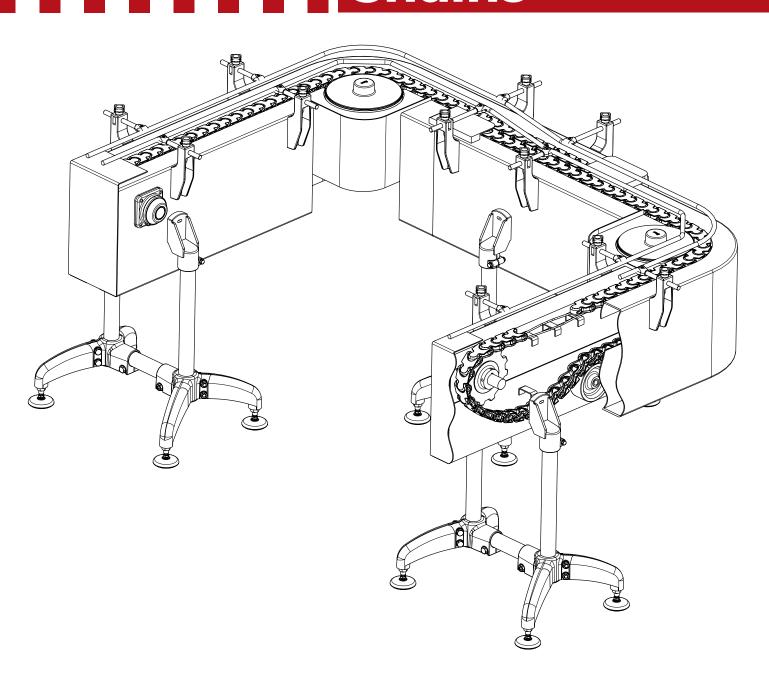

Multiflex Conveyor Chain Materials

- > Acetal Family
- > D and WD (Acetal)
- BALE
- > LF and WLF (Low-Friction)
- > HP and WHP (High Performance)
- > PS (Platinum Series)
- > PSX (Platinum Series X)
- > XLG (Low-Friction Acetal, Green)
- > XLA (Low-Friction Acetal, Gray)
- > Metal Family
- > AC (Armour Clad)
- > Specialty Plastics
- > AS (Anti-Static)
- > HCAS (High Capacity Anti-Static)
- > BIR (Black Impact-Resistant)
- > ESD (Electrostatic Dissipative)
- > HC-ESD (High Capacity, Electrostatic Dissipative)
- > FTR (Black, Fryer Temperature-Resistant)

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chains

CCC CHAIN MATERIALS

For more detailed material information, see page EM - MF - 14 or the Appendix located at the end of this manual.

Materials vary per chain series; see Product Catalog to determine standard versus special materials.

Acetal Family

- D and WD (Acetal)
- ⇒ Plain acetal
- > MLF
- Cost-effective general purpose chain material
- ⇒ Suitable for slower speeds

LF and WLF (Low-Friction)

⇒ Patented blend of acetal that provides good wear resistance and long service life due to the low coefficient of friction

HP and WHP (High Performance)

⇒ Patented blend of acetal specifically formulated for dry-running conveyors due to excellent friction characteristics

PS (Platinum Series)

⇒ Patented blend of acetal specially formulated for high-speed conveying applications

PSX (Platinum Series X)

- ⇒ High-speed conveying with little to no external lubrication
- ⇒ Long wear life with minimal dusting

XLG (Low-Friction Acetal, Green)

⇒ Internally lubricated extra low-friction acetal

XLA (Low-Friction Acetal, Gray)

⇒ Internally lubricated extra low-friction acetal

Metal Family

AC (Armour Clad)

- ⇒ Austenitic stainless steel cladding available with a variety of plastic link materials
- ⇒ Excellent for conveying raw castings, rough parts

Specialty Plastics

AS (Anti-Static)

- ⇒ An electrically conductive acetal formulated to reduce or eliminate nuisance static charge
- ⇒ **ALWAYS** contact Rexnord Application Engineering for assistance

HCAS (High Capacity Anti-Static)

- ⇒ Reduces or eliminates nuisance static
- ⇒ High capacity acetal resin, requires 10% derate from acetal counterparts

BIR (Black Impact-Resistant)

⇒ Specifically formulated to take constant impact

ESD (Electrostatic Dissipative)

- Polypropylene formulated for conveying sensitive products such as electronics and computer chips where controlling static charge or static decay is critical
- ⇒ ALWAYS contact Rexnord Application Engineering for assistance

HC-ESD (High Capacity, Electrostatic Dissipative)

- ⇒ High capacity polypropylene formulated for conveying sensitive products such as electronics and computer chips where controlling static charge or static decay is critical
- ⇒ Requires 10% derate from polypropylene counterparts

FTR (Black, Fryer Temperature-Resistant)

⇒ Formulated to be used in oven/fryer discharge conveyor applications such as snack chips

CCC CHAIN MATERIALS

GTC (Grey Tough Composite)

- ⇒ High-strength, impact modified composite
- ⇒ High impact resistance, low strength

USP (Ultra-Stabilized Polypropylene, Dark Green)

- ⇒ Superior resistance to chemicals used in pasteurizers, warmers and coolers
- ⇒ Remains stronger and more flexible than standard polypropylene

BWR (Black Wear-Resistant)

BWR may extend chain life up to 5 times in comparison to other plastic materials in applications such as conveying rough machined parts

WX/BWX (Abrasion-Resistant)

⇒ A nylon material formulated to be used in abrasive applications where chain is subjected to abrasives such as glass, sand and dirt

P (Chemical-Resistant)

⇒ A polyester formulated to reduce or eliminate material degradation in applications where chemicals such as chlorine and phosphorous are present in moderate concentrations

CR (Extreme Chemical-Resistant)

⇒ Fluorinated polymer that is chemically resistant to high concentrations of oxidizing agents, acids and bases

DUV (Ultraviolet-Resistant)

- \Rightarrow Specially formulated acetal
- ⇒ Used for outdoor applications with direct exposure to the sun or UV radiation

MR (Melt-Resistant)

⇒ A nylon material with a high melting point used to prevent hot objects (product temperature up to 375°F [190°C]) from melting the surface of the chain

FR (Flame-Retardant)

⇒ Flame-retardant polyester that meets the requirements of UL Standard 94 V-0 rated combustion

HS (Heat-Stabilized)

⇒ Nylon resin designed for environments that

contain hot water spray (rinser, sterilizer and pasteurizer applications)

₽ BSM

- Acetal-based resin with superior wear and cut resistance
- ⇒ Suitable for both dry and wet conditions



Since materials vary in strength, refer to the Product Catalog (8rxCAT-en) for specific chain / material strengths when changing out materials.



Not all materials are available in all chains. Contact Rexnord Application Engineering for further assistance.

Multiflex Conveyor Chain Materials

- > GTC (Grey Tough Composite)
- USP (Ultra-Stabilized Polypropylene, Dark Green)
- > BWR (Black Wear-Resistant)
- > WX/BWX (Abrasion-Resistant)
- > P (Chemical-Resistant)
- > CR (Extreme Chemical-Resistant)
- > DUV (Ultraviolet-Resistant)
- > MR (Melt-Resistant)
- > FR (Flame-Retardant)
- > HS (Heat-Stabilized)
- > BSM

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Nultiflex Chains

Multiflex Conveyor Chain **Materials**

> Friction Table Between Chain and Product (Fm)

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.

All rights reserved.



FRICTION TABLE BETWEEN CHAIN AND PRODUCT (Fm)

	Chain I	Material			Pro	oduct Mater	ial		
Base Material	Chain Material	Lubrication Condition	Aluminum	Returnable Glass Bottles**	Non- Returnable Glass Bottles	Paper	Plastic (crates, shrink)	Plastic (PET)	Steel
		Dry	0.18	0.20	0.12	0.23	0.18	0.16	0.18
	PS	Water	0.14	0.18	0.11	NR	0.16	0.15	0.16
	1 3	Soap & Water	0.12	0.14	0.10	NR	0.14	0.14	0.13
		Oil	_	_	-	NR	_	-	0.10
		Dry	0.16	0.20	0.12	0.23	0.18	0.16	0.16
	PSX	Water	0.13	0.18	0.11	NR	0.16	0.15	0.14
		Soap & Water Oil	0.12	0.14	0.10	NR	0.14	0.14	0.12
}		-	0.18	0.20	0.12	0.23	0.18	0.18	0.10 0.18
		Dry Water	0.16	0.20	0.12	NR	0.16	0.16	0.16
	HP, WHP	Soap & Water	0.12	0.14	0.10	NR	0.14	0.14	0.13
		Oil	-	-	-	NR	-	-	0.10
İ		Dry	0.20	0.20	0.15	0.30	0.20	0.20	0.25
	LF, WLF, XL,	Water	0.15	0.18	0.13	NR	0.18	0.18	0.20
	XLA, XLG	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15
İ		Oil	_	_	-	NR	-	-	0.10
ĺ		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
eta	D WD MIE	Water	0.17	0.20	0.15	NR	0.20	0.20	0.22
Acetal	D, WD, MLF	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15
` [Oil	-	_	_	NR	_	_	0.10
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
	AS, HCAS	Water	NR	NR	NR	NR	NR	NR	NR
	A3, 11CA3	Soap & Water	NR	NR	NR	NR	NR	NR	NR
ļ		Oil	NR	NR	NR	NR	NR	NR	NR
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
	WSA, GSA,	Water	0.17	0.18	0.15	NR	0.20	0.20	0.22
	BSA	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15
		Oil	-	_	-	NR	_	_	0.10
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
	WSM, BSM, SMB	Water	0.17 0.12	0.18	0.15	NR	0.20	0.20	0.22
	SIVID	Soap & Water Oil	0.12	0.14	0.10	NR NR	0.15	0.15	0.15
}		-	0.25	0.27	0.20	0.33	0.25	0.25	0.10
		Dry Water	0.23	0.27	0.20	NR	0.20	0.20	0.30
	DUV	Soap & Water	0.17	0.10	0.10	NR	0.15	0.15	0.22
		Oil	-	-	-	NR		- 0.13	0.10
		Dry	0.34	0.35	0.33	0.43	0.31	0.30	0.38
		Water	0.27	0.30	0.29	NR	0.22	0.21	0.30
	SS, SSC	Soap & Water	0.14	0.15	0.15	NR	0.15	0.14	0.15
İ		Oil	-	-	-	NR	_	-	_
ľ		Dry	0.34	0.35	0.33	0.43	0.31	0.30	0.38
Metal	S	Water	NR	NR	NR	NR	NR	NR	NR
ΣΨ	3	Soap & Water	NR	NR	NR	NR	NR	NR	NR
[Oil	0.10	0.10	NR	NR	NR	NR	0.10
		Dry	0.28	0.47	0.35	0.40	0.30	0.30	0.35
	SSB	Water	0.19	0.31	0.25	NR	0.20	0.20	0.25
		Soap & Water	0.12	0.21	0.15	NR	0.10	0.10	0.15
		Oil	-	-	-	NR	-	-	0.15
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30
	WX/BWX	Water	NR	NR	NR	NR	NR	NR	NR
		Soap & Water	NR	NR	NR	NR	NR	NR	NR
-		Oil	- 0.25	- 0.27	- 0.20	NR 0.33	- 0.25	- 0.25	- 0.20
		Dry Water	0.25	0.27	0.20	0.33	0.25	0.25	0.30
	MR/FTR	Water Soap & Water	NR NR	NR ND	NR ND	NR	NR	NR	NR ND
چ		Oil		NR	NR	NR NR	NR	NR	0.10
Nylon			0.25	0.27	0.20	0.33	0.25	0.25	0.10
_		Dry Water	NR	NR	NR	NR	NR	NR	NR
	BWR	Soap & Water	NR	NR	NR	NR	NR	NR	NR
		Oil	-	-	-	NR	-	-	0.10
ŀ		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.10
		Water	0.17	0.18	0.15	NR	0.20	0.20	0.22
	HS	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15
		Oil	-	-	-	NR	-	-	0.10

NR denotes "not recommended"

Dash denotes "combination not tested"

All values shown in this table were obtained through product testing. Actual values may be higher or lower depending on environmental conditions.

Contact Rexnord Application Engineering for more information 1.262.376.4800



FRICTION TABLE BETWEEN CHAIN AND PRODUCT (Fm)

	Chain Material Chain Lubrication										
Base Material	Chain Material	Lubrication Condition	Aluminum	Returnable Glass Bottles**	Non- Returnable Glass Bottles	Paper	Plastic (crates, shrink)	Plastic (PET)	Steel		
		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
	тс	Water	0.17	0.18	0.15	NR	0.21	0.21	0.23		
		Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
		Oil		_	_	NR	0.10	0.10	0.10		
ter		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
/es	Р	Water	0.17	0.18	0.15	NR	0.21	0.21	0.22		
Polyester		Soap & Water Oil	0.12	0.14	0.10	NR NR	0.15	0.10	0.15		
_		-	0.25	0.27	0.20	0.33	0.25	0.25	0.10		
		Dry Water	0.23	0.27	0.20	0.33 NR	0.20	0.20	0.30		
	FR	Soap & Water	0.17	0.10	0.10	NR	0.20	0.25	0.22		
		Oil	-	-	-	NR	-	-	0.10		
0		Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
nate		Water	0.17	0.18	0.15	NR	0.20	0.20	0.22		
Fluorinated Polymer	CR	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
필요		Oil	-	-	-	NR	-	-	0.10		
	HT, WHT,	Dry	0.29	0.29	0.24	0.35	0.32	0.28	0.31		
	RHT, KHT,	Water	0.19	0.21	0.18	NR	0.24	0.20	0.25		
	нтв, внт, үр,	Soap & Water	0.15	0.14	0.10	NR	0.19	0.15	0.17		
	XP, USP	Oil	-	_	_	NR	-	-	0.10		
		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
	WHA, BHA	Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
	WHA, BHA	Soap & Water	0.16	0.14	0.10	NR	0.20	0.20	0.20		
		Oil	-	-	-	NR	_	-	0.10		
		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
ē	ESD	Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
Je.		Soap & Water	0.16	0.12	0.10	NR	0.20	0.20	0.20		
Polypropylene		Oil	_	_	-	NR		-	0.10		
/pr		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
6	THD	Water	0.19	0.21	0.17	NR	0.25	0.25	0.25		
		Soap & Water	0.16	0.14	0.10	NR	0.20	0.20	0.20		
		Oil	-	-	-	NR 0.25	-	-	0.10		
		Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35		
	HUV	Water Soap & Water	0.19	0.21 0.14	0.17	NR NR	0.25 0.20	0.25 0.20	0.25		
		Oil	-	0.14	0.10	NR	- 0.20	-	0.20		
		-	0.30	0.29	0.25	0.35	0.32	0.30	0.10		
		Dry Water	0.19	0.21	0.19	NR	0.32	0.25	0.25		
	UHS, YPR	Soap & Water	0.16	0.14	0.10	NR	0.19	0.20	0.20		
		Oil	-	_	_	NR	-	-	0.10		
		Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.28		
		Water	0.17	0.17	0.14	NR	0.18	0.18	0.22		
	WLT, BLT, LT	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
		Oil	_	-	_	NR	-	_	0.10		
		Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.28		
d)	WLA, BLA	Water	0.17	0.17	0.14	NR	0.19	0.19	0.22		
ene	WLA, BLA	Soap & Water	0.12	0.14	0.10	NR	0.25	0.25	0.15		
ξ		Oil	-	-	-	NR	-	-	0.10		
Polyethylene		Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.28		
Pol	GLD, RLD	Water	0.17	0.17	0.14	NR	0.18	0.18	0.22		
	J.D., N.L.D	Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
		Oil			_	NR	_	-	0.10		
		Dry	0.22	0.24	0.28	0.30	0.22	0.22	0.28		
	LUV	Water	0.17	0.17	0.14	NR	0.18	0.18	0.22		
		Soap & Water	0.12	0.14	0.10	NR	0.15	0.15	0.10		
		Oil	-	-	-	NR	-	-	0.10		
	All RubberTop	i I		1	1 1		1				

^{**} Friction of returnable bottles will depend on the quality of the glass, the amount of roughed up surface, etc.

NR denotes "not recommended" Dash denotes "combination not tested"

Multiflex Conveyor Chain **Materials**

> Friction Table Between Chain and Product (Fm)

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.

All rights reserved.

^{***} It is not recommended to accumulate on RubberTop products; however, these values can be utilized when determining brake belt or "hold back" calculations.

Multiflex Conveyor Chain **Materials**

> Friction Table **Between Chain and** Wearstrip (Fw)

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.

All rights reserved.



FRICTION TABLE BETWEEN CHAIN AND WEARSTRIP (Fw)

	Chain N	Vlaterial		Wearstrip	Material	
Base Material	Chain Material	Lubrication Condition	Steel and Stainless Steel	UHMWPE	Nylatron	ULF
		Dry	0.22	0.18	0.18	0.12
	PS	Water Soap & Water	0.20	0.16	0.16	0.11
		Oil	0.15 0.10	0.14	0.14 0.10	0.11
		Dry	0.10	0.18	0.18	0.12
	DCV	Water	0.20	0.16	0.16	0.11
	PSX	Soap & Water	0.15	0.14	0.14	0.11
		Oil	0.10	0.10	0.10	0.10
		Dry	0.22	0.18	0.18	0.14
	HP, WHP	Water Soap & Water	0.20 0.15	0.16 0.14	0.16 0.14	0.12 0.11
		Oil	0.10	0.10	0.10	0.10
		Dry	0.25	0.20	0.20	0.16
	LF, WLF, XL,	Water	0.20	0.18	0.18	0.14
	XLA, XLG	Soap & Water	0.15	0.15	0.15	0.13
		Oil	0.10	0.10 0.25	0.10 0.25	0.10
<u>.a</u>		Dry Water	0.30	0.25	0.25	0.20
Acetal	D, WD, MLF	Soap & Water	0.25	0.15	0.15	0.15
~		Oil	0.10	0.10	0.10	0.10
		Dry	0.30	0.25	0.25	0.20
	AS, HCAS,	Water	NR	NR	NR	NR
	HC-ESD	Soap & Water Oil	NR	NR 0.10	NR 0.10	NR 0.10
			0.30	0.10 0.25	0.10 0.25	0.10
	WSA, GSA,	Dry Water	0.30	0.21	0.21	0.18
	BSA	Soap & Water	0.15	0.15	0.15	0.15
		Oil	0.10	0.10	0.10	0.10
	WSM, BSM,	Dry	0.30	0.25	0.25	0.20
	SMB, BRSM,	Water	0.23	0.21	0.21	0.18
	BYSM, SYMB, SRMB	Soap & Water Oil	0.15 0.10	0.15 0.10	0.15 0.10	0.15 0.10
	SKIVID	Dry	0.30	0.10	0.10	0.10
	5.0.4	Water	0.23	0.21	0.21	0.18
	DUV	Soap & Water	0.15	0.15	0.15	0.15
		Oil	0.10	0.10	0.10	0.10
		Dry	0.40	0.30	0.30	0.30
	SS, SSC	Water Soap & Water	0.35 0.15	0.22	0.22 0.15	0.22
		Oil	0.15	0.10	0.10	0.10
		Dry	0.40	0.30	0.30	0.30
Metal	S	Water	NR	NR	NR	0.22
ž	3	Soap & Water	NR	NR	NR	0.15
		Oil	0.10	0.10	0.10	0.10
		Dry Water	0.50	0.40	0.40	0.40
	SSB	Soap & Water	0.20	0.30	0.20	0.20
		Oil	0.20	0.10	0.10	0.10
		Dry	0.30	0.25	0.25	0.22
	WX, FR-PA	Water	NR	NR	NR	NR
	,	Soap & Water Oil	NR NB	NR	NR	NR NB
			0.30	0.28	NR 0.28	0.25
		Dry Water	NR	NR	NR	NR
	MR, FTR	Soap & Water	NR	NR	NR	NR
		Oil	0.10	0.10	0.10	0.10
_		Dry	0.28	0.22	0.22	0.20
Nylon	BIR, BWR	Water	NR	NR	NR	NR NB
Z		Soap & Water Oil	0.10	0.10	NR 0.10	0.10
		Dry	0.30	0.10	0.10	0.10
	120	Water	0.25	0.23	0.23	0.22
	HS	Soap & Water	0.18	0.18	0.18	0.18
		Oil	0.10	0.10	0.10	0.10
		Dry	0.30	0.25	0.25	0.22
	FR-ESD	Water Soap & Water	NR NR	NR NR	NR NR	NR NR
		Oil	NR NR	0.10	0.10	0.10
	<u> </u>		1 1415	3.10	3.10	5.10

NR denotes "not recommended" Dash denotes "combination not tested"

Contact Rexnord Application Engineering for more information 1.262.376.4800



FRICTION TABLE BETWEEN CHAIN AND WEARSTRIP (Fw)

_	Chain M	/laterial		Wearstrip	Material	
Base Material	Chain Material	Lubrication Condition	Steel and Stainless Steel	UHMWPE	Nylatron	ULF
		Dry	0.30	0.25	0.25	0.22
	GTC	Water	0.23	0.21	0.21	0.20
	GIC	Soap & Water	0.15	0.15	0.15	0.15
		Oil	0.10	0.10	0.10	0.10
ē		Dry	0.30	0.25	0.25	0.22
Polyester	Р	Water	0.23	0.21	0.21	0.20
<u>o</u>	·	Soap & Water	0.15	0.15	0.15	0.15
₾.		Oil	0.10	0.10	0.10	0.10
		Dry	0.30	0.25	0.25	0.22
	FR	Water	0.23	0.21	0.21	0.20
		Soap & Water	0.15	0.15	0.15	0.15
-		Oil	0.10	0.10	0.10	0.10
er		Dry	0.30	0.25	0.25	0.22
in y	CR	Water	0.23	0.21	0.21	0.20
Fluorinated Polymer		Soap & Water Oil	0.15	0.15	0.15	0.15
Π		-	0.10	0.10	0.10	0.10
	HT, WHT,	Dry	0.35	0.30	0.30	0.26
	RHT, KHT,	Water	0.30	0.25	0.25	0.22
	XP, USP	Soap & Water Oil	0.25	0.20	0.20	0.19
	AF, U3F	-	0.10	0.10	0.10	0.10
		Dry	0.35	0.30	0.30	0.26
	WHA, BHA	Water	0.25	0.25	0.25	0.22
		Soap & Water Oil	0.20	0.20	0.20	0.19
			0.10	0.10	0.10	0.10
		Dry	0.35	0.30	0.30 0.25	0.26
j.	ESD	Water	0.25	0.25	0.25	0.22
Polypropylene		Soap & Water Oil	0.20	0.20	0.20	0.19
δ			0.10	0.10	0.30	0.10
y _p		Dry Water	0.35	0.30	0.30	0.28
Ъ	THD	Soap & Water	0.20	0.20	0.20	0.22
		Oil	0.10	0.10	0.10	0.17
			0.35	0.30	0.30	0.16
		Dry Water	0.33	0.30	0.16	0.20
	HUV	Soap & Water	0.24	0.20	0.10	0.22
		Oil	0.10	0.10	0.10	0.10
		Dry	0.35	0.30	0.30	0.26
		Water	0.30	0.25	0.25	0.22
	UHS, YPR	Soap & Water	0.25	0.20	0.20	0.19
		Oil	0.10	0.10	0.10	0.10
		Dry	0.28	0.23	0.23	0.21
	MUT 5: T : =	Water	0.22	0.20	0.20	0.19
	WLT, BLT, LT	Soap & Water	0.15	0.15	0.15	0.14
		. Oil	0.10	0.10	0.10	0.10
		Dry	0.28	0.23	0.23	0.21
4)	VA/LA DLA	Water	0.22	0.20	0.20	0.19
Polyethylene	WLA, BLA	Soap & Water	0.15	0.15	0.15	0.14
Ą		Oil	0.10	0.10	0.10	0.10
yet		Dry	0.28	0.23	0.23	0.21
<u>,</u>	CID DID	Water	0.22	0.20	0.20	0.19
ъ.	GLD, RLD	Soap & Water	0.15	0.15	0.15	0.14
		Oil	0.10	0.10	0.10	0.10
		Dry	0.28	0.23	0.23	0.21
	LUV	Water	0.22	0.20	0.20	0.19
	LUV	Soap & Water	0.15	0.15	0.15	0.14
		Oil	0.10	0.10	0.10	0.10

NR denotes "not recommended" Dash denotes "combination not tested"

Multiflex Conveyor Chain **Materials**

> Friction Table Between Chain and Wearstrip (Fw)

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Sprocket and Idler Wheel Designations

- > Plastic
- > Acetal (N)
- > LF Acetal (LF)
- > KU and KUS (Machined Plastic)
- > Metallic
- > Semi-Steel (Cast Iron)

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chains

SPROCKET AND IDLER WHEEL DESIGNATIONS

Rexnord has developed a variety of sprocket and idler materials for various and unique applications. Sprockets are available in plastic and metallic varieties.



Plastic

Acetal (N)

- ⇒ Good corrosion- and wear-resistant properties
- ⇒ One-piece sprocket
- ⇒ Temperature Range: -40° to +180°F (-40° to +82°C)

LF Acetal (LF)

- ⇒ Available in select idler wheel styles only
- ⇒ Self-lubricating
- ⇒ Temperature Range: -40° to +180°F (-40° to +82°C)

KU and KUS (Machined Plastic)

- ⇒ KU and KUS do not designate material
- ⇒ KU designates solid (one-piece) design and KUS designates a split (two-piece) design
- ⇒ Sprockets machined in a variety of plastic materials
- \Rightarrow Flush side for ease in cleaning
- ⇒ Sprockets come in a wide variety of pitch diameters and bore sizes



Metallic

Semi-Steel (Cast Iron)

- ⇒ Used in non-corrosive, abrasive environments such as broken glass, metal chips
- ⇒ One-piece sprocket
- \Rightarrow Temperature Range: -40 to +350°F (-40° to +177°C)

Proper chain and wearstrip selection will provide optimum life. Since a function of the wearstrip is to lower friction and to reduce wear, it is recommended to give careful consideration when selecting the material.

The following general guidelines will help in selecting the proper material for your application:



Plastic

Aceta

⇒ Not recommended for use with acetal chains; it is best not to run identical plastics together

Nylatron (Nylon with Moly Filler)

- ⇒ Recommended for dry applications due to low wear and low friction
- ⇒ Especially suited for dry operation on thermoplastic side-flexing chain corners due to its high PV (Pressure-Velocity) rating
- ⇒ Typically not recommended in wet applications because it will absorb moisture and expand (if used in wet applications, allow clearance for expansion and movement of fasteners)
- ⇒ Typically only used for curves

>

Metal

Aluminum

⇒ NOT RECOMMENDED due to poor wear resistance

Bronze and Brass

- \Rightarrow Sometimes used with stainless steel chains
- ⇒ Typically used for non-sparking and antistatic conditions
- ⇒ For bronze recommended one-half hard temper (Rb 58)
- ⇒ For brass recommended one-half hard (Rb 70 Min) to full hard (Rb 82) temper

Steel

- ⇒ Recommended for non-corrosive, abrasive or high-temperature applications
- ⇒ Abrasive particles are less likely to imbed in metal wearstrips in comparison to plastic
- ⇒ A cold-rolled plain carbon steel is recommended
- ⇒ Heat treated grades hardened to 25 to 30 Rc is recommended

⇒ Stainless Steel

- ⇒ Recommended for corrosive, abrasive or high-temperature applications
- ⇒ Abrasive particles are less likely to imbed in metal wearstrips in comparison to plastic
- ⇒ A cold-rolled austenitic grade is recommended which offers the best corrosion resistant properties
- ⇒ Recommended one-quarter hard temper (25 to 35 Rc) with any chain material, especially with thermoplastic
- ⇒ Softer annealed grades of austenitic are NOT RECOMMENDED. Adverse interaction between the chain material and the soft stainless steel might develop. When this happens, the resulting wear debris consists almost entirely of finely divided stainless steel particles, nearly black in color, similar to molydisulfide or graphite. The wear of the stainless steel might be rapid while the thermoplastic chain by contrast exhibits only slight wear.
- ➡ Martensitic stainless steel can also be used when heat-treated (25 to 35 Rc); however, it is not as corrosion-resistant as austenitic
 - Hardness is more critical than grade for better wear resistance

>

Specialty

> Teflon

⇒ Recommended only for very low-speed/low-load applications

Lubricant-Impregnated Wood

- ⇒ Commonly used in dry abrasive applications (i.e. glass, paper)
- ⇒ Not recommended in wet applications

Multiflex Wearstrip <u>Mate</u>rials

- > Plastic
- > Acetal
- > Nylatron (Nylon with Moly Filler)
- > Metal
- > Aluminum
- > Bronze and Brass
- > Steel
- > Stainless Steel
- > Specialty
- > Teflon
- > Lubricant-Impregnated Wood

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chain

> UHMWPE

(Ultra High

> ULF (Ultra Low-

Friction)

Molecular Weight Polyethylene)

CC WEARSTRIP MATERIALS

UHMWPE (Ultra High Molecular Weight Polyethylene)

- ⇒ Recommended for dry or wet applications on straight or side-flexing conveyors
- ⇒ Not recommended for abrasive conditions where particles may imbed in the surface and wear the chain
- ⇒ Provides lower coefficient of friction than metals
- ⇒ Not affected by moisture and more resistant to chemicals than nylon
- ⇒ UHMWPE materials can be supplied with various fillers:
 - Ceramic/glass
 - Conductive
 - Oil/wax

ULF (Ultra Low-Friction)

- ⇒ UHMWPE with self-lubricating additive package
- ⇒ Consistent low friction
- ⇒ Suitable for high-speed conveying where minimal or no external lubrication is present
- ⇒ Improved PV (Pressure-Velocity) properties in comparison to other curve materials



Wearstrip surface finish is a critical aspect for overall chain life.

Recommended wearstrip surface finish values are:

32 μ -in Ra (0.8 μ -m Ra) Metal: Nylatron: 63 μ -in Ra (1.6 μ -m Ra) **UHMWPE:** 125 μ -in Ra (3.2 μ -m Ra)

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.

All rights reserved.

Lubrication is recommended whenever the application permits. It not only reduces friction, thereby reducing chain tension, but also greatly improves the wear life of the chain and wearstrips. Lubrication offers a constant cleaning effect of both the chain and wearstrip and can also reduce static.


General Recommendations

- ⇒ Lubrication should contact both the chain and wearstrip.
- ⇒ When lubricating side-flexing TableTop chains, the lubricant must be applied at the entrance of the inside corner track. Metal side-flexing chains should ALWAYS be lubricated in the corners.
- ⇒ Depending upon the application, lubrication requirements may vary. Lubricant quality and lubrication frequency can have a great effect on the longevity of the chain. For most common applications, any ISO 68 grade lubricant is satisfactory. For applications with special considerations such as high temperature, chemical compatibility, FDA requirements, please contact your lubrication supplier.

General Types of Lubricants

- ⇒ Water Only utilize with corrosionresistant materials. Can be used as a general lubricant; however, it is not as effective as other types due to friction and chain-cleaning properties.
- ⇒ Water soluble lubricants and soaps Only utilize with corrosion-resistant materials.


 These are excellent lubricants which also help clean the chain.
- ⇒ Oil base lubricants These are vegetable, mineral oils or grease which offer high lubricity. Can be used with plastic or metal materials. Recommended to be used on all metal chains whenever practical. Food grade oils are available.

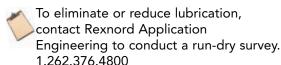

For more information on lubrication types, compatibility, methods, contact a lubricant manufacturer.

Dry Film Lubricants

- ⇒ A dry lubricant system has many of the same benefits of a run-dry conveyor with the added benefit of a lower coefficient of friction. A dry lubricant is applied by an automatic system with dosing units that put very little lubricant on select areas of the conveyors. The lubricant can be water- or oil-based with Teflon, silicone or solid micro-particles. The preferred lubricant is an oil and water emulsion. The most critical part of the process is how the lubricant is applied on the chain. This is typically accomplished with the use of brushes, shoes or spray nozzles. The benefit of spray nozzles is the absence of contact with the chain, eliminating the possibility of trapped dirt or debris. The lubricant can also be applied to the inside of a curve for side-flexing conveyors. There are many dry lubricant products on the market which have been specifically formulated for either plastic or metal chains and container types.
- ⇒ While dry lubricants offer many advantages, conveyor cleanliness considerations should be taken into account since dry lubes do not provide a continuous cleaning process like traditional water and soap lubrication.

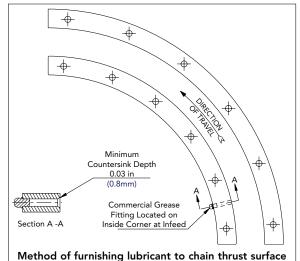

Selective Lubrication

⇒ In some applications, the presence of a lubricant cannot be tolerated. For these applications, it is recommended to utilize chains made of PSX, HP or PS acetal material with Nylatron corners, which offers the lowest coefficient of friction.

Multiflex Lubrication

- General Recommendations
- > General Types of Lubricants
- > Dry Film Lubricants
- > Selective Lubrication

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chains

- > Cleaning
- Inspection
- Repair and Replacement

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.

All rights reserved.

CC LUBRICATION - OTHER CONSIDERATIONS

Cleaning

In many applications, rapid build-up of grease, dirt, grit, sand, spilled syrup and beverage can occur. These result in:

- 1. Soiling and damage to the conveyed product
- 2. Increased work demands for the chain and
- 3. Accelerated sprocket tooth wear
- 4. Conveyor pulsation and wear
- 5. Excessive chain wear on the flight and in the joint areas
- Rapid wear of the wear strips.

Frequent cleaning of the chain and conveyor frame is advised. Such agents as steam, warm water and soap are commonly used. Many times combined "cleaner/lubricants" are applied continuously. Strong caustic agents used with metal chains should not be used with plastic chains. Always rinse cleaning agents completely off of chain and conveyor frame. When excessive amounts of syrup or other liquids, broken glass or debris accumulate, cleaning will be required on a regular basis to remove these undesirable materials. It is advisable to have operating personnel keep brushes and cleaning solutions nearby to remove broken glass and excessive spillage.



All cleaners and lubricants must be compatible with chain and conveyor materials. See page EM - TT - 15 or contact Rexnord.

Inspection

In the course of conveyor operation, periodic inspection of the chain, sprockets and system is required to detect faults and make repairs before serious damage occurs. The important thing is to set up a regular inspection and maintenance schedule.

Checklist

- 1. Look for unusual wear patterns on the
- Check for excessive gap between flights due to jam-up or overload.
- 3. Pulsating, jerky chain operation indicates poor lubrication or a conveyor obstruction.
- 4. Check deadplate and turntable clearance.
- Examine sprockets for signs of excessive wear.
- 6. Examine sprockets for signs of dirt buildup in tooth pockets.

- 7. Check for sprocket guide ring wear and possible chain misalignment.
- Check the ways and wear strips for excessive wear.
- 9. Inspect lubrication system for proper operation.
- 10. Check the inside curves and the supporting conveyor frame for excess heat buildup which may indicate an obstruction in the curve or a high-friction area.
- 11. If return support rollers are used, check to ensure rollers are free-turning.

Repair and Replacement

Any malfunctions found during an inspection usually stem from one or more of the following conditions:

- 1. Severe overloads, jam-ups or wedging of broken glass or crowns.
- 2. Severe back-flexing of chain on the return carrying ways.
- 3. Poor lubrication or no lubrication.
- 4. Interference and obstruction.
- 5. Worn sprockets.
- 6. Poor conveyor design.
- 7. Badly worn or damaged chain.

These causes should be corrected to avoid future problems.

Chain and sprockets should be replaced

- 1. The chain reaches 3% elongation.
- The chain jumps the sprocket.
- 3. The flights have worn to about one-half of the original thickness.
- The conveying surface becomes uneven through wear.
- 5. The thrust surface of side-flexing chains wears away and exposes the rivet or other metal parts which may cut into wearstrips or other conveyor components.
- 6. The sprocket teeth develop a hooked profile or the chain tends to "hang up" on the sprocket teeth.

These suggestions on chain and conveyor care serve as a quide toward maintaining continuous, trouble-free operation. Implementation of a conscientious programmed maintenance schedule will lead to many productive hours of conveyor operation.

CC ENVIRONMENTAL CONSIDERATIONS

Abrasive Applications

- ⇒ Applications with the presence of dirt, sand, glass or metal particles can lead to premature wear of the conveying chain and wearstrips.
- ⇒ Recommendations:
 - Utilize wearstrips and chains with a hard wear surface
 - If possible, use controls to minimize the amount of accumulation
 - The use of WX chain material and metal sprockets can extend wear life

Chemical Applications

⇒ Make sure any chemicals or cleaners used on conveyors are compatible with chain, wearstrip and sprockets. See table on page EM - TT - 15 for more detailed compatibility information.

Dry Applications

- ⇒ Considerations to be taken when running dry:
 - Product backline pressure
 - Conveyor cleanliness
 - Conveyor pulsation
 - ◆ Increased component wear

Extreme Temperature Applications

⇒ The recommended minimum and maximum operating temperatures for Multiflex chain and wearstrips can vary due to the presence of moisture.

Wearstrip	Mini Tempe	mum erature	Maximum Temperature						
Material	D	ry	D	ry	W	et			
111010011011	°F	°C	°F	°C	°F	°C			
Acetal	-40	-40	180	82	150	66			
UHWMPE/ULF	-100	-73	180	82	160	71			
Nylon	-40	-40	220	104	NR	NR			
Stainless Steel	-100	-73	800	427	250	121			
Steel	-40	-40	350	177	NR	NR			
Lubricated Impregnated Wood	-50	-46	160	71	160	71			

Metal Detector Applications

⇒ Plastic chains passing through metal detectors can be supplied with plastic pins on a Made-To-Order (MTO) basis (requires 60% Derate).

High-Speed Applications

⇒ In any high-speed application, the critical aspect of the conveyor is the corners. The concern with running the chain at high

speeds is the PV (Pressure-Velocity) in the corners. If the PV limits are exceeded, the chain or corner track may become damaged due to the heat generated from the high speed and/or load. It is generally recommended to utilize Nylatron corner tracks in conjunction with PS or HP materials or selective lubrication for these applications. PSX chain with ULF corner tracks will provide the best PV capability and least energy consumption.

Long-Length Conveyors/Pulsation **Applications**

⇒ Pulsation or "slip stick" of chain results in a jerking chain motion which can occur in long, slow-speed and dry conveyors. Pulsation can create product stability problems in extreme cases. It can also result in premature chain elongation or the chain jumping drive sprocket teeth. As a general rule of thumb, it is recommended that conveyor lengths do not exceed 100 ft (30m) per drive, regardless of loading. Rexnord also recommends a 150° minimum wrap on the head sprocket. If necessary, this can be maintained with the use of a snubber roller.

Static Environment Applications

⇒ Under certain conditions, thermoplastic can acquire a static nuisance charge. Static environments are classified as:



Class I: Static spark causes explosion stainless steel chains are required.

Class II: Static spark is a nuisance charge — low charge will provide slight shock or possible circuit damage.

⇒ All applications utilizing thermoplastic anti-static materials (i.e. AS, ESD) must be approved by Rexnord Application Engineering prior to quoting.



Grounding is crucial for the system to reduce static charges.

UV Applications

⇒ When conveyor chains are exposed to direct UV (Ultraviolet) or sunlight, DUV stabilized material should be utilized.

Multiflex **Environmental Considerations**

- Abrasive **Applications**
- Chemical **Applications**
- > Dry Applications
- Extreme Temperature **Applications**
- **Metal Detector Applications**
- **High Speed Applications**
- > Long-Length Conveyors/Pulsation **Applications**
- > Static Environment **Applications**
- > UV Applications

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Environmental Considerations

> Multiflex Chain Material Selection Table

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chains

MATERIAL CHARACTERISTIC TABLE

Material		Metal							1	hermo	plasti	ς					
Characteristics	s	ss	SSB	HP WHP	LF WLF	D WD	BWR	AS HCAS	ESD	HS	Р	CR	MR	DUV	FR	PS PSX	WX BWX
Impact-Resistant	•	•	•				•					•	•				•
Wear-Resistant	•	•	•	•	•		•									•	•
Chemical-Resistant*		•	•									•	•				
High Strength	•	•	•	•	•	•	•			•	•	•	•	•		•	•
Low Frictional Characteristics				•	•	•										•	
Capability to Run Dry in Corners				•	•		•						•			•	•
Suitability in Wet Environments		•	•	•	•	•				•	•	•		•	•	•	
Low-Temperature Capability (to 40°F)	•	•	•	•	•	•	•			•			•	•		•	•
High-Temperature Capabilities (to +180°F)	•	•	•	•	•	•	•	•	•	•	•	•	•	•		•	•
Ultra Violet Capabilities	•	•	•				•					•	•				•
Suitability for Class II (nuisance static)	•	•	•					•	•								
Suitability for Class I (explosive static)		•	•														
Non-magnetic Qualities		•	•	•	•	•	•	•	•	•	•	•	•	•	•	•	•
Flame Retardance	•	•	•									•			•		
Capability to Convey Hot Products (to +375°F)	•	•	•										•				•
FDA Approval		•	•	•	•	•					•	•				•	

ESD = Electrostatic Dissipative

SS = Stainless Steel HS = Heat-Stabilized
SSB = Low Magnetic Stainless Steel P = Chemical-Resistant

HP = High Performance CR = Extreme Chemical-Resistant

WHP = White High Performance MR = Melt-Resistant

WD = White Acetal PSX = Platinum Series X

BWR = Black Wear-Resistant WX = Abrasion-Resistant

AS = Anti-Static BWX = Black Abrasion-Resistant

HCAS = Anti-Static High Capacity

*See Corrosion Resistance Guide on Page EM - MF - 15 for more details

CCC CORROSION RESISTANCE GUIDE

Common	Carbon Steel	Austenitic	Acetal	Nylon and Nylatron	Polyester	Chemically Resistant Fluorinated Polymer	Polypropylene	Polyethylene	Neoprene	EPDM
or Chemical Name	S	SS, SSB	AS, HCAS, DUV, HP, LF, PS, PSX, WD, WHP, WLF	BWR, HS, MR, WX, BWX	P, FR	CR	ESD	UHMWPE		
Acetic Acid (over 5%-up to 50%)	U	М	U	М	S	S	S	S	М	S
Acetone	U	S	S	S	S	U	S	S	М	S
Alcohol	S	S	S	S	S	S	S	S	S	S
Ammonia	М	S	U	S	S	S	S	S	S	S
Beer	S	S	S	S	S	S	S	S	S	S
Beverages-Soft Drinks	S	S	S	S	S	S	S	S	S	S
Benzene	S	S	S	S	S	S	М	М	М	U
Brine (pickle)	U	М	М	М	S	S	S	S	S	S
Carbon Tetrachloride	М	М	S	S	S	U	М	М	U	U
Chlorine	U	U	U	U	S	S	S	S	U	М
Citric Acid	U	S	М	М	S	S	S	S	S	S
Cyclohexane	-	-	S	-	-	S	U	U	S	S
Ethyl Chloride	_	S	S	S	S	S	М	M	М	М
Formaldehyde	S	S	S	S	S	M	S	S	S	S
Formic Acid	U	U	U	U	S	S	S	S	M	M
Fruit Juices	U	S	S	S	S	S	S	S	S	S
Gasoline	S	S	S	S	S	S	M	M	S	U
Hexane	-	S	S	-	S	S	S	U	S	U
Hydrochloric Acid (up to 2%) Hydrochloric Acid	U	U	U	U	S	S	S	S	М	S
(up to 37%)	U	U	U	U	S	S	M	S	U	М
Hydrogen Peroxide	U	S	U	U	S	S	M	S	M	S
lodine Isopropanol	S	S	S	S	S	M S	M S	M S	U S	U S
(isopropyl alcohol) Lactic Acid	U	S	S	M	S	M	S	S	S	S
Methylene Chloride	_	S	S	-	U	M	S	U	U	U
Milk	S	S	S	S	S	S	S	S	S	S
Muriatic Acid	U	U	U	U	S	S	M	S	U	M
Nitric Acid (low concentrations)	U	S	U	U	S	S	S	S	M	S
Oil (vegetable or mineral)	S	S	S	S	S	М	S	S	S	U
Ozonated Water	S	S	М	U	S	S	М	S	U	S
Paraffin	S	S	S	S	S	S	S	S	S	U
Phosphoric Acid (up to 10%)	U	S	U	U	S	S	S	S	S	S
Soap and Water	М	S	S	S	S	S	S	S	S	S
Sodium Chloride	U	М	S	S	S	S	S	S	S	S
Sodium Hydroxide (up to 25%)	U	S	S	U	U	М	S	S	S	S
Sodium Hypochlorite (Bleach)		U	U	U	S	S	S	S	U	S
Stearic Acid	U	S	М	S	S	S	S	S	S	М
Sulfuric Acid (up to 40%)	U	U	U	U	S	S	S	S	М	S
Toluene (Toluol)	S	S	М	S	S	М	S	U	U	U
Turpentine	-	S	S	S	S	S	S	U	S	U
Vegetable Juices	М	S	S	S	S	S	S	S	U	S
Vinegar	U	S	S	S	S	М	S	S	S	S
Water (fresh)	U	S	S	S	S	S	S	S	S	S
Whiskey	S	S	S	S	S	S	S	S	S	S
Wine	S	S	S	S	S	S	S	S	S	S
Xylene	S	S	S	S	S	S	U	M	U	U

Dash = Not Tested

M = Marginal

U = Unsatisfactory

S = Satisfactory



General Rules of Thumb:

With acetal products, do not use cleaning or lubricating agents with a pH below 4 or above 10. This table is based on data available by various material suppliers.

Multiflex
Environmental
Considerations

CorrosionResistanceGuide

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chains

- Side-Flexing Configuration
- > Straight-Running and Side-Flexing Configuration

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.


All rights reserved.

CONVEYOR DESIGN RECOMMENDATIONS


Straight-Running Configuration

⇒ A long conveyor with a single drive is the simplest and most ideal design. Sometimes several short conveyors are required due to application constraints

Side-Flexing Configuration

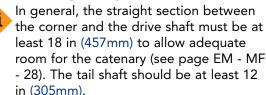

- Depending on chain style, corner discs or corner tracks can be utilized
- Corner discs are used to guide the chain without significant increase in chain tension
- ⇒ When conveying from Point A to Point B, design the conveyor so that the drive is positioned furthest from the last corner (see drawing), resulting in lower chain tension and maximizing chain life

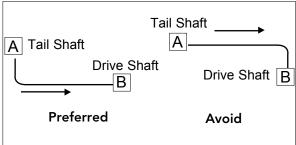

⇒ Consideration should be given to the design of the curves within a conveyor such that if the chain has little to no "allowable twist", the curve should be designed to **NOT** change elevation while simultaneously side-flexing through the curve. Doing so on chains that do not twist will bind the chain and lead to chain failure. Multiflex chains have negligible "allowable twist" hence curves should be designed so as NOT to

change elevation while side-flexing through the curve.

Straight-Running and Side-Flexing Configuration

- ⇒ The conveyor frame is designed to support the chain on the bottom of the link
- ⇒ For applications where debris is a concern. an open design, such as a serpentine design, is preferred over full-width support
- ⇒ The serpentine design prevents the buildup of debris in the track and distributes the wear evenly across the bottom of the link
- ⇒ Abrasive applications should utilize steel or stainless steel wearstrips
- ⇒ Wet abrasive applications should utilize stainless steel wearstrips and pins
- ⇒ Non-abrasive conditions should utilize **UHMWPE** or Nylatron wearstrips



Multiflex chains should not be twisted.



1700, 1702, 1755, 1765, 2550 and 2565 chains MUST utilize corner discs.




Make sure that the entire chain path (carry, return, sprocket and catenary sag areas) has plenty of clearance for free chain travel. Make sure all frame and support members, piping, conduits and mounting hardware are well clear of chain path.


CCC CONVEYOR DESIGN RECOMMENDATIONS

Carry Ways

⇒ Guide clearance is critical for Multiflex chains. For guide clearance dimensions of individual chains, see table on page EM - MF - 21 or Product Catalog (8rxCAT-en).

Side-Flexing — Straight Edge Design

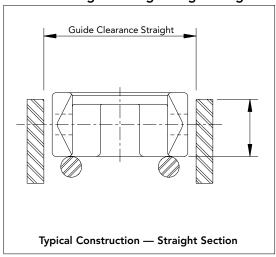

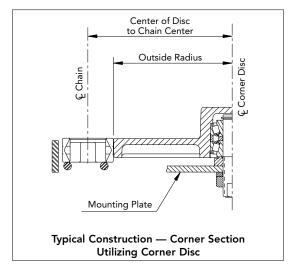

- ⇒ Chain can be lifted out of straight sections for cleaning or inspection
- ⇒ Longer conveyors can be achieved with the use of corner discs



🔔 1700, 1702, 1755, 1765, 2550 and 2565 chains MUST utilize corner discs.

Multiflex Conveyor Design

- > Carry Ways
- Side-Flexing -Straight Edge Design

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Conveyor **Design**

- > Carry Ways
- Side-Flexing -**Bevel Design**

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.

All rights reserved.


Multiflex Chains


CCCCONVEYOR DESIGN RECOMMENDATIONS


Carry Ways

⇒ Guide clearance is critical for Multiflex chains. For guide clearance dimensions of individual chains, see table on page EM - MF - 21 or Product Catalog (8rxCAT-en).

Side-Flexing — Bevel Design

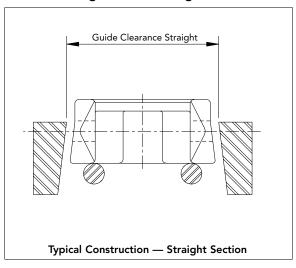

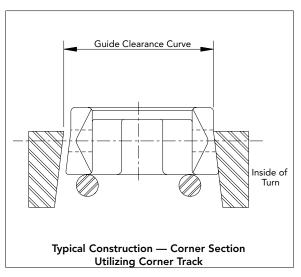

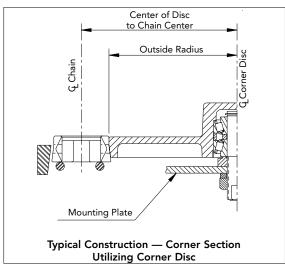

- \Rightarrow Chain can be lifted out of straight sections for cleaning or inspection
- ⇒ Longer conveyors can be achieved with the use of corner discs




1700, 1702, 1755, 1765, 2550 and 2565 chains MUST utilize corner discs.


- > Carry Ways
- Side-Flexina TAB Design


Carry Ways

⇒ Guide clearance is critical for Multiflex chains. For guide clearance dimensions of individual chains, see table on page EM - MF - 21 or Product Catalog (8rxCAT-en).

Side-Flexing — TAB Design

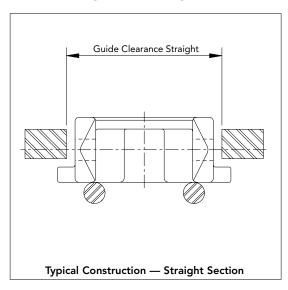

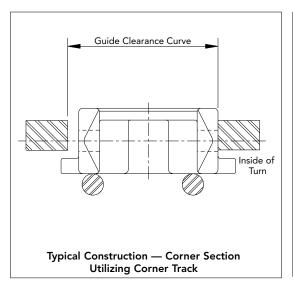

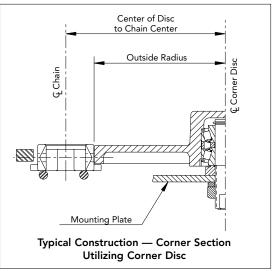

- ⇒ Positive retention
- ⇒ TABs hold chain down in incline or decline applications
- ⇒ Chain top surface wear is decreased if the TAB return is utilized
- ⇒ Longer conveyors can be achieved with the use of corner discs
- ⇒ Once assembled, the TAB chain cannot be lifted out of the conveyor track



🚣 1700, 1702, 1755, 1765, 2550 and 2565 chains MUST utilize corner discs.

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Conveyor Design

> Side-Flex Radius Table

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

InItiflex Chains

SIDE-FLEX RADIUS TABLE

Chain	Chain	Width	Minimum Sid	e-Flex Radius
Style	in	mm	in	mm
1700	2.17	55.1	5.75	146.1
AC 1700	2.17	55.1	5.75	146.1
1701	2.09	53.1	5.75	146.1
1701 TAB	2.09	53.1	5.75	146.1
AC 1701 TAB	2.09	53.1	5.75	146.1
1702	2.09	53.1	5.75	146.1
1755	1.09	27.7	5.38	136.5
1757 TAB	3.25	82.6	6.00	152.4
LBP 1757 TAB	3.25	82.6	6.00	152.4
1757 TAB G	3.25	82.6	8.00	203.2
1765	2.17	55.1	4.92	125.0
2500 TAB	2.63	66.8	9.50	241.3
2550 TAB	3.50	88.9	9.50	241.3
2565	3.50	88.9	9.50	241.3

Mu	ltif	ex
Con	ve	yor
De	sig	jn

> Guide Clearance Table

Chain Style Hold Down Style		1701	1701T AC 1701T	2500T	AC 1700 1700 1765	1702	1755	1757T LBP 1757T 1757T G	2550T 2565
		Bevel	TAB	ТАВ	N/A	N/A	N/A	ТАВ	ТАВ
Guide Clearance Straight	in	2.19	2.34	2.97	2.28	2.34	1.20	2.44	3.76
	mm	55.6	59.5	75.4	58.0	59.4	30.5	61.9	95.4
Guide Clearance Corner	in	2.34	2.25	2.81	N/A	N/A	N/A	*	N/A
	mm	59.4	57.2	71.4	N/A	N/A	N/A	*	N/A
Corner Wearstrip Thickness	in	0.63	0.63	0.75	Must Use Corner Disc	: Use Must Use	Must Use Corner Disc	*	Must Use Corner Disc
	mm	16.0	16.0	19.0		Corner Disc Corner Disc		*	

^{*}Rexnord only offers corner discs for these chains; however corner tracks can be utilized.

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chains

Multiflex Conveyor Design


- > Transfers
- > Side Transfer
- > Inline Transfer

CCCONVEYOR DESIGN RECOMMENDATIONS

Transfer


⇒ Smooth transfer of the conveyed product from one chain to another is essential. The various methods are described below:

Side Transfer

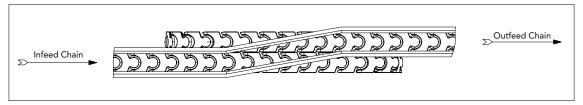

- **/**
- Adjacent strands of chain should share a common wearstrip
- ✓ ⇒ No stranded products

Inline Transfer

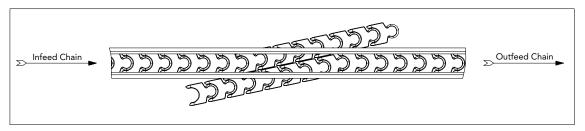

- /
- \Rightarrow Adjacent strands of chain should share a common wearstrip
- Allows product to remain in straight line
- ⇒ No stranded products
- These arrangements are used in an offset wrap drive, which allows a single strand of chain to be used; see page EM TT 28 (TableTop Section) for offset wrap drive details.

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

Multiflex Chains

>

Alternate Drive Configurations

Alpine Conveyor

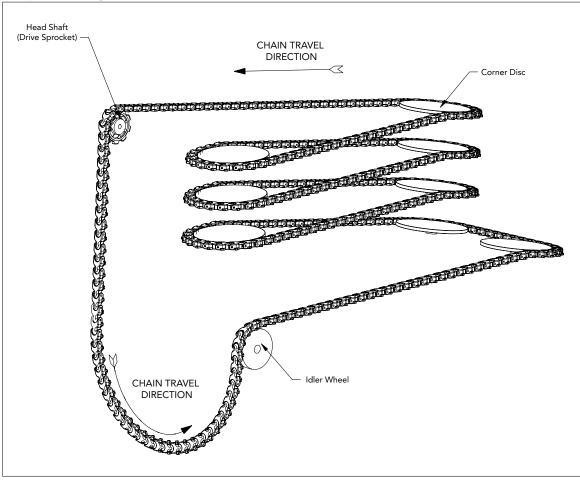

- ⇒ Multiflex chains have the ability to elevate or lower products in a very compact area. This figure shows a typical elevating system and how the chain is returned in a non-standard configuration.
- ⇒ Full return is not required
- ⇒ The chain hangs straight down from the drive sprocket and side-flexes back up into the tail section
- ⇒ Elevators can be designed with free-hanging (catenary sag) and sliding returns
- ⇒ Roller returns are not recommended
- \Rightarrow The straight and corner return sections can be the same as the carry section
- ⇒ The chain is run in the conveyor upside down through the return section
- ⇒ Depending on chain design, discs may have to be mounted upside down in the return

> Alternate Drive Configurations

> Alpine Conveyor

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics

All rights reserved.

Multiflex Chain

> Return Ways

- > Serpentine Style
- > Side-Flexing Straight Edge Design
- Return

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.

All rights reserved.


Multiflex Chains

CCCONVEYOR DESIGN RECOMMENDATIONS

Return Ways


Serpentine Style Return

- A wide selection of chain returns are possible with Multiflex chains which offers considerable conveyor design freedom
- ⇒ The chain is fully supported
- ⇒ Allows for drainage and the passage of foreign materials

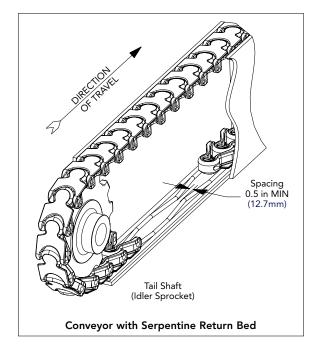

Side-Flexing — Straight Edge Design

- ⇒ The corner disc in the return section is mounted in the same manner as in the carry section
- Depending on chain design, discs may have to be mounted upside down in the return

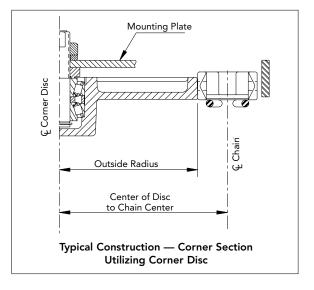

When returning chain with molded inserts (HPM), caution should be taken to ensure that the inserts do not interfere with the return elements.

Possible solutions:

- Return the chain on its TABs
- Return the chain on the outer edge of the links via rollers or wearstrips


> Return Ways Side-Flexing -**Bevel Design**


> Side-Flexing —

TAB Design

Return Ways


Side-Flexing — Bevel Design

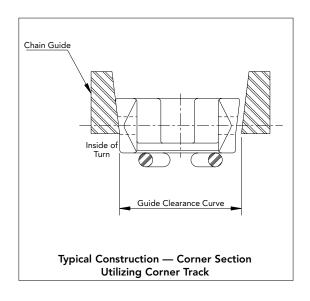

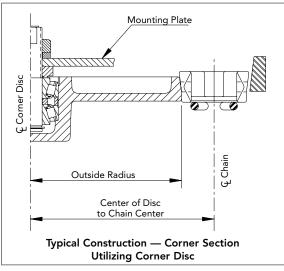


- ⇒ The corner disc in the return section is mounted in the same manner as in the carry section
- Depending on chain design, discs may have to be mounted upside down in the return

Side-Flexing — TAB Design

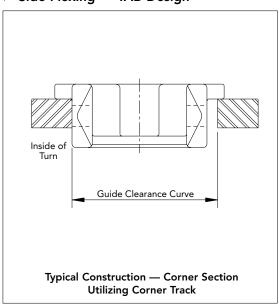

- Mounting Plate Corner Disc **G** Chain Outside Radius Center of Disc to Chain Center Typical Construction — Corner Section **Utilizing Corner Disc**
- ⇒ The corner disc in the return section is mounted in the same manner as in the carry
- Depending on chain design, discs may have to be mounted upside down in the return

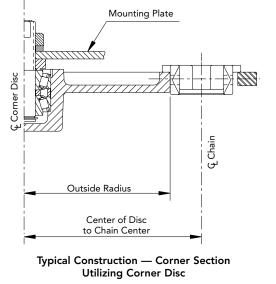

1700, 1702, 1755, 1765, 2550 and 2565 chains MUST utilize corner discs.

Contact Rexnord Application Engineering for more information 1.262.376.4800

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

> Multiflex Incline Conveyors

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chains

CCCONVEYOR DESIGN RECOMMENDATIONS


>

Multiflex Incline Conveyors




To ensure proper functioning of these conveyors it is important that:


- ⇒ The chain enters and leaves the disc in the same plane as the disc
- ⇒ In the transition zone, the wearstrips should be curved to accomplish smooth transition from one plane to the next
- ⇒ The maximum angle of incline or decline for an application depends on product stability and friction between chain and product

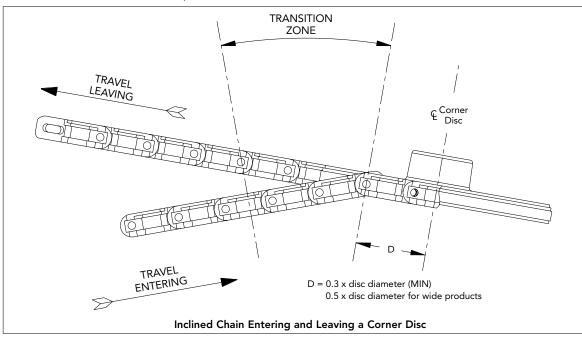

- ⇒ When inclining, the chain must pass through a transition zone **prior** to entering the disc
- ⇒ The disc should be tipped so that it lies in the same plane as the chain exiting the disc

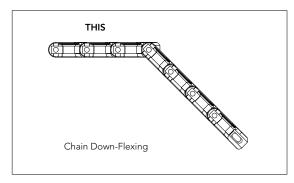

⇒ Any change in angle of chain travel should be made by down-flexing the chain as shown

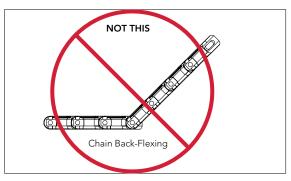

⇒ Back-flexing through a change in angle will cause the chain to rise out of the conveyor frame


> Multiflex Decline Conveyors

Multiflex Decline Conveyors




To ensure proper functioning of these conveyors it is important that:


- ⇒ The chain enters and leaves the disc in the same plane as the disc
- ⇒ In the transition zone, the wearstrips should be curved to accomplish smooth transition from one plane to the next
- ⇒ The maximum angle of incline or decline for an application depends on product stability and friction between chain and product

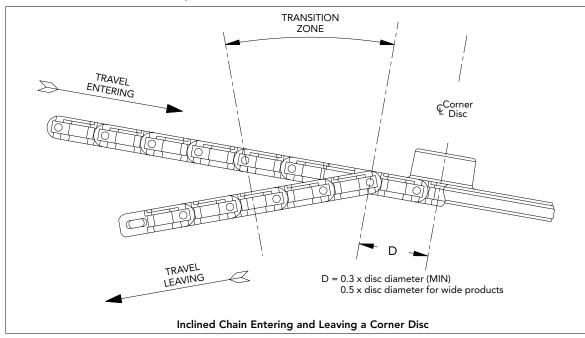

- ⇒ When declining, the chain must pass through a transition zone after exiting the disc
- ⇒ The disc should be tipped so that it lies in the same plane as the chain entering the disc

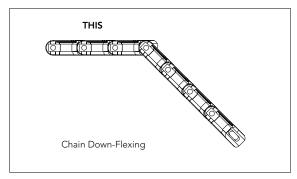

⇒ Any change in angle of chain travel should be made by down-flexing the chain as shown

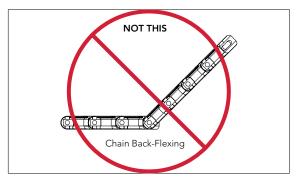

⇒ Back-flexing through a change in angle will cause the chain to rise out of the conveyor frame

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chains

> Return Ways

> Catenary Sag


CCCONVEYOR DESIGN RECOMMENDATIONS



Return Ways

Catenary Sag

- ⇒ The function of the catenary is to allow a place for excess chain to accumulate
- ⇒ Multiflex chains should never be run tight
- ⇒ The catenary sag should be measured when running
- ⇒ If catenary sag is excessive or increases due to wear, it should be adjusted by removing links to obtain the proper sag
- ⇒ Take-ups are typically not recommended
- ⇒ The catenary sag should be located as close to the drive as possible

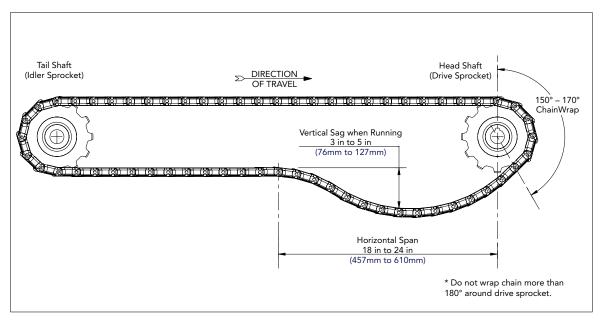



The catenary sag area must be free of all obstructions, such as frame cross-members, supports, drive components, that can damage chain or inhibit proper catenary sag.



It is recommended to keep the sprockets and chain clean of debris and foreign matter. 🚓 If this is not done, the chain can stick to (not release freely from) the drive sprockets causing the catenary to bounce leading to possible chain damage or breakage. In cases of extreme environments, a hold down roller can be positioned above the catenary near the drive sprocket(s) to keep the chain from overwrapping the drive sprocket(s).

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant **Engineering Plastics** Products.


All rights reserved.

Return Ways

Entry Radius for Sliding Returns

Provide a generous entry radius to the return section which permits the chain to feed smoothly into the return ways

- ⇒ The entry radius should be greater than the minimum back-flex radius of the chain (see table below)
- ⇒ Rexnord recommends a 6 in (152mm) minimum entry radius to prevent non-uniform wear
- ⇒ When returning a chain on its TABs, guide the chain onto the return wearstrips using a guide shoe (see table on page EM MF 21 for proper guide clearance)
- ⇒ At the entry of the return wearstrips, provide rounded corners to prevent catching or snagging of the chain flights

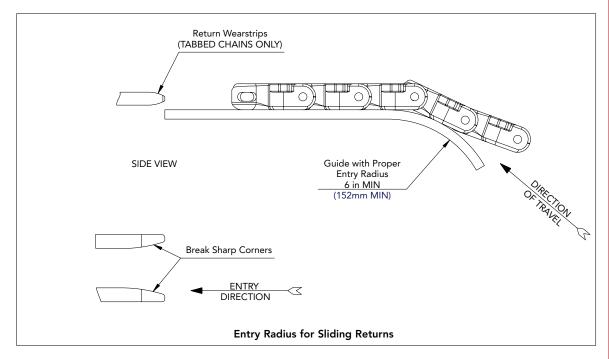

Back-Flex Radius Table						
Chain Style	Min. Back-Flex Radius					
	in	mm				
1700, AC1700, 1701, 1701TAB, AC1701TAB, 1702, 1755, 2500TAB, 2550TAB	1.50	38.1				
2565	3.50	88.9				
1757TAB, LBP1757TAB	4.00	101.6				
1765	2.50	63.5				

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products

All rights reserved.

Multiflex Chain

Multiflex Conveyor Design

- > Sprocket and Wearstrip Location
- > Sprocket Location for Conventional

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chains

CCCCONVEYOR DESIGN RECOMMENDATIONS

Spr

Sprocket and Wearstrip Location

- ⇒ The distance from the end of the wearstrip to the sprocket shaft centerline should equal dimension "C" (one chain pitch); otherwise the wearstrip will interfere with the free articulation of the chain as it enters the sprocket.
- ⇒ The leading edges of the wearstrip should be beveled
- ⇒ The following formulas and dimensions used in conjunction with the figure will give the proper shaft and wearstrip positioning:

Sprocket Location for Conventional Chains

A = (Pitch Diameter/2) - E

C = One Chain Pitch (which ensures support under chain at all times)

⇒ See table below for C and E dimensions

Example:

For a 1700 chain utilizing a 10T sprocket:

 $A = (Pitch \ Diameter/2) - E = (6.369 \ in/2) - 0.470 \ in = 2.715 \ in$ $C = 1.97 \ in$


Metric:

 $A = (Pitch \ Diameter/2) - E = (161.77mm/2) - 11.94mm = 68.95mm$ C = 50.0mm



Tolerances

A = +.03 in / -.00 in (+.8 mm / -.0 mm)C = +.25 in / -.00 in (+6.3 mm / -.0 mm)

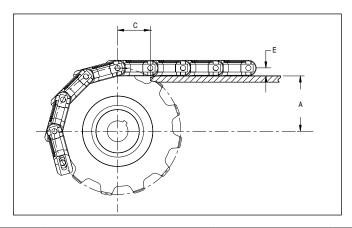

Shaft Drop Values — For Conventional Chains								
Chain Series	Chain Numbers	"C" Din	nension	"E" Dir	nension			
		in	mm	in	mm			
1700	1700, AC1700	1.97	50.0	0.470	11.94			
1701	1701	1.97	50.0	0.480	12.19			
1701TAB	1701TAB, AC1701TAB	1.97	50.0	0.480	12.19			
1702	1702	1.97	50.0	0.480	12.19			
1755	1755	1.58	40.0	0.250	6.35			
1765	1765	1.97	50.0	0.470	11.94			
2500TAB	2500TAB	3.00	76.2	0.700	17.78			
2550TAB	2550TAB	3.00	76.2	0.700	17.78			
2565	2565	3.00	76.2	0.700	17.78			



For 1757 chains, see page EM - TT - 33 (TableTop section).


CCC CONVEYOR DESIGN RECOMMENDATIONS

>

Sprocket Pitch Diameter vs. Outside Diameter

In some instances, it is possible for a sprocket's pitch diameter to be larger than the outside diameter. This is not a problem because the link does not contact the sprocket on the pitch circle.

Why Pitch Diameter Is Larger Than the Outside Diameter on Small Sprockets

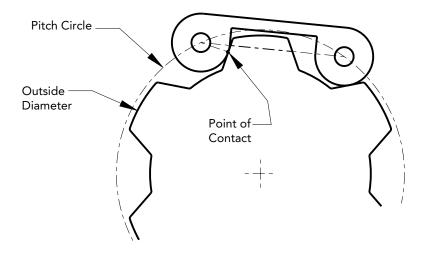

- \Rightarrow The outside diameter is to the outer tips of the teeth.
- ⇒ The chain's pins are on the pitch diameter. On a very small sprocket, the chord created by the link causes the point where the sprocket contacts the tooth to be much closer to the sprocket center than the pins and the pitch circle.



Chordal action is defined as the up and down motion of the chain over top dead center of the sprocket centerline. Excessive chordal action can lead to product tippage.

Multiflex Conveyor Design

- Sprocket PitchDiametervs. OutsideDiameter
- > Why Pitch
 Diameter Is
 Larger Than
 the Outside
 Diameter on
 Small Sprockets

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics

All rights reserved.

Multiflex Chains

- > Idler Wheel and Sprocket Location (Stationary Shafts Only)
- > Shafting Recommendations for Stationary Tail Shafts

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


All rights reserved.

Multiflex Chains

CCCCONVEYOR DESIGN RECOMMENDATIONS

Idler Wheel and Sprocket Location (Stationary Shafts Only)

⇒ For proper location and smooth operation, the idler wheels should be mounted slightly below the top of the wearstrips

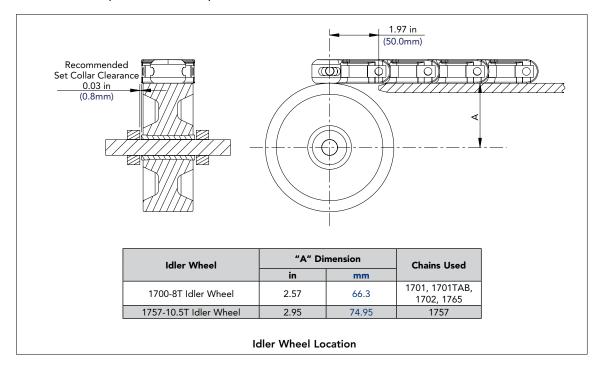

Shafting Recommendations for Stationary Tail Shafts

Recommended Materials:

- ⇒ Carbon Steel (dry environments only)
- ⇒ Stainless Steel

Suggested Hardness:

⇒ 25 to 30 Rc

Suggested Surface Finish:

⇒ 63 µ-in Ra



Rexnord recommends rotating shafts in bearings. If bearings are not used, the following are guidelines for operating Multiflex sprockets on stationary shafts:

Sprocket	Max. Recommended Chain Speed				
Spiceact	FPM	MPM			
N - Acetal	0–50	0–15			
UHMWPE	0–50	0–15			
NS - Nylon, Split	0–100	0–30			
LF Bushing (Idler Wheel)	0–300	0–90			
Bronze Bushing	0–500	0–150			
Bearings	Recommended for Speeds > 500	Recommended for Speeds > 150			

CONVEYOR DESIGN RECOMMENDATIONS

Multiflex Conveyor Design


>

Keyway and Setscrew Sizes

English:		KEYWAY		
Shaft Diameter	Key Width (w)	Key Height (h)	Keyseat at Depth (h/2)	Setscrew Size
> 9/16" to 7/8"	3/16"	3/16"	3/32"	1/4-20
> 7/8" to 1-1/4"	1/4"	1/4"	1/8"	3/8-16
> 1-1/4" to 1-3/8"	5/16"	5/16"	5/32"	3/8-16
> 1-3/8" to 1-3/4"	3/8"	3/8"	3/16"	3/8-16
> 1-3/4" to 2-1/4"	1/2"	1/2"	1/4"	1/2-13
> 2-1/4" to 2-3/4"	5/8"	5/8"	5/16"	1/2-13

Metric:

Shaft Diameter	Key Width (w)	Key Height (h)	Keyseat at Depth (h/2)	Setscrew Size
> 22mm to 30mm	8mm	7mm	3.5mm	M6 x 1
> 30mm to 38mm	10mm	8mm	4mm	M8 x 1.25
> 38mm to 44mm	12mm	8mm	4mm	M10 x 1.5
> 44mm to 50mm	14mm	9mm	4.5mm	M10 x 1.5
> 50mm to 58mm	16mm	10mm	5mm	M12 x 1.75
> 58mm to 65mm	18mm	11mm	5.5mm	M12 x 1.75

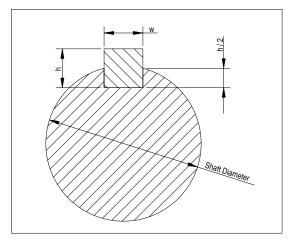

English keyed round bore sprockets are available with one setscrew as standard. Additional setscrews can be provided upon request. Metric keyed round bore sprockets are not supplied with a setscrew as standard.

CAUTION

If multiple strands share a tail shaft, key only one sprocket and allow others to rotate. Collars should be utilized to prevent lateral movement. Split Sprocket Bore Nomenclature
Shaft Ready — Tight fit on the shaft with a keyway and setscrew.

Plain Bore — Same tight fit bore as a shaft ready bore, but without a keyway and setscrew.

Idler Bore — Round bore with a clearance fit (no keyway or setscrew). Designed to spin freely on the shaft.

Rough Stock Bore — Wide tolerance bore used for work in process. Not for use on any shaft. Must be further machined for actual use.

Over Sized Bore — Round bore with a slightly loose fit on the shaft with keyway but no setscrew. Designed to move laterally on the shaft during setup and still transmit torque through the keyway as a drive sprocket in the actual application. Not recommended for axial float in thermal applications.

> Keyway and Setscrew Sizes

> Split Sprocket Bore Nomenclature

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products

All rights reserved.

Multiflex Chain

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.

Multiflex Chains

TableTop CALCULATION PROGRAM

The TableTop Calculation Program is available to perform chain pull calculations for specific conveyor applications.

Chain Pull Calculations

To obtain the most recent calculation program:


- Download from Technical Support at: http://www.rexnord.com/flattop
- Contact Application Engineering

⇒ Prior to performing chain pull calculations, the following information is needed:

- ◆ Chain style, material and width
- Wearstrip material
- Corner disc or corner track material
- Lubrication conditions (i.e. dry, water, Soap & Water, oil)
- ◆ Chain speed (FPM) or (MPM)
- Product weight (lbs/ft) or (kg/m)
- Product material
- Number of starts per hour (e.g. indexing conveyors)
- Percent of time product accumulation occurs (i.e. slippage)
- Portion of conveyor where product accumulation occurs
- Conveyor layout with dimensions

⇒ The calculation output sheet contains the following information:

- Calculated headshaft chain tension
- Maximum allowable headshaft chain tension
- ◆ Percent of allowable chain tension
- Total horsepower required with an assumed gearbox efficiency of 100%
- Calculated corner tension (PV)
- ◆ Maximum allowable corner tension

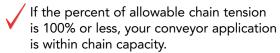



The horsepower requirement the program calculates is the "design horsepower" that is required to power the conveyor based on the input parameters. Additional considerations should be made for the type of drive used, efficiency losses in the power train, appropriate service factors, as well as any gearbox manufacturer's recommendations.



Rexnord recommends some sort of soft start for all FlatTop chain conveyor motors, but especially for higher speeds and conveyors with bottom drives. Hard starts add peak loads to the chain, which will shorten the service life. Hard starts can also cause the chain to stretch and bounce in the catenary sag section, sometimes causing the chain to catch in the conveyor frame and become damaged. On bottom drives, hard starts can cause the chain to fall off the drive sprockets and skip teeth.



If the calculated corner tension is less than the maximum allowable corner tension, your conveyor application is within chain PV capacity.

⇒ The TableTop Chain Calculation Program calculates the following:

- Carousel conveyor analysis (i.e. offset wrap drive conveyors)
- Universal conveyor analysis (i.e. alpine systems, multiple loading systems)
- ◆ Catenary sag vs. length vs. tension
- ◆ Catenary sag vs. length vs. excess chain
- Product backline pressure (due to accumulation)



The TableTop Calculation Program does not take environmental conditions into consideration. This calculation program ONLY provides information on whether the chain is within capacity.

Friction Formulas

⇒ When inclining or declining, the coefficient of friction must be modified between chain and wearstrip (Fw)

Incline: $Fw_{incline} = (Fw_{horizontal} \times Cos\emptyset) + Sin\emptyset$ Decline: $Fw_{decline} = (Fw_{horizontal} \times Cos\emptyset) - Sin\emptyset$



For an example of calculating chain speed, see page EM - TT - 39 (TableTop Section).

TableTop Calculation Program

> Typical Product Sizes and Weights

> Typical Product Sizes and Weights

	Content	Container Material	Container Size	Base Din	nensions	Weig	ht Full	Single	File	En Masse	
			Container Size	inches	mm	lbs	kg	lbs/ft	kg/m	lbs/ft²	kg/m²
		Paper	1/2 Pint	3 x 3	76.2 x 76.2	0.60	0.27	2.4	3.6	-	_
		Paper	Pint	3 x 3	76.2 x 76.2	1.10	0.50	4.4	6.5	-	-
Dairy	Milk	Paper	Quart	3-1/8 x 3-1/8	79.4 x 79.4	2.30	1.04	8.8	13.1	-	-
		Paper	1/2 Gallon	4-1/8 x 4-1/8	104.8 x 104.8	4.50	2.04 4.04	13.1	19.5		-
		Plastic Plastic	Gallon 6 oz	6 x 6 2-5/8 Ø	152.4 x 152.4 66.7Ø	8.90 0.40	0.18	17.8	26.5	9.7	46.9
	Yogurt	Plastic	6 Pack / 4 oz Containers	5 x 7	127 x 177.8	1.57	0.71	3.8	5.6	-	40.7
		Plastic	1/2 lb	4 Ø	101.6Ø	0.60	0.27	1.8	2.7	6.2	30.3
	Cottage Cheese	Plastic	1 lb	4-3/4 Ø	120.7Ø	1.10	0.50	2.8	4.1	8.1	39.4
	-	Plastic	2 lb	5 Ø	127Ø	2.30	1.04	5.5	8.2	15.3	74.4
	Concentrated Juice	Paper	12 oz	2-5/8 Ø	66.7Ø	1.00	0.45	4.6	6.8	24.1	117.2
		Plastic	Gallon	6 Ø	152.4Ø	1.17	0.53	2.3	3.5	5.4	26.3
	Juice	Glass	Gallon	60	152.4Ø	3.59	1.63	7.2	10.7	16.6	80.6
		Paper Plastic	6.75 oz Box (Tetra) 10 Pack / 6.75 Boxes (Tetra)	1-1/2 x 2-1/4 3 x 10-1/2	38.1 x 57.2 76.2 x 266.7	0.48 4.87	0.22 2.21	3.8 19.5	5.7 29.0		_
		Aluminum	250ml PET	2-5/64 Ø	52.9Ø	0.63	0.29	3.6	5.4	24.3	117.4
		Aluminum	12 oz	2.6 Ø	66.0Ø	0.85	0.39	3.9	5.8	20.9	101.8
		Plastic	500ml PET	2-37/64 Ø	65.5Ø	1.16	0.53	5.4	8.0	29.0	141.0
	C (D : 1	Plastic	20 oz PET	2-7/8 Ø	73.0Ø	1.37	0.62	5.7	8.5	27.6	134.1
	Soft Drink	Plastic	1 Liter PET	3-3/16 Ø	81.0Ø	2.31	1.05	8.7	12.9	37.8	183.7
		Plastic	1-1/2 Liter PET	4-3/16 Ø	106.4Ø	3.40	1.54	9.7	14.5	32.2	156.7
		Plastic	2 Liter PET	4-1/2 Ø	114.3Ø	4.40	2.00	11.7	17.5	36.1	175.7
		Plastic	3 Liter PET	5-1/8 Ø	130.2Ø	6.38	2.89	14.9	22.2	40.4	196.3
		Glass	12 oz	2-1/2 Ø	63.5Ø	1.50	0.68	7.2	10.7	39.9	194.0
		Glass	12 oz Non-Returnable	2-3/4 Ø	69.9Ø	1.20	0.54	5.2	7.8	26.4	128.1
Daviana maa		Glass	16 oz Non-Returnable	2-3/4 Ø	69.9Ø	1.60	0.73	7.0	10.4	35.2	170.8
Beverages		Glass	32 oz	2-5/8 Ø 3-5/8 Ø	66.7Ø	3.40	1.54	15.5	23.1	82.0	398.6 238.6
		Glass Aluminum	64 oz 12 oz	2.6 Ø	92.1Ø 66.0Ø	3.88 0.85	1.76 0.39	12.8	19.1 5.8	49.1 20.9	101.8
	Beer	Paper	12 Pack / 12 oz Cans	10-3/4 x 7-3/4	273.1 x 196.9	10.40	4.72	11.6	17.3	-	101.0
		Paper	12 Pack Fridge Pack	16 x 4-7/8	406.4 x 123.8	10.32	4.68	7.7	11.5	_	_
		Paper	24 Pack / 12 oz Cans	16 x 10-3/4	406.4 x 273.1	20.16	9.14	15.1	22.5	_	-
		Paper	24 Pack / 12 oz Cans (cube)	10-3/4 x 7-3/4	273.1 x 196.9	20.16	9.14	22.5	33.5	_	-
		Paper	18 Pack / 12 oz Cans	16 x 7-3/4	406.4 x 196.9	14.69	6.66	11.0	16.4	-	-
		Paper	30 Pack / 12 oz Cans	13-1/2 x 7-3/4	342.9 x 196.9	24.48	11.10	21.8	32.4	-	-
	Wine / Champagne	Glass	750ml	2-7/8 Ø	73.0Ø	2.88	1.31	12.0	17.9	57.9	281.9
		Glass	1.5 Liter	4-1/4 Ø	108.0Ø	6.37	2.89	18.0	26.8	58.6	284.9
		Glass	12 oz	2-1/2 Ø	63.5Ø	1.22	0.55	5.9	8.7	32.5	157.8
		Paper Metal	4 Pack / 12 oz Bottles 1/2 lb	5-1/8 x 5-1/4 4-1/8 Ø	130.2 x 133.4 104.8Ø	5.07 0.80	2.30 0.36	11.9 2.3	17.7 3.5	7.8	38.0
		Metal	1/2 lb	4-1/8 Ø	104.8Ø	1.30	0.59	3.8	5.6	12.7	61.7
	Coffee	Metal	2 lb	5-1/4 Ø	133.4Ø	2.50	1.13	5.7	8.5	15.1	73.3
		Metal	3 lb	6-1/4 Ø	158.8Ø	3.80	1.72	7.3	10.9	16.2	78.6
	Baby Food	Glass	Regular	2-3/8 Ø	60.3Ø	0.56	0.25	2.8	4.2	16.5	80.3
	Baby Food	Glass	Junior	2-3/8 Ø	60.3Ø	0.80	0.36	4.0	6.0	23.6	114.8
	Soup	Metal	10.5 oz	2-5/8 Ø	66.7Ø	0.76	0.34	3.5	5.2	18.3	89.1
	Soup	Metal	18.5 oz	3-1/8 Ø	79.4Ø	1.33	0.60	5.1	7.6	22.6	110.0
	Soup	Metal	32 oz	40	101.6Ø	1.90	0.86	5.7	8.5	19.7	96.0
	Cracker	Paper	10 oz Box	2-1/4 x 5-1/4	57.2 x 133.4	0.72	0.33	3.8	5.7	- 21.2	102.2
	Peanut Butter	Plastic	18 oz	3 Ø	76.2Ø	1.15	0.52	4.6	6.8	21.2	103.3
Food	Jelly Jelly	Glass Glass	32 oz 18 oz	3-5/16 Ø 2-5/8 Ø	84.1Ø 66.7Ø	2.15	0.98	7.8 7.4	11.6	32.6 39.1	158.6 189.9
	Catsup	Plastic	18 oz 24 oz	2-5/8 W 2-1/4 x 3-3/4	57.2 x 95.3	1.63	0.73	8.7	12.9		107.7
	Apple Sauce	Glass	23 oz	3-5/16 Ø	84.1Ø	2.05	0.74	7.4	11.1	31.1	151.2
	Mayonnaise	Glass	32 oz	4 Ø	101.6Ø	3.03	1.37	9.1	13.5	31.5	153.1
	Cereal	Paper	14 oz Box	2-3/8 x 7-1/2	60.3 x 190.5	1.06	0.48	5.4	8.0	-	-
	Vegetable	Metal	14.5 oz	2-15/16 Ø	74.6Ø	1.04	0.47	4.2	6.3	20.0	97.5
	Tuna	Metal	12 oz Can	4 Ø	101.6Ø	0.88	0.40	2.6	3.9	9.1	44.5
	Tomato Sauce	Metal	29 oz	4 Ø	101.6Ø	2.07	0.94	6.2	9.2	21.5	104.6
	Dish Soap	Plastic	25 oz	2-7/16 x 3-3/8	61.9 x 85.7	1.78	0.81	8.8	13.0	-	-
	Liquid Laundry Soap	Plastic	22 oz	2 x 3-3/8	50.8 x 85.7	1.60	0.73	9.6	14.3	-	
	Liquid Laundry Soap	Plastic	32 oz	2-5/8 x 4-1/2	66.7 x 114.3	2.30	1.04	10.5	15.6		
Cleaners	Liquid Laundry Soap	Plastic	100 oz	5-1/2 x 7-3/4 3-1/4 Ø	139.7 x 196	7.01 2.40	3.18 1.09	15.3	22.8	37.8	193.5
	Liquid Bleach Liquid Bleach	Plastic Plastic	Quart 1/2 Gallon	3-1/4 Ø 4-3/4 Ø	82.6Ø 120.7Ø	4.80	2.18	8.9 12.1	13.2 18.0	35.4	183.5 171.9
	Liquid Bleach	Plastic	Gallon	6-1/4 Ø	158.8Ø	9.50	4.31	18.2	27.1	40.4	196.5
	Liquid Bleach	Plastic	182 oz	7-1/4 Ø	184.2Ø	8.16	3.70	13.5	20.1	25.8	125.5
	Toilet Paper	Paper	Individual Roll	4-1/4 Ø	108.0Ø	0.23	0.10	0.6	1.0	2.1	10.3
Toiletries	Toilet Paper	Plastic	4 Pack	4-1/4 x 8-1/2	108 x 215.9	0.93	0.42	2.6	3.9	-	-
	Toilet Paper	Plastic	24 Pack	12 x 15-1/2	304.8 x 393.7	5.67	2.57	5.7	8.4	-	-
	Tire	Passenger	Typical	28 Ø	711.2Ø	35.00	15.87	-	-	-	-
Automotive			Typical	48 Ø	1219.2Ø	150.00	68.03			_	-

Rexnord, TableTop, MatTop, HP, PS, Platinum Series, and UHS are trademarks of Rexnord.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

All rights reserved.


Multiflex Chains

Contact Rexnord Application Engineering for more information 1.262.376.4800

Multiflex Notes

CGC N	OTES
-------	------

Rexnord, TableTop,		
MatTop, HP, PS, Platinum Series, and		
UHS are trademarks of Rexnord.		
Nylatron is a registered trademark of Quadrant Engineering Plastics		
Products.		
All rights reserved.		
su		
Itiflex Chains		
×e		
Hiff.		

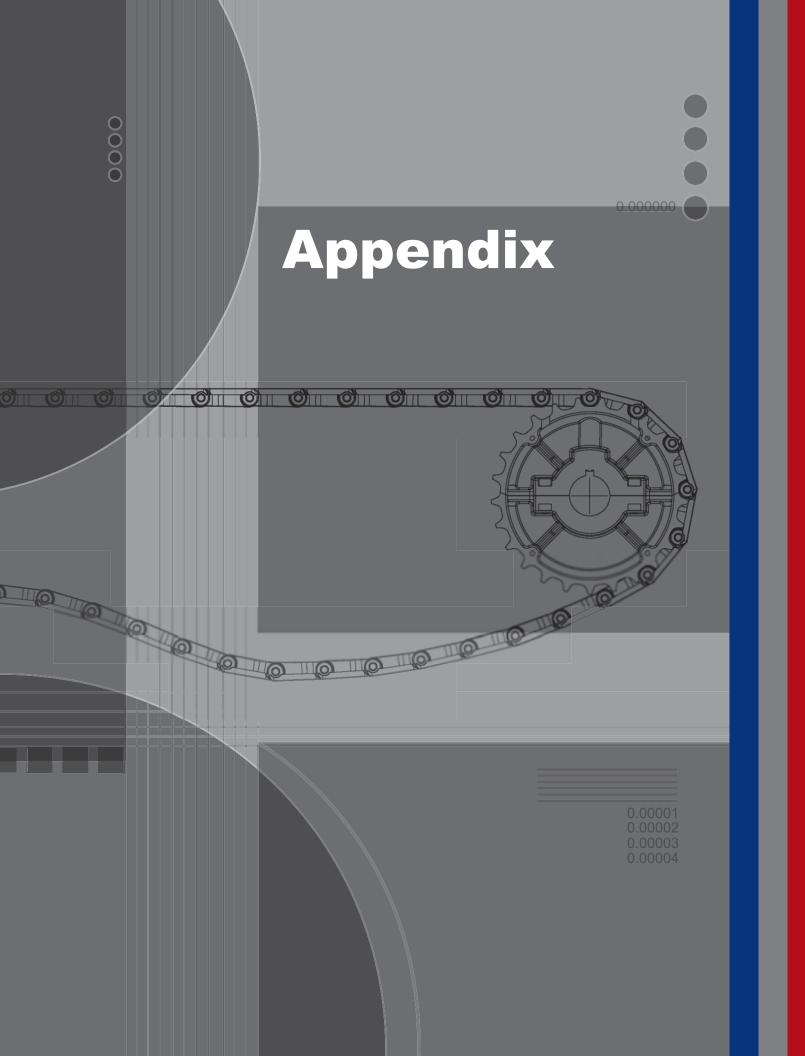




MATERIAL INDEX

Material Prefix	Description	Page	Primary Components	FDA Approved
AS	Anti-Static	MA - 1	Electrically conductive acetal (POM)	No
BHA	Blue High Temperature Antimicrobial	MA - 40	Polypropylene (PP) Microban® antimicrobial product protection	***
BHT	Blue High Temperature	MA - 21	Polypropylene (PP)	Yes
BIR	Black Impact Resistant	MA - 2	Impact resistant nylon (PA)	No
BLA	Blue Low Temperature Antimicrobial	MA - 41	Polyethylene (HDPE) Microban® antimicrobial product protection	Yes
BLT	Blue Low Temperature	MA - 25	Polyethylene (HDPE)	***
BRSM	Black Cut Resistant with Red Links	MA - 3	Cut and abrasive wear resistant acetal (POM)	Yes
BSA	Blue Special Acetal Antimicrobial	MA - 42	Cut resistant acetal (POM) Microban® antimicrobial product protection	***
BSM	Black Cut Resistant	MA - 43	Cut and abrasive wear resistant acetal (POM)	Yes
BUV	Blue Acetal Ultraviolet Resistant	MA - 7	Ultraviolet resistant acetal (POM)	No
BWR	Black Wear Resistant	MA - 4	Wear resistant nylon (PA) composite	No
BYSM	Black Cut Resistant with Yellow End Links	MA - 3	Cut and abrasive wear resistant acetal (POM)	Yes
CR	Extreme Chemical Resistant	MA - 5	Fluorinated polymer	Yes
D	Plain Acetal	MA - 6	Acetal (POM)	No
DUV	Plain Acetal Ultraviolet Resistant	MA - 7	Ultraviolet resistant acetal (POM)	No
EPDM	Ethylene Propylene Rubber	MA - 8	Ethylene Propylene Rubber	No
ESD	Electrostatic Dissipative	MA - 9	Electrically conductive polypropylene (PP)	No
FR	Flame Retardant	MA - 10	Flame retardant polyester (PBT)	No
FR-ESD	Flame Retardant Electrostatic Dissipative	MA - 11	Flame retardant electrostatic dissipative Nylon (PA)	No
FR-PA	Flame Retardant Nylon Material	MA - 12	Flame retardant Nylon (PA)	No
FTR	Fryer Temperature Resistant (Black)	MA - 13	Fryer Temperature Resistant Nylon (PA).	Yes
GLD	Grey Low Temperature Detectable Antimicrobial	MA - 14	Polyethylene (HDPE) and nonferrous metal particulate Microban® antimicrobial product protection	***
GSA	Grey Special Acetal Antimicrobial	MA - 42	Cut resistant acetal (POM) Microban® antimicrobial product protection	***
GTC	Grey Tough Composite	MA - 15	High strength, impact modified composite.	No
HCAS	High Capacity Anti-static (Black)	MA - 16	High capacity Anti-static acetal (POM)	No
HC-ESD	High Capacity Electrostatic Dissipative	MA - 17	High capacity electrostatic dissipative acetal (POM)	No
HP	High Performance	MA - 18	High performance, internally lubricated acetal (POM)	Yes
HS	Heat Stabilized	MA - 20	Heat stabilized nylon (PA)	No
HT	High Temperature	MA - 21	Polypropylene (PP)	Yes
НТВ	Black High Temperature	MA - 21	Polypropylene (PP)	Yes
HTF	High Temperature Friction Top	MA - 22	High temperature polypropylene with TPE high friction pads	No
HUV	High Temperature Ultraviolet Resistant	MA - 23	Ultraviolet resistant polypropylene (PP)	No
KHT	Khaki High Temperature	MA - 21	Polypropylene (PP)	Yes
LF	Low Friction	MA - 24	Low friction acetal (POM)	Yes
		MA - 25		
LT	Low Temperature (natural)		Low friction acetal (POM)	Yes
LUV	Low Temperature Ultraviolet Resistant	MA - 26	Ultraviolet resistant polyethylene (HDPE)	No
MLF	Medium Duty Low Friction (Tan)	MA - 27	Low friction acetal (POM)	No
MR	Melt Resistant	MA - 28	Melt resistant nylon (PA)	No
Neoprene	Neoprene	MA - 29	Neoprene	No
P	Chemical Resistant	MA - 30	Polyester (PBT)	Yes
PS®	Platinum Series	MA - 31	High speed, Platinum Series internally lubricated acetal (POM)	Yes
PSX®	Platinum Series	MA - 32	High speed, Platinum Series internally lubricated acetal (POM)	Yes
RHT	Red High Temperature	MA - 21	Polypropylene (PP)	Yes
RLD	Red Low Temperature Detectable Antimicrobial	MA - 14	Polyethylene (HDPE) and nonferrous metal particulate Microban® antimicrobial product protection	***
RSM	Red Cut Resistant	MA - 43	Cut and abrasive wear resistant acetal (POM)	Yes
RUV	Red Acetal Ultraviolet Resistant	MA - 7	Ultraviolet resistant acetal (POM)	No
S	Carbon Steel	MA - 33	Carbon steel	No
SMB	Blue Cut Resistant	MA - 43	Cut and abrasive wear resistant acetal (POM)	Yes
SRMB	Blue Cut Resistant with Red End Links	MA - 3	Cut and abrasive wear resistant acetal (POM)	Yes
SS	Stainless Steel	MA - 34	Austenitic stainless steel	Yes
SSB	Stainless Steel Low Magnetic	MA - 35	Low ferromagnetic austenitic stainless steel	Yes
SYMB	Blue Cut Resistant with Yellow End Links	MA - 3	Cut and abrasive wear resistant acetal (POM)	Yes
THD	Tan High Temperature Detectable Antimicrobial	MA - 37	Polypropylene (PP) and nonferrous metal particulate	***
UHS	Ultra High Strength	MA - 38	High strength polypropylene (PP) composite	No
USP	Ultra Stabilized Polypropylene	MA - 39	Polypropylene (PP) and Chemical Stabilizers	Yes
WD	White Plain Acetal	MA - 6	Acetal (POM)	No
WHA	White High Temperature Antimicrobial	MA - 40	Polypropylene (PP)	***
WHP	White High Performance	MA - 22	High performance, internally lubricated acetal (POM)	Yes
WHT	White High Temperature	MA - 25	Polypropylene (PP)	Yes
WLA	White Low Temperature Antimicrobial	MA - 41	Polyethylene (HDPE)	***
WLF	White Low Friction	MA - 24	Low friction acetal (POM)	Yes
WLT	White Low Temperature	MA - 21	Polyethylene (HDPE)	Yes
WSA	White Special Acetal Antimicrobial	MA - 42	Cut resistant acetal (POM)	***
WSM	White Cut Resistant	MA - 43	Cut and abrasive wear resistant acetal (POM)	Yes
WX	Green Abrasion Resistant Polymaide	MA - 44	Abrasion Resistant Polymaide (PA) Composite	No
XLA	Internally Lubricated Polyacetal (Grey)	MA - 45	Internally lubricated polyacetal (POM)	Yes
XLG	Low Friction Acetal (Green)	MA - 46	Internally lubricated polyacetal (POM)	Yes
YSM	Yellow Cut Resistant	MA - 43	Cut and abrasive wear resistant acetal (POM)	Yes
YUV	Yellow Acetal Ultraviolet Resistant	MA - 7	Ultraviolet resistant acetal (POM)	No
			1520 (c) the FDA requirement for polyplefin materials intended for direct food contact. All	

^{***}These materials meet the end-test requirements as specified by FDA 21 CFR 177.1520 (c), the FDA requirement for polyolefin materials intended for direct food contact. All components of these materials are either compliant for food contact as listed by the FDA or regulated by the EPA.

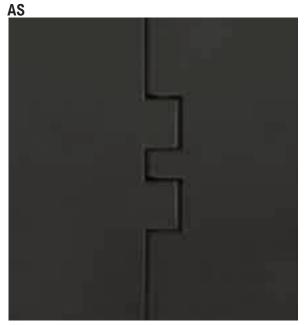

Formulated to reduce or eliminate nuisance static buildup that can occur while conveying products or during product accumulation. Used to dissipate nuisance sparks for Class II type static environments only. Please contact Application Engineering at 262.376.4800 for specific uses for this material.

Primary Components

Electrically conductive acetal (POM)

General Information

	Material	Temperature						
Prefix		Fahrenheit			Celsius			FDA
rielix			max		min	max		Approval
		min	dry	wet	1111111	dry	wet	
AS	Anti-Static (Black)	0	+180	NR	-18	+82	NR	No

Friction Factors Between Material and Product

Onorotina	Product Material							
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel	
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30	
Water	NR	NR	NR	NR	NR	NR	NR	
Soap and Water	NR	NR	NR	NR	NR	NR	NR	
Oil	NR	NR	NR	NR	NR	NR	NR	

Friction Factors Between Material and Wearstrips


motion ractore between material and recursors									
Onevetina	Wearstrip Material								
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™					
Dry	0.30	0.25	0.25	0.20					
Water	NR	NR	NR	NR					
Soap and Water	NR	NR	NR	NR					
Oil	NR	0.10	0.10	0.10					

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation. All rights reserved.

- 1. Types of Static Environments:
 - Class I: Static spark causes explosion. Use stainless steel chain materials. Class II: Static spark is a nuisance charge causing slight shock, possible circuit damage or electrical malfunction.
- 2. Electrical Properties: Surface resistivity = $10^3 \Omega/\text{sq}$.
- Wearstrip Recommendations: Wearstrips must be grounded to the conveyor frame and must be electrically conductive to be effective. The conveyor frame should also be externally grounded.
- 4. Strength Considerations:
 - Rexnord® TableTop® & MatTop® Chains molded from anti-static material must be derated 40% from their acetal counterparts.
 - Pressure-Velocity (PV) Limits: PV Limit of Rexnord® TableTop® Chains molded from anti-static material must be derated 40% from acetal materials. PV Limits relate to the speed and tension exerted as the chain travels around the corners.
- Depending on application requirements, the entire conveyor chain can be comprised of anti-static material or sections of antistatic material can be interspersed at various intervals.
- AS friction factor should be used when interspersing AS links into any other material.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

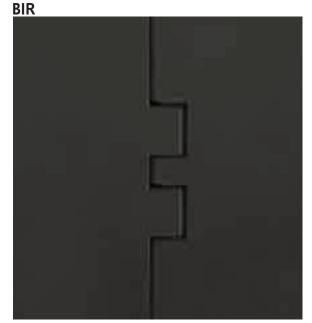

BIR is an impact resistant material specifically formulated to take constant impact. It has excellent impact resistance as well as good chemical resistance.

Primary Components

Impact resistant nylon (PA)

General Information

	Material	Temperature						
Prefix		Fahrenheit			Celsius			FDA
rielix		min	max		min	max		Approval
		min	dry	wet	min	dry	wet	
BIR	Black Impact Resistant	-40	+180	NR	-40	+82	NR	No

Friction Factors Between Material and Product

Operating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil				NR			0.10			


Friction Factors Between Material and Wearstrips

THOUGHT TUOLOTO BOLL	roon material and	aiotiipo							
Onevetina	Wearstrip Material								
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™					
Dry	0.28	0.22	0.22	0.20					
Water	NR	NR	NR	NR					
Soap and Water	NR	NR	NR	NR					
Oil	0.10	0.10	0.10	0.10					

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation. All rights reserved.

- 1. Strength Considerations:
 - Pressure-Velocity (PV) Limits: PV Limit of Rexnord® TableTop® Chains molded from impact resistant material must be derated 20% from acetal materials.
 PV Limits relate to the speed and tension exerted as the chain travels around the corners.
- It is important to lubricate side-flexing chains in the corners to reduce noise levels at speeds in excess of 100FPM; water lubrication is unacceptable because it will cause melt resistant material to swell and lose strength.
- 3. Not intended for wet applications due to expansion

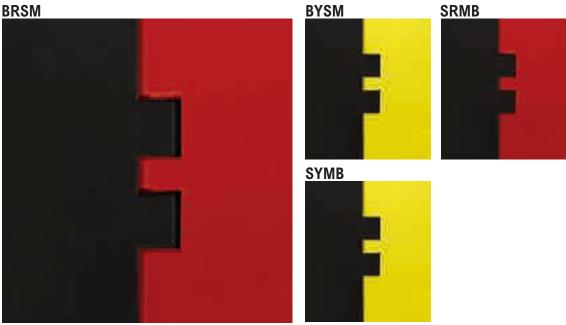

Automotive handling applications require chains to be assembled with different color end links to provide contrast. These are the same chain modules molded in wear and cut resistant materials (BSM, SMB, RSM and YSM) only assembled in the same chain. Can be used in both dry and wet conditions and in applications where abrasive wear due to products or environment is a concern. Has good impact resistance and is as strong as standard acetal materials.

Primary Components

Cut and abrasive wear resistant acetal (POM)

General Information

Prefix	Material	F	ahrenhe	it		FDA		
	wateriai	min	m	ах	min	m	ах	Approval
			dry	wet	min	dry	wet	
BRSM	Black Cut Resistant with Red End Links	-40	+180	+150	-40	+82	+66	Yes
BYSM	Black Cut Resistant with Yellow End Links		+180	+150	-40	+82	+66	Yes
SRMB	Blue Cut Resistant with Red End Links	-40	+180	+150	-40	+82	+66	Yes
SYMB	Blue Cut Resistant with Yellow End Links	-40	+180	+150	-40	+82	+66	Yes

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

Operating	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.30	0.25	0.25	0.20				
Water	0.23	0.21	0.21	0.18				
Soap and Water	0.15	0.15	0.15	0.15				
Oil	0.10	0.10	0.10	0.10				

1. Not available for $Rexnord^{\scriptsize @}$ TableTop $^{\tiny @}$ and Multiflex chains.

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord is a trademark of Rexnord Corporation.

All rights reserved.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



Formulated to be used in applications where chain is subjected to very abrasive product surfaces. Used to convey irregularly shaped products such as castings and machined steel parts. May extend chain wear life up to five times compared to acetal materials.

Primary Components

Wear resistant nylon (PA)

General Information

	Prefix	Material	Temperature						
			Fahrenheit			Celsius			FDA
	Prelix		min	max		min	max		Approval
				dry	wet	min	dry	wet	
	BWR	Black Wear Resistant	-40	+180	NR	-40	+82	NR	No

Friction Factors Between Material and Product

Operating	Product Material									
Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil				NR			0.10			


Friction Factors Between Material and Wearstrips

	i i i oti oli i a otoro Both	room matorial and	TTOGTOGTOP						
ĺ	Onevetina	Wearstrip Material							
	Operating Condition	Carbon and Stainless Steel	HIHMWPF		ULF™				
	Dry	0.28	0.22	0.22	0.20	_			
	Water	NR	NR	NR	NR				
	Soap and Water	NR	NR	NR	NR				
	Oil	0.10	0.10	0.10	0.10				

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation. All rights reserved.

- 1. Strength Considerations:
 - Pressure-Velocity (PV) Limits: PV Limit of Rexnord® TableTop® Chains molded from wear resistant material must be derated 20% from acetal materials. PV Limits relate to the speed and tension exerted as the chain travels around the corners.
- It is important to lubricate side-flexing chains in the corners to reduce noise levels at speeds in excess of 100FPM; water lubrication is unacceptable because it will cause melt resistant material to swell and lose strength.
- 3. Not intended for wet applications due to expansion

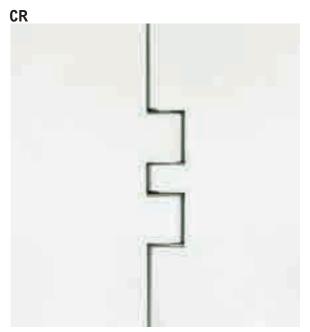

Able to withstand nearly any harsh chemical environment, including applications where strong oxidizing agents, acids and bases such as sodium hydroxide, sulfuric acid, hydrochloric acid, hydrofluoric acid and iodine are present. Please contact Rexnord at (262) 376-4800 for specific uses for this material.

Primary Components

Fluorinated polymer

General Information

	Metadal							
Duefin		Fahrenheit			Celsius			FDA
Prefix	Material	min	max		min	m	ах	Approval
		min	dry	wet	min	dry	wet	
CR	Extreme Chemical Resistant (White)	+40	+240	+212	+4	+116	+100	Yes

Friction Factors Between Material and Product

Onoroting	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	0.17	0.18	0.15	NR	0.20	0.20	0.22			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

I III CLIOII I GOLOIO BOLI	roon material and	TTOUTOUTED						
Onevetina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.30	0.25	0.25	0.22				
Water	0.23	0.21	0.21	0.20				
Soap and Water	0.15	0.15	0.15	0.15				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord and TableTop are trademarks of Rexnord Corporation.

All rights reserved.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


1. Strength Considerations:

- Rexnord® TableTop® Chains molded from extreme chemical resistant material (with stainless steel pins) must be derated 20% from their acetal counterparts (with stainless steel pins).
- Rexnord® TableTop® Chains molded from extreme chemical resistant material (with plastic pins) must be derated 40% from their acetal counterparts (with stainless steel pins).
- Rexnord® MatTop® Chains molded from extreme chemical resistant material must be derated 20% from their acetal counterparts.
- Pressure-Velocity (PV) Limits: PV Limit of Rexnord® TableTop® Chains
 molded from extreme chemical resistant material must be derated 20% from
 acetal materials. PV Limits relate to the speed and tension exerted as the
 chain travels around the corners.

NR denotes "not recommended", Dash denotes "combination not tested"



۵

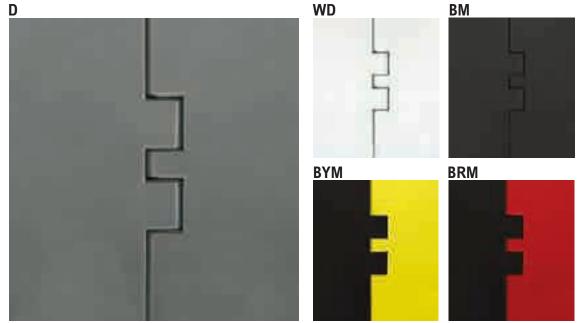

Brief Description

A general-purpose conveyor chain material which has low friction, high strength, excellent wear life, superior fatigue resistance and is chemical resistant in a wide range of environments.

Primary Components

Acetal (POM)

General Information

Prefix	Material -	F	ahrenhe	it		FDA		
		min	max		min	m	ах	Approval
		111111	dry	wet	1111111	dry	wet	
D	Plain Acetal (Gray)	-40	+180	+150	-40	+82	+66	No
WD	White Plain Acetal	-40	+180	+150	-40	+82	+66	No
BM	Black Material	-40	+180	+150	-40	+82	+66	No
BRM	Black Material with Red Ends	-40	+180	+150	-40	+82	+66	No
BYM	Black Material with Yellow Ends	-40	+180	+150	-40	+82	+66	No

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	0.17	0.20	0.15	NR	0.20	0.20	0.22			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

Onorotina	1	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™					
Dry	0.30	0.25	0.25	0.20					
Water	0.23	0.21	0.21	0.18					
Soap and Water	0.15	0.15	0.15	0.15					
Oil	0.10	0.10	0.10	0.10					

Regulatory Information


The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord is a trademark of Rexnord Corporation.

All rights reserved.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



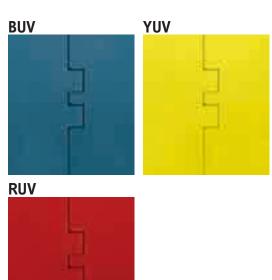

Formulated to reduce or eliminate material degradation in applications where ultraviolet radiation exposure is a concern. Retains its mechanical integrity when exposed to direct sunlight (outdoor applications) as well as in applications that use ultraviolet radiation to run a process. Has the same strength and wear properties as plain acetal material.

Primary Components

Ultraviolet resistant acetal (POM)

General Information

Prefix	Material	F	ahrenhe	it		FDA		
		min	max		min	max		Approval
			dry	wet		dry	wet	
DUV	Acetal Ultraviolet Resistant (Black)	0	+180	+150	-18	+82	+66	No
BUV	Blue Acetal Ultraviolet Resistant	0	+180	+150	-18	+82	+66	No
RUV	Red Acetal Ultraviolet Resistant	0	+180	+150	-18	+82	+66	No
YUV	Yellow Acetal Ultraviolet Resistant	0	+180	+150	-18	+82	+66	No

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	0.17	0.18	0.15	NR	0.20	0.20	0.22			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips


THOUGHT TUOLOTS	Thought addors between material and treatsurps									
Onevetina	Wearstrip Material									
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™						
Dry	0.30	0.25	0.25	0.20						
Water	0.23	0.21	0.21	0.18						
Soap and Water	0.15	0.15	0.15	0.15						
Oil	0.10	0.10	0.10	0.10						

Regulatory Information

Rexnord is a trademark of Rexnord Corporation.

All rights reserved.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

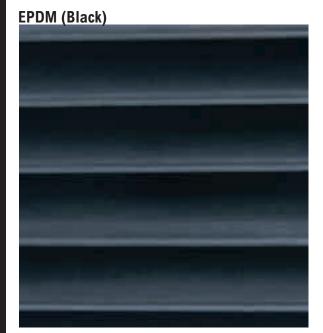

EPDM (White)



Brief Description

EPDM is used as a gripper material that has outstanding resistance to oxygen and ozone. It also has good resistance to the very hot water used in many SideGrip™ rinser applications. It is available in several different durometers (or hardness) for different applications.

Primary Components

Ethylene propylene rubber

General Information

	Temperature						
Motorial	Fahrenheit			Celsius			FDA
Material	min	m	ax min		max		Approval
		dry	wet	"""	dry	wet	
EPDM	-58	+302	+302	-50	+150	+150	No
		Material min_	Material min m	Material Fahrenheit min max dry wet	Material Fahrenheit min max min	Fahrenheit Celsius	Material Fahrenheit Celsius min max min max dry wet

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	NR	NR	NR	NR	NR	NR	NR			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil	NR	NR	NR	NR	NR	NR	NR			

Friction Factors Between Material and Wearstrips

Operating	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	NR	NR	NR	NR				
Water	NR	NR	NR	NR				
Soap and Water	NR	NR	NR	NR				
Oil	NR	NR	NR	NR				

Regulatory Information

Rexnord, TableTop and MatTop is a trademark of Rexnord Corporation.

All rights reserved.

- This material is not available in TableTop®, MatTop®, or Multiflex chains. It is only available as a gripper material for SideGrip™ chains.
- The temperature range for standard 50 shore EPDM grippers. Other hardnesses will affect the operating temperature.
- 3. Color may be black or white depending on chain series. See specific chain series in Product Catalog for color.



A proprietary compound formulated for conveying sensitive products, such as electronics and computer chips, where controlling static charge and static decay are of critical importance. Meets the ESD Association Draft Standard DS 4.1 - 1995. Used to dissipate static charges that may occur while conveying products or during product accumulation. Also used to dissipate nuisance sparks for Class II type static environments only. Please contact Application Engineering at 262.376.4800 for specific uses for this material.

Primary Components

Electrically conductive polypropylene (PP)

General Information

Prefix	Material							
		Fahrenheit			Celsius			FDA
Prelix		min	max		min	max		Approval
		min	dry	wet	min	dry	wet	
ESD	Electrostatic Dissipative (Black)	0 +180 +180		-18	+82	+82	No	

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Refurnance Glass Non-Refurnance		Plastic (crates, shrink wrap, etc)		Steel					
Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35			
Water	0.19	0.21	0.17	NR	0.25	0.25	0.25			
Soap and Water	0.16	0.12	0.10	NR	0.20	0.20	0.20			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

THOUGHT THOUGHT BOLL	Trouble rabiolo Botte Coll material and Trouble po									
Operating	Wearstrip Material									
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™						
Dry	0.35	0.30	0.30	0.26						
Water	0.25	0.25	0.25	0.22						
Soap and Water	0.20	0.20	0.20	0.19						
Oil	0.10	0.10	0.10	0.10						

Regulatory Information


Rexnord, TableTop and MatTop is a trademark of Rexnord Corporation.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

- 1. Types of Static Environments:
 - Class I: Static spark causes explosion. Use stainless steel chain materials. Class II: Static spark is a nuisance charge causing slight shock, possible circuit damage or electrical malfunction.
- 2. Electrical Properties: Surface resistivity = 105 to 109 Ω /sq.
- Wearstrip Recommendations: Wearstrips must be grounded to the conveyor frame and must be electrically conductive to be effective. The conveyor frame should also be externally grounded.
- 4. Strength Considerations:
 - Rexnord® TableTop® & MatTop® Chains molded from ESD material must be derated 40% from their acetal counterparts.
 - Pressure-Velocity (PV) Limits: PV Limit of Rexnord® TableTop® Chains
 molded from ESD material must be derated 40% from acetal materials. PV
 Limits relate to the speed and tension exerted as the chain travels around the
 corners.
- Depending on application requirements, the entire conveyor chain can be comprised of anti-static material or sections of antistatic material can be interspersed at various intervals.
- 6. Electrostatic dissipative material is only available in Rexnord® MatTop® and plastic

ESD

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

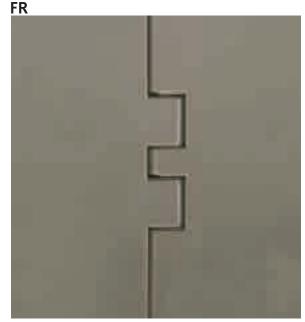

Formulated to eliminate the possibility of sustained combustion should the chain be accidentally ignited. Will self extinguish per the UL Standard 94 V-O standard when the source of ignition or flame is removed.

Primary Components

Flame retardant polyester (PBT)

General Information

	Material	Temperature						
Prefix		Fahrenheit			Celsius			FDA
		min	max		min	max		Approval
		min	dry	wet	min	dry	wet	
FR	Flame Retardant (Gray)	0	+180	+140	-18	+82	+60	No

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	0.17	0.18	0.15	NR	0.20	0.20	0.22			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15			
Oil				NR			0.10			


Friction Factors Between Material and Wearstrips

THOUGHT LUCTORS DCT	Tiotion ractors between material and vicustrips								
Onevetina		Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™					
Dry	0.30	0.25	0.25	0.22					
Water	0.23	0.21	0.21	0.20					
Soap and Water	0.15	0.15	0.15	0.15					
Oil	0.10	0.10	0.10	0.10					

Regulatory Information

Rexnord, TableTop and MatTop is a trademark of Rexnord Corporation.

- 1. Strength Considerations:
 - Rexnord® TableTop® Chains molded from flame retardant material must be derated 40% from their acetal counterparts.
 - Rexnord® MatTop® Chains molded from flame retardant material must be derated 15% from their acetal counterparts.
 - Pressure-Velocity (PV) Limits: PV Limit of Rexnord® TableTop® Chains
 molded from flame retardant material must be derated 20% from acetal
 materials. PV Limits relate to the speed and tension exerted as the chain
 travels around the corners.
- 2. Flame retardant material is not recommended for high temperature applications.

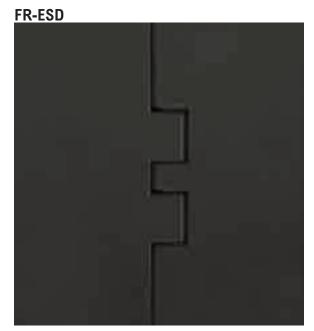

Proprietary material that combines good wear resistance and strength with electrostatic dissipative and flame retardant properties. It is formulated for conveying heavy, sensitive products that contain electronics or computer chips, where controlling static charge and static decay are of critical importance. Meets the ESD Association Draft Standard SD 4.1 - 1995. Used to dissipate static charges that can occur while conveying products or during product accumulation. Also used to dissipate nuisance sparks for class II type static environments only. Meets the DIN4102-1 B1 flame retardant criteria for construction materials. Please contact Application Engineering at 262.376.4800 for specific uses for this material.

Primary Components

Flame Retardant electrostatic dissipative nylon (PA)

General Information

Prefix	Material -							
		Fahrenheit			Celsius			FDA
FIEIIX		!	max		min	max		Approval
		min	dry wet	wet	min	dry	wet	
FR-ESD	Flame Retardant Electrostatic Dissipative (Black)	0	+180	NR	-18	+82	NR	No

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil	NR	NR	NR	NR	NR	NR	NR			

Friction Factors Between Material and Wearstrips

			upu						
ĺ	Operating	Wearstrip Material							
	Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
	Dry	0.30	0.25	0.25	0.22				
	Water	NR	NR	NR	NR				
	Soap and Water	NR	NR	NR	NR				
	Oil	NR	0.10	0.10	0.10				

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation.

All rights reserved.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

Teflon® is a registered trademark of E.I. DuPont Demours and Co.

- 1. Types of Static Environments:
 - Class I: Static spark causes explosion. Use stainless steel materials. Class II: Static spark is a nuisance charge causing slight shock, possible circuit damage or electrical malfunction
- 2. Electrical properties: surface resistivity =10 $^{\circ}$ 10 $^{\circ}$ Ω/sq .
- 3. FR-ESD is Teflon® and is silicone free.
- 4. Wearstrip Recommendations:

Wearstrips must be grounded to the conveyor frame and must be electrical conductive to be effective. The conveyor frame should also be externally grounded.

- 5. Strength considerations:
- Rexnord MatTop® molded from FR-ESD material must be derated 40% from their acetal (BSM) counterparts.
- Actual dimensions of FR-ESD MatTop® chains will differ +1.5% to +1.8% from nominal dimensions.

FR-ESD

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



Toughened proprietary polymer alloy formulated high load applications where flame retardant properties are required. The material has excellent wear and abrasive properties when exposed to glass, sand, and metallic powder. Meets the UL Standard 94 V-O and DIN4102-1 B1 flame retardant standards.

Primary Components

Flame retardant nylon (PA)

General Information

			Temperature						
Prefix	Material	Fahrenheit			Celsius			FDA	
	Prelix	iviateriai	min	max		min	max		Approval
				dry	wet	min	dry	wet	
	FR-PA	Flame Retardant Nylon (Black)	-40 +180 NR		-40	+82	NR	No	

Friction Factors Between Material and Product

Onorotina	Product Material								
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel		
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
Water	NR	NR	NR	NR	NR	NR	NR		
Soap and Water	NR	NR	NR	NR	NR	NR	NR		
Oil				NR			0.10		

Friction Factors Between Material and Wearstrips

Operating		Wearstrip M	laterial	
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™
Dry	0.60	0.25	0.25	0.22
Water	NR	NR	NR	NR
Soap and Water	NR	NR	NR	NR
Oil	NR	NR	NR	NR

1. Only available in selected Rexnord® MatTop® chains.

Regulatory Information

Rexnord, TableTop and MatTop is a trademark of Rexnord Corporation.



Formulated to be used in oven / fryer discharge conveyor applications where the chain is exposed to high temperatures. Used to convey high temperature products such as chips.

Primary Components

Fryer temperature resistant nylon (PA)

General Information

	Material -							
Prefix		Fahrenheit			Celsius			FDA
rielix		min	max		min	max		Approval
			dry	wet	min	dry	wet	
FTR	Fryer Temperature Resistant (Black)	-80	-80 +220 NR		-62	+104	NR	Yes

Friction Factors Between Material and Product

Operating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil	NR	NR	NR	NR	NR	NR	NR			

Friction Factors Between Material and Wearstrips

THOUGHT THOUGHT BOLL	roon material and	TTOGTOGTE							
Onevetina		Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™					
Dry	0.30	0.28	0.28	0.25					
Water	NR	NR	NR	NR					
Soap and Water	NR	NR	NR	NR					
Oil	0.10	0.10	0.10	0.10					

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord, TableTop and MatTop is a trademark of Rexnord Corporation.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

- 1. Strength Considerations:
 - Pressure-Velocity (PV) Limits: PV Limit of Rexnord® TableTop® Chains
 molded from melt resistant material must be derated 20% from acetal
 materials. PV Limits relate to the speed and tension exerted as the chain
 travels around the corners.
- It is important to lubricate side-flexing chains in the corners to reduce noise levels at speeds in excess of 100FPM; water lubrication is unacceptable because it will cause melt resistant material to swell and lose strength.
- 3. Only available in 8505/8506 MatTop® chain series.
- 4. All applications must come through Application Engineering.

FTR

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



RLD

Brief Description

A patented blend of the Rexnord® Low Temperature Antimicrobial material. Formulated to inhibit the growth of bacteria, mold and mildew that may cause discoloration, odor or degradation of the Rexnord® MatTop® chain. Allows detection as it passes through a metal detector. Formulated for detection in dry food and frozen food. Retains toughness, impact strength and ductility in both dry and wet conditions to temperatures as low as -100°F (-73°C). While not as impact resistant as the WLT material, it still has excellent impact resistance. Chemical resistant to most bleaches, bases, acids and hydrocarbons. Developed specifically for chains used in dry snack food and frozen food processing.

Primary Components

Polyethylene (HDPE) and non ferrous metal particulate Microban® Antimicrobial Product Protection

General Information

Prefix	Material	F	ahrenhe	it	Celsius			FDA
Pielix		min	max		min	max		Approval
		111111	dry	wet	min	dry	wet	
GLD	Grey Low Temperature Detectable Antimicrobial	-100	+80	+80	-73	+27	+27	***
RLD	Red Low Temperature Detectable Antimicrobial	-100	+80	+80	-73	+27	+27	***

Friction Factors Between Material and Product

Onerating		Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel				
Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.28				
Water	0.17	0.17	0.14	NR	0.18	0.18	0.22				
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15				
Oil				NR			0.10				

Friction Factors Between Material and Wearstrips

Operating		Wearstrip N	laterial		
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™	
Dry	0.28	0.23	0.23	0.21	
Water	0.22	0.20	0.20	0.19	
Soap and Water	0.15	0.15	0.15	0.14	
Oil	0.10	0.10	0.10	0.10	

Regulatory Information

***These materials meet the end-test requirements as specified by FDA 21 CFR 177.1520 (c), the FDA requirement for polyolefin materials intended for direct food contact. All components of these materials are either compliant for food contact as listed by the FDA or regulated by the EPA.

Rexnord and TableTop are trademarks of Rexnord Corporation.

All rights reserved.


This material will not protect the user against food-borne illness. Always maintain good hygiene, proper cleaning procedures are still required. Microban is a registered trademark of Microban Products Company.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

U.S. Patent 6177113

- 1. Buoyant in water.
- 2. Not available for Rexnord® TableTop® and Multiflex chains.
- The ability to detect plastic particles will vary due to sensitivity of individual metal detectors.

 $^{{}^{\}star\star}\text{Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.}$

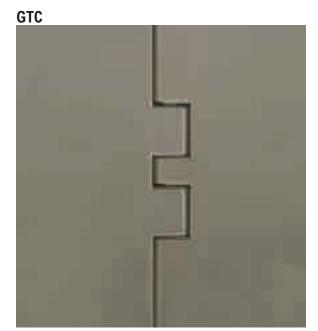

GTC is a high strength, toughened composite material specifically formulated to take constant impact. It's combination of high strength and low stretch make it an excellent material for high speed case incline (or decline) conveyors. Has excellent impact resistance as well as good chemical resistance.

Primary Components

High strength, impact modified composite

General Information

	Material							
Prefix		Fahrenheit			Celsius			FDA
		min	max		min	max		Approval
			dry	wet		dry	wet	
GTC	Grey Tough Composite	0	+180	+140	-18	+82	+60	No

Friction Factors Between Material and Product

Operating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	0.17	0.18	0.15	NR	0.21	0.21	0.23			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15			
Oil				NR	0.10	0.10	0.10			

Friction Factors Between Material and Wearstrips

THOUGHT TACKETO BOLL	roon material and	***Ourourpo		
Onevetina	1	Nearstrip M	aterial	
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™
Dry	0.30	0.25	0.25	0.22
Water	0.23	0.21	0.21	0.20
Soap and Water	0.15	0.15	0.15	0.15
Oil	0.10	0.10	0.10	0.10

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR \S 177.

Rexnord and TableTop are trademarks of Rexnord Corporation.

All rights reserved.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

Patent Pending.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



Proprietary acetal material that combines good wear resistance, strength, and low friction characteristics with anti-static properties. It is formulated to reduce or eliminate nuisance static buildup that can occur while conveying heavy products or during product accumulation. Also used to dissipate nuisance sparks for class II type static environments only. Please contact Application Engineering at 262.376.4800 for specific uses for this material.

Primary Components

High capacity anti-static acetal (POM)

General Information

Prefix	Material							
		Fahrenheit			Celsius			FDA
rielix		min	max		min	max		Approval
			dry	wet	min	dry	wet	
HCAS	High Capacity Anti-static (Black)	0	+180	+150	-18	+82	+66	No

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil	NR	NR	NR	NR	NR	NR	NR			

Friction Factors Between Material and Wearstrips

Onevetina	1	Nearstrip M	aterial	
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™
Dry	0.30	0.25	0.25	0.20
Water	NR	NR	NR	NR
Soap and Water	NR	NR	NR	NR
Oil	NR	0.10	0.10	0.10

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation. All rights reserved.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

Teflon® is a registered trademark of E.I. DuPont Demours and Co.

- 1. Types of Static Environments:
 - Class I: Static spark causes explosion. Use stainless steel materials.
 Class II: Static spark is a nuisance charge causing slight shock, possible circuit damage or electrical malfunction
- 2. Electrical properties: surface resistivity =10 11 10 13 Ω /sq.
- 3. HCAS is Teflon® and is silicone free.
- 4. Wearstrip Recommendations:

Wearstrips must be grounded to the conveyor frame and must be electrical conductive to be effective. The conveyor frame should also be externally grounded.

- 5. Strength considerations:
 - Rexnord MatTop® chains molded from HCAS material must be derated 15% from their acetal (BSM) counterparts.
- Depending on application requirements, the entire conveyer chain can be compromised of anti-static material or sections of anti-static material can be interspersed at various intervals.
- HCAS friction factor should be used when interspersing HCAS links into any other MatTop® material.

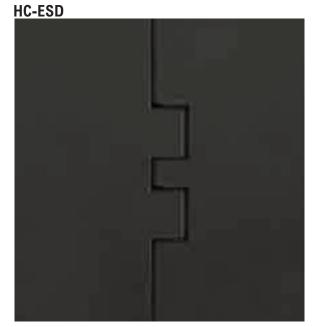

Proprietary acetal material that combines good wear resistance, strength, and low friction characteristics with electrostatic dissipative properties. It is formulated for conveying heavy, sensitive products that contain electronics or computer chips, where controlling static charge and static decay are of critical importance. Meets the ESD Association Draft Standard SD 4.1 - 1995. Used to dissipate static charges that can occur while conveying products or during product accumulation. Also used to dissipate nuisance sparks for class II type static environments only. Please contact Application Engineering at 262.376.4800 for specific uses for this material.

Primary Components

High capacity electrostatic dissipative acetal (POM)

General Information

Prefix	Material							
		Fahrenheit			Celsius			FDA
		!	max		min	max		Approval
		min	dry	wet	min	dry	wet	
HC-ESD	High Capacity Electrostatic Dissipative (Black)	0	+180	+150	-18	+82	+66	No

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil	NR	NR	NR	NR	NR	NR	NR			

Friction Factors Between Material and Wearstrips

THOUGHT THOUGHT BOTT	notion radioto bottoon material and reductipe									
Operating	Wearstrip Material									
Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™						
Dry	0.30	0.25	0.25	0.20						
Water	NR	NR	NR	NR						
Soap and Water	nd Water NR		NR	NR						
Oil	NR	0.10	0.10	0.10						

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation. All rights reserved.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.


- 1. Types of Static Environments:
 - Class I: Static spark causes explosion. Use stainless steel materials. Class II: Static spark is a nuisance charge causing slight shock, possible circuit damage or electrical malfunction
- 2. Electrical properties: surface resistivity =10 $^{\circ}$ 10 $^{\circ}$ Ω/sq .
- 3. HC-ESD is Teflon® and is silicone free.
- 4. Wearstrip Recommendations:


Wearstrips must be grounded to the conveyor frame and must be electrical conductive to be effective. The conveyor frame should be also externally grounded.

- 5. Strength considerations:
 - Rexnord MatTop® molded from HC-ESD material must be derated 10% from their acetal (BSM) counterparts.
- Depending on application requirements, the entire conveyor chain can be compromised of HC-ESD material or sections HC-ESD material can be interspersed at various intervals.
- HC-ESD friction factor should be used when interspersing HC-ESD links into any other chain material.

HC-ESD

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

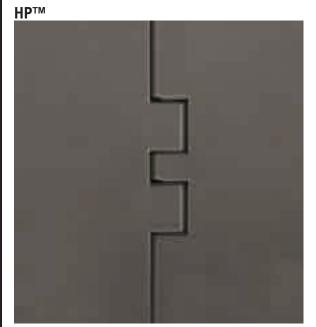

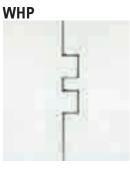

Patented Rexnord® High Performance Material has the lowest coefficient of friction of any chain or belt material. Extensive testing has proven that new high performance materials can reduce wear up to 40% over plain acetal and 25% over low friction acetal. Ideal for dry running applications and will permit greater operating speeds for aggressive applications in the beverage and container industry. Used to lower product backline pressure and to minimize conveyor pulsation resulting in reduced chain flight wear and reduced chain elongation.

Primary Components

High performance, internally lubricated acetal (POM)

General Information

					Tempe	rature			
	Prefix	Material	Fahrenheit			Celsius			FDA
	rielix		min dry	max		min	max		Approval
				wet	111111	dry	wet		
	HP™	High Performance (Brown)	-40	+180	+150	-40	+82	+66	Yes
	WHP White High Performance		-40	+180	+150	-40	+82	+66	Yes

Friction Factors Between Material and Product

Onorotina		Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel				
Dry	0.18	0.20	0.12	0.23	0.18	0.18	0.18				
Water	0.14	0.18	0.11	NR	0.16	0.16	0.16				
Soap and Water	0.12	0.14	0.10	NR	0.14	0.14	0.13				
Oil				NR			0.10				

Friction Factors Between Material and Wearstrips

THOUGHT TACKETO BOLL	roon material and	**************************************						
Operating	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.22	0.18	0.18	0.14				
Water	0.20	0.16	0.16	0.12				
Soap and Water	0.15	0.14	0.14	0.11				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord and HP are trademarks of Rexnord Corporation.

All rights reserved.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

U.S. Patent: 4436200

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



HP™ RubberTop® and SuperGrip™ are specifically formulated for general high friction applications. The high performance HP™ base links in conjunction with molded high friction pads make it ideal for high speed incline or decline conveyors.

Primary Components

High performance HP™ with molded high friction pads

General Information

Prefix	Material	Fahrenheit			Celsius			FDA
rielix			max		min	max		Approval
		min	dry	wet	111111	dry	wet	
HP	High Performance Friction Top		+180	+150	-40	+82	+66	No

Friction Factors Between Material and Product

Operating		Product Material										
Operating Condition	Aluminum	Returnable Glass Bottles	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel					
Dry	NR	NR	NR	NR	NR	NR	NR					
Water	NR	NR	NR	NR	NR	NR	NR					
Soap and Water	NR	NR	NR	NR	NR	NR	NR					
Oil	NR	NR	NR	0.87***	0.85***	NR	NR					

Friction Factors Between Material and Wearstrips

THOUGHT LUCTORS DCT	Tionon radiois between material and vicustrips									
Onevetina	Wearstrip Material									
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™						
Dry	0.22	0.18	0.18	0.14						
Water	0.20	0.16	0.16	0.12						
Soap and Water	0.15	0.14	0.14	0.11						
Oil	0.10	0.10	0.10	0.10						


Regulatory Information

***It is not recommended to accumulate on RubberTop® products; however, these values can be utilized when determining brake belt or "hold back" calculations.

Rexnord is a trademark of Rexnord Corporation.

All rights reserved.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

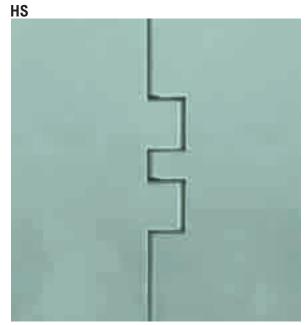

Formulated to retain strength and resist degradation and swelling in hot, wet environments. Can be used in demanding high temperature applications such as bottle rinsers, sterilizers, warmers and pasteurizers.

Primary Components

Heat stabilized nylon (PA)

General Information

		Temperature						
Prefix	Material	Fahrenheit			Celsius			FDA
Prelix			max		min	max		Approval
		min	dry	wet	min	dry	wet	
HS	Heat Stabilized (Green)	-40	+220	+212	-40	+104	+100	No

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	0.17	0.18	0.15	NR	0.20	0.20	0.22			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips


THOUGHT TUOLOTS DOLL	Tiotion radiois between material and rreastrips									
Onevetina	Wearstrip Material									
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™						
Dry	0.30	0.28	0.28	0.25						
Water	0.25	0.23	0.23	0.22						
Soap and Water	0.18	0.18	0.18	0.18						
Oil	0.10	0.10	0.10	0.10						

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation.

All rights reserved.

- 1. Strength Considerations:
 - Pressure-Velocity (PV) Limits: PV Limit of Rexnord® TableTop® Chains molded from heat stabilized material must be derated 20% from acetal materials. PV Limits relate to the speed and tension exerted as the chain travels around the corners.
- 2. Heat stabilized material, unlike other nylon materials, can be used in wet environments without the risk of swelling.

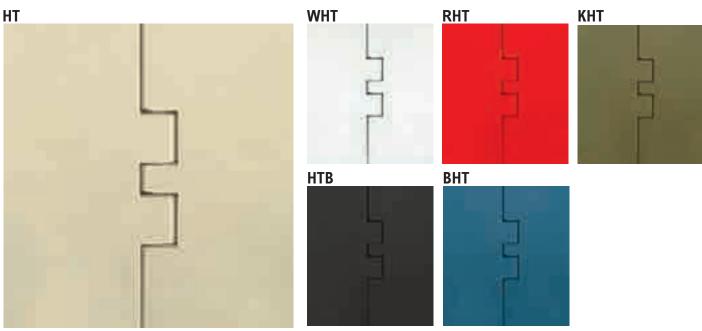

Formulated to be used in both high temperature and general applications in both dry and wet conditions. A good general purpose conveyor chain material and in addition has excellent resistance to chemicals including salts, alcohol, bases and many acids.

Primary Components

Polypropylene (PP)

General Information

Ceneral information										
Prefix	Material	Fahrenheit				FDA				
Prenx		min	max		min	max		Approval		
		111111	dry	wet	1111111	dry	wet			
HT	High Temperature (Beige)	+40	+220	+212	+4	+104	+100	Yes		
WHT	White High Temperature	+40	+220	+212	+4	+104	+100	Yes		
RHT	Red High Temperature	+40	+220	+212	+4	+104	+100	Yes		
KHT	Khaki High Temperature	+40	+220	+212	+4	+104	+100	Yes		
BHT	Blue High Temperature	+40	+220	+212	+4	+104	+100	Yes		
HTB	Black High Temperature	+40	+220	+212	+4	+104	+100	Yes		

Friction Factors Between Material and Product

Operating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.29	0.29	0.24	0.35	0.32	0.28	0.31			
Water	0.19	0.21	0.18	NR	0.24	0.20	0.25			
Soap and Water	0.15	0.14	0.10	NR	0.19	0.15	0.17			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

Onevetina	Wearstrip Material								
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™					
Dry	0.35	0.30	0.30	0.26					
Water	0.30	0.25	0.25	0.22					
Soap and Water	0.25	0.20	0.20	0.19					
Oil	0.10	0.10	0.10	0.10					

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord and TableTop are trademarks of Rexnord Corporation.

All rights reserved.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

- 1. Buoyant in water.
- 2. Not available for $Rexnord^{\scriptsize @}$ TableTop $^{\tiny @}$ and Multiflex chains.

NR denotes "not recommended", Dash denotes "combination not tested"

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

HT RubberTop® / SuperGrip™

KHT





Brief Description

HT is specifically formulated for general high friction applications. The polypropylene base links in conjunction with high friction surface make it ideal for incline or decline conveyors

Primary Components

High temperature polypropylene with high friction pads

General Information

Prefix	Material	F	ahrenhe	it		FDA		
FIEIIX		min	max		min	max		Approval
		1111111	dry	wet	1111111	dry	wet	
HT	High Temperature	+40	+180	+140	+4	+82	+60	Yes
KHT	Khaki High Temperature	+40	+180	+140	+4	+82	+60	Yes
WHT	White High Temperature	+40	+180	+140	+4	+82	+60	Yes

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	NR	NR	NR	NR	NR	NR	NR			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil	NR	NR	NR	0.87***	0.85***	NR	NR			

Friction Factors Between Material and Wearstrips

Thousan radioro Bothoon material and vioustripo								
Onevetina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.35	0.30	0.30	0.26				
Water	0.30	0.25	0.25	0.22				
Soap and Water	0.25	0.20	0.20	0.19				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

***It is not recommended to accumulate on RubberTop® products; however, these values can be utilized when determining brake belt or "hold back" calculations.

Rexnord is a trademark of Rexnord Corporation.

All rights reserved.

- 1. Buoyant in water.
- 2. Not available for Rexnord ${\rm ^{8}}$ Table Top ${\rm ^{8}}$ and Multiflex chains.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



Formulated to reduce or eliminate material degradation in applications where ultraviolet radiation exposure is a concern. Retains its mechanical integrity when exposed to direct sunlight (outdoor applications) as well as in applications that use ultraviolet radiation to run a process. Has excellent resistance to chemicals including salts, alcohol, bases and many acids.

Primary Components

Polypropylene (PP)

General Information

Prefix								
	Material	Fahrenheit			Celsius			FDA
rielix		min	max		min	max		Approval
			dry	wet	min	dry	wet	
HUV	High Temperature Ultraviolet Resistant (Black)	+40	+220	+180	+4	+104	+82	No

Friction Factors Between Material and Product

Operating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35			
Water	0.19	0.21	0.17	NR	0.25	0.25	0.25			
Soap and Water	0.16	0.14	0.10	NR	0.20	0.20	0.20			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

Thought addors between material and vicustrips								
Onorotina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.35	0.30	0.30	0.26				
Water	0.24	0.16	0.16	0.22				
Soap and Water	0.20	0.20	0.20	0.19				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation.


All rights reserved.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

- 1. Buoyant in water.
- 2. Not available for Rexnord® TableTop® and Multiflex chains.

VUH



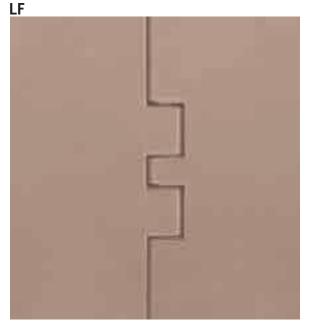

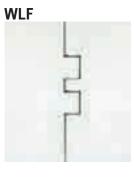

An excellent conveyor chain material with a low coefficient of friction between a variety of materials. Extensive testing has proven that low friction materials can reduce wear up to 15% over plain acetal. Ideal for dry running applications and will permit greater operating speeds. Used to lower product backline pressure and minimize conveyor pulsation resulting in reduced chain flight wear and reduced chain elongation.

Primary Components

Patented blend of low friction acetal (POM) and lubricants

General Information

			Temperature						
Duefin	Prefix	Material	Fahrenheit			Celsius			FDA
	rielix		min	max		min	max		Approval
			min	dry	wet] """	dry	wet	
Ī	LF	Low Friction (Tan)	-40	+180	+150	-40	+82	+66	Yes
	WLF	White Low Friction	-40	+180	+150	-40	+82	+66	Yes

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.20	0.20	0.15	0.30	0.20	0.20	0.25			
Water	0.15	0.18	0.13	NR	0.18	0.18	0.20			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

Operating	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.25	0.20	0.20	0.16				
Water	0.20	0.18	0.18	0.14				
Soap and Water	0.15	0.15	0.15	0.13				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.


Rexnord is a trademark of Rexnord Corporation.

All rights reserved.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

U.S. Patent: 4436200

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

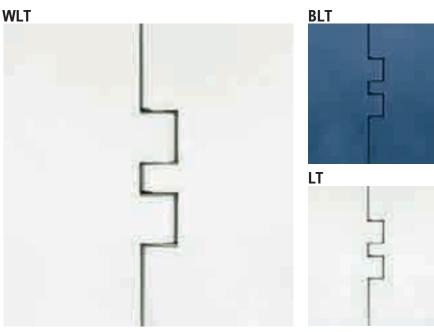

Formulated to retain toughness, impact strength and ductility in both dry and wet conditions. Retains its properties in temperatures as low as -100 °F (-73 °C). Has excellent impact resistance, and because of its inherent ductility, is excellent in applications where other materials may chip or fracture. Is also chemical resistant to most bleaches, bases, acids and hydrocarbons.

Primary Components

Polyethylene (HDPE)

General Information

Prefix	Material	Fahrenheit			Celsius			FDA
		min	max		min	max		Approval
		111111	dry	wet	111111	dry	wet	
WLT	White Low Temperature	-100	+80	+80	-73	+27	+27	Yes
BLT	Blue Low Temperature		+80	+80	-73	+27	+27	Yes
LT	Low Temperature (natural)	-100	+80	+80	-73	+27	+27	Yes

Friction Factors Between Material and Product

Operating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.28			
Water	0.17	0.17	0.14	NR	0.18	0.18	0.22			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

THOUGHT TUOLOTO BOLL	Trouble Factore Both Con Material and Troubling								
Onevetina	Wearstrip Material								
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™					
Dry	0.28	0.23	0.23	0.21					
Water	0.22	0.20	0.20	0.19					
Soap and Water	0.15	0.15	0.15	0.14					
Oil	0.10	0.10	0.10	0.10					

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR \S 177.

Rexnord and TableTop are trademarks of Rexnord Corporation.

All rights reserved.

- 1. Buoyant in water.
- 2. Not available for Rexnord® TableTop® and Multiflex chains.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



Formulated to reduce or eliminate material degradation in applications where ultraviolet radiation exposure is a concern. Retains its mechanical integrity when exposed to direct sunlight (outdoor applications) as well as in applications that use ultraviolet radiation to run a process. Also retains toughness, impact strength and ductility in both dry and wet conditions and in temperatures as low as ~40 °F (~40 °C). Has excellent impact resistance and because of its inherent ductility, is excellent in applications where other materials may chip or fracture. Chemical resistant to most bleaches, bases, acids and hydrocarbons.

Primary Components

Ultraviolet resistant polyethylene (HDPE)

General Information

			Temperature						
Prefix	Material	F	ahrenhe	it	Celsius			FDA	
		min	max			max		Approval	
				dry	wet	min	dry	wet	
	LUV	Low Temperature Ultraviolet Resistant (Black)	-100	+80	+80	-73	+27	+27	No

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.22	0.24	0.28	0.30	0.22	0.22	0.28			
Water	0.17	0.17	0.14	NR	0.18	0.18	0.22			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.10			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips


Thetion ractors between material and wearstrips								
Operating	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.28	0.23	0.23	0.21				
Water	0.22	0.20	0.20	0.19				
Soap and Water	0.15	0.15	0.15	0.14				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation.

All rights reserved.

- 1. Buoyant in water.
- 2. Not available for Rexnord® TableTop® and Multiflex chains.

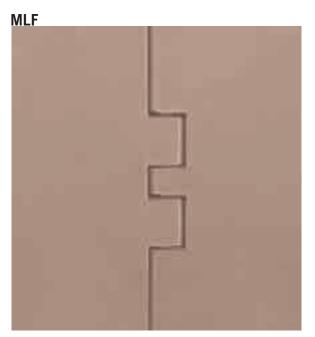

A cost-effective general purpose conveyor chain material which has low friction, high strength, excellent wear life, superior fatigue resistance and is chemical resistant in a wide range of environments

Primary Components

Low friction acetal (POM)

General Information

Prefix	Material							
		Fahrenheit			Celsius			FDA
		min	max		min	max		Approval
		111111	dry	wet	min	dry	wet	
MLF	Medium Duty Low Friction (Tan)	-40	+180	+150	-40	+82	+66	No

1. Only available in selected Rexnord® TableTop® and Multiflex chains.

Friction Factors Between Material and Product

Operating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	0.17	0.20	0.15	NR	0.20	0.20	0.22			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

Thought actors between material and trodistrips								
Onevetina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.30	0.25	0.25	0.20				
Water	0.23	0.21	0.21	0.18				
Soap and Water	0.15	0.15	0.15	0.15				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation.

All rights reserved.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



Formulated to be used in applications where conveying hot products may cause chain top surface to melt. Can resist contact temperatures up to 375 °F (190 °C). Used to convey high temperature products such as hot cans and hot pans in container manufacturing and industrial part processing applications

Primary Components

Melt resistant nylon (PA)

General Information

		Material	Temperature						
Prefix	Dueffy		Fahrenheit			Celsius			FDA
	Prenx		min	max		min	max		Approval
			min	dry	wet		dry	wet	
	MR	Melt Resistant (Black)	-80	+220	NR	-62	+104	NR	No

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

THOUGHT TUOLOTS DOLL	Though radiois between material and wearstrips								
Onevetina	Wearstrip Material								
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™					
Dry	0.30	0.28	0.28	0.25					
Water	NR	NR	NR	NR					
Soap and Water	NR	NR	NR	NR					
Oil	0.10	0.10	0.10	0.10					

Regulatory Information

Rexnord and TableTop are trademarks of Rexnord Corporation.


All rights reserved.

Nylatron is a registered trademark of

Quadrant Engineering Plastics Products.

- 1. Strength Considerations:
 - Pressure-Velocity (PV) Limits: PV Limit of Rexnord® TableTop® Chains molded from melt resistant material must be derated 20% from acetal materials. PV Limits relate to the speed and tension exerted as the chain travels around the corners
- It is important to lubricate side-flexing chains in the corners to reduce noise levels at speeds in excess of 100 FPM; water lubrication is unacceptable because it will cause melt resistant material to swell and lose strength.



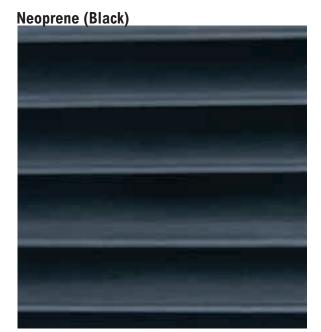

Neoprene (White)



Brief Description

Neoprene is used as a gripper material that has good resistance to gasoline, sunlight, ozone & oxidation. It is available in several different durometers (or hardness) for different applications.

Primary Components

Neoprene

General Information

	Material	Temperature						
Prefix		Fahrenheit			Celsius			FDA
			max		min	max		Approval
		min	dry	wet	111111	dry	wet	
-	Neoprene	-40	+212	+200	-40	+100	+93	No

Friction Factors Between Material and Product

Operating	Product Material								
Operating Condition	Aluminum	Returnable Glass Bottles	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel		
Dry	NR	NR	NR	NR	NR	NR	NR		
Water	NR	NR	NR	NR	NR	NR	NR		
Soap and Water	NR	NR	NR	NR	NR	NR	NR		
Oil	NR	NR	NR	NR	NR	NR	NR		

Friction Factors Between Material and Wearstrips

THOUGHT CAUCOTO BOLL	roon material and	TTOUTOUTE						
Onevetina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	NR	NR	NR	NR				
Water	NR	NR	NR	NR				
Soap and Water	NR	NR	NR	NR				
Oil	NR	NR	NR	NR				


Regulatory Information

Rexnord, TableTop and MatTop are trademarks of Rexnord Corporation.

All rights reserved.

- 1. This material is not available in TableTop®, MatTop®, or Multiflex chains. It is only available as a gripper material for SideGrip™ chains.
- 2. The temperature range for standard 40 shore Neoprene grippers. Other hardnesses will affect the operating temperature.
- 3. Color may be black or white depending on chain series. See specific chain series in Product Catalog for color.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

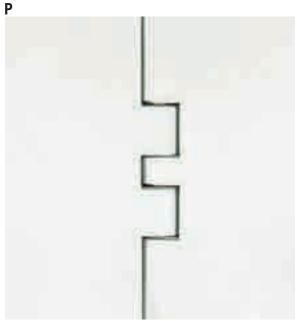

Formulated to reduce or eliminate material degradation in applications where chemicals such as chlorine and phosphorous are present at moderate concentrations

Primary Components

Polyester (PBT)

General Information

	Material							
Prefix		Fahrenheit			Celsius			FDA
		min	max		min	max		Approval
		min	dry	wet	min	dry	wet	
Р	Chemical Resistant (White)	0	+180	+140	-18	+82	+60	Yes

Friction Factors Between Material and Product

Onorotina	Product Material								
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel		
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
Water	0.17	0.18	0.15	NR	0.21	0.21	0.22		
Soap and Water	0.12	0.14	0.10	NR	0.15	0.10	0.15		
Oil				NR			0.10		

Friction Factors Between Material and Wearstrips

THOUSANT ACCORD BOLL	roon material and	rroundinpo						
Onevetina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.30	0.25	0.25	0.22				
Water	0.23	0.21	0.21	0.20				
Soap and Water	0.15	0.15	0.15	0.15				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord, TableTop and MatTop are trademarks of Rexnord Corporation.

All rights reserved.


EM - MA - 30

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

1. Strength Considerations:

- Rexnord® TableTop® Chains molded from chemical resistant material (with stainless steel pins) must be derated 20% from their acetal counterparts (with stainless steel pins).
- Rexnord® TableTop® Chains molded from chemical resistant material (with plastic pins) must be derated 40% from their acetal counterparts (with stainless steel pins).
- Rexnord® MatTop® Chains molded from chemical resistant material must be derated 20% from their acetal counterparts.
- Pressure-Velocity (PV) Limits: PV Limit of Rexnord® TableTop® Chains molded from chemical resistant material must be derated 20% from acetal materials.
 PV Limits relate to the speed and tension exerted as the chain travels around the corners.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

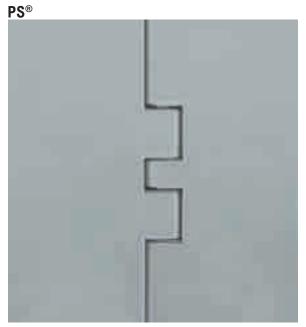

Platinum Series® PS® material is a specially formulated material especially suited for high speed conveying. PS® material can decrease high speed wear by as much as 5 times. Side-flexing PV limits are also increased which means that a side-flexing chain molded in PS® can be run 200% faster than the same chain in acetal, or 150% faster than the same chain in HP™! "Optimized for PET" means that PET bottles running on PS® chains exhibit the lowest friction available. Low coefficients of friction reduce product backline pressures and minimize pulsations.

Primary Components

High speed Platinum Series® internally lubricated acetal (POM)

General Information

	Material							
Prefix		Fahrenheit			Celsius			FDA
		min	max		min	max		Approval
			dry	wet	min	dry	wet	
PS®	Platinum Series® (Silver)	-40	+180	+150	-40	+82	+66	Yes

Friction Factors Between Material and Product

Operating	Product Material								
Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel		
Dry	0.18	0.20	0.12	0.23	0.18	0.16	0.18		
Water	0.14	0.18	0.11	NR	0.16	0.15	0.16		
Soap and Water	0.12	0.14	0.10	NR	0.14	0.14	0.13		
Oil				NR			0.10		

Friction Factors Between Material and Wearstrips

Operating	1	Nearstrip M	aterial	
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™
Dry	0.22	0.18	0.18	0.12
Water	0.20	0.16	0.16	0.11
Soap and Water	0.15	0.14	0.14	0.11
Oil	0.10	0.10	0.10	0.10

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.


Rexnord, Platinum Series, PS and HP are trademarks of Rexnord Corporation.

All rights reserved.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

PS®

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

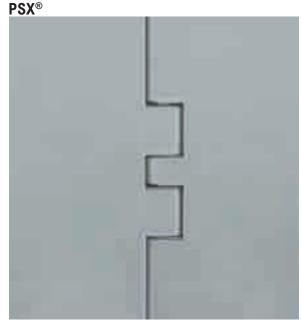

conditions.

Platinum Series X® PSX® material is an advanced performance polymer alloy engineered specifically for run dry applications. PSX® material minimizes the amount of conveyor lubrication needed, and in many cases offers a completely run dry solution. PSX® material also minimizes the dusting phenomena in dry running conditions

Primary Components

Advanced performance polymer alloy designed specifically for run dry applications

General Information

Prefix	Material							
		Fahrenheit			Celsius			FDA
		min	max		min	max		Approval
			dry	wet	min	dry	wet	
PSX®	Platinum Series X [®] (Gray)	-40	+180	+150	-40	+82	+66	Yes

Friction Factors Between Material and Product

Operating	Product Material								
Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel		
Dry	0.16	0.20	0.12	0.23	0.18	0.16	0.16		
Water	0.13	0.18	0.11	NR	0.16	0.15	0.14		
Soap and Water	0.12	0.14	0.10	NR	0.14	0.14	0.12		
Oil				NR			0.10		

Friction Factors Between Material and Wearstrips


Onorotina	W	earstrip M	aterial	
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™
Dry	0.22	0.18	0.16	0.12
Water	0.20	0.16	0.14	0.11
Soap and Water	0.15	0.14	0.12	0.11
Oil	0.10	0.10	0.10	0.10

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord, Platinum Series, Platinum Series X, PS, PSX and HP are trademarks of Rexnord Corporation.

All rights reserved.

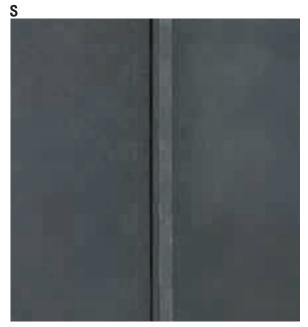

A strong, abrasion resistant, fine grained, hardened carbon steel with a smooth surface finish. Used in applications requiring high strength, impact resistance and hardened chain surface such as parts handling.

Primary Components

Carbon steel

General Information

	Material							
Prefix		Fahrenheit			Celsius			FDA
			max		min	max		Approval
		min	dry	wet	min	dry	wet	
S	Carbon Steel	-40	+350	NR	-40	+177	NR	No

Friction Factors Between Material and Product

Operating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.34	0.35	0.33	0.43	0.31	0.30	0.38			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil	0.10	0.10	NR	NR	NR	NR	0.10			

Friction Factors Between Material and Wearstrips

Onorotina	\	Nearstrip M	aterial	
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™
Dry	0.40	0.30	0.30	0.30
Water	NR	NR	NR	NR
Soap and Water	NR	NR	NR	NR
Oil	0.10	0.10	0.10	0.10


Regulatory Information

Rexnord and MatTop are trademarks of Rexnord Corporation.

All rights reserved.

- It is important to lubricate side-flexing chains in the corners to reduce noise levels; water lubrication is unacceptable due to the potential for corrosion and rusting. Melt resistant material to swell and lose strength.
- 2. Not available for Rexnord® MatTop® and Multiflex chains.

NR denotes "not recommended", Dash denotes "combination not tested" **Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

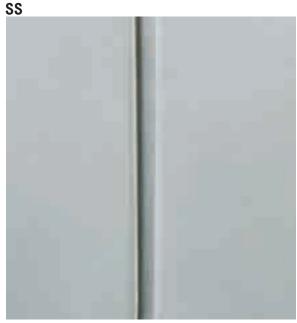

Has excellent corrosion and abrasion resistance. Possess resistance to acids, have non-magnetic qualities, good impact resistance, good surface hardness and smooth surface finish. Used in applications requiring corrosion and abrasion resistance, including glass containers and parts handling where water or lubricants are used. The chain life of Rexnord® TableTop® Chains made with austenitic stainless steel material have been demonstrated to have more than 2x the wear life than competitive chains made with ferritic stainless steel.

Primary Components

Austenitic stainless steel

General Information

			Temperature						
Prefix	Material	Fahrenheit			Celsius			FDA	
	Pretix	Material	min	max		min	max		Approval
			min	dry	wet	min	dry	wet	
	SS	Stainless Steel	-100	+800	+212	-73	+427	+100	Yes

Friction Factors Between Material and Product

Onerating		Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel				
Dry	0.34	0.35	0.33	0.43	0.31	0.30	0.38				
Water	0.27	0.30	0.29	NR	0.22	0.21	0.30				
Soap and Water	0.14	0.15	0.15	NR	0.15	0.14	0.15				
Oil				NR							

Friction Factors Between Material and Wearstrips

THOUGHT TUOLOTS DOLL	veen material and	**Cuistiips						
Onevetina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.40	0.30	0.30	0.30				
Water	0.35	0.22	0.22	0.22				
Soap and Water	0.15	0.15	0.15	0.15				
Oil	0.15	0.10	0.10	0.10				

Regulatory Information

Based on the material chemistries, industry standards, and the documentation in the Federal Registry, it is the opinion of Rexnord that the Rexnord® TableTop® stainless steel chains can be considered GRAS for direct food contact.

Rexnord, TableTop and MatTop are trademarks of Rexnord Corporation.

All rights reserved.

- 1. It is important to lubricate side-flexing chains in the corners to reduce noise levels.
- 2. Not available for Rexnord® MatTop® and Multiflex chains.



A special austenitic stainless steel used in applications that require the chain to allow magnetic fields to pass through. In some applications, magnets are used to stabilize or hold products that are conveyed on the top of the chain. Allows magnets to interact with the product without increasing chain tension or drive requirements. Can also be used in mechanical applications were magnetism introduced into the system can cause component malfunction. Has excellent corrosion, abrasion and impact resistance. Also has good surface hardness and a smooth surface finish. Used in corrosive environments where strong acids or bases are present.

Primary Components

Low ferromagnetic austenitic stainless steel

General Information

	Material	Temperature						
Prefix		Fahrenheit			Celsius			FDA
			max		min	max		Approval
		min	dry	wet	min	dry	wet	
SSB	Stainless Steel	-100	+800	+212	-73	+427	+100	Yes

Friction Factors Between Material and Product

Operating	Product Material									
Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.28	0.47	0.35	0.40	0.30	0.30	0.35			
Water	0.19	0.31	0.25	NR	0.20	0.20	0.25			
Soap and Water	0.12	0.21	0.15	NR	0.10	0.10	0.15			
Oil				NR			0.15			

Friction Factors Between Material and Wearstrips

THOUGHT LUCTORS DOLL	veen material and	**Cuistrips							
Onevetina	1	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™					
Dry	0.50	0.40	0.40	0.40					
Water	0.40	0.30	0.30	0.30					
Soap and Water	0.20	0.20	0.20	0.20					
Oil	0.20	0.10	0.10	0.10					

Regulatory Information

Based on the material chemistries, industry standards, and the documentation in the Federal Registry, it is the opinion of Rexnord that the Rexnord® TableTop® stainless steel chains can be considered GRAS for direct food contact.

Rexnord, TableTop and MatTop are trademarks of Rexnord Corporation.

All rights reserved.


Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

- 1. It is important to lubricate side-flexing chains in the corners to reduce noise levels.
- 2. Not available for Rexnord® MatTop® and Multiflex chains.

SSB

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

GTC RubberTop® / SuperGrip™

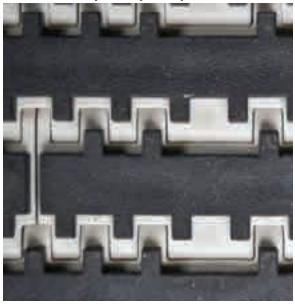

Brief Description

GTC is a high strength, toughened composite material specifically formulated to take constant impact. It's combination of high strength and low stretch along with high friction surface make it excellent for high speed case incline (or decline) conveyors. Has excellent impact resistance as well as good chemical resistance.

Primary Components

High strength, impact modified composite with high friction pads

General Information

Prefix	Metavial							
		Fahrenheit			Celsius			FDA
rielix	, max		ах	min	max		Approval	
		min	dry	wet	min	dry	wet	
GTC	Gray Tough Composite	0	+180	+140	-18	+82	+60	No

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	NR	NR	NR	NR	NR	NR	NR			
Water	NR	NR	NR	NR	NR	NR	NR			
Soap and Water	NR	NR	NR	NR	NR	NR	NR			
Oil	NR	NR	NR	0.87***	0.85***	NR	NR			

Friction Factors Between Material and Wearstrips

Operating	1	Nearstrip M	aterial	
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™
Dry	0.30	0.25	0.25	0.22
Water	0.23	0.21	0.21	0.20
Soap and Water	0.15	0.15	0.15	0.15
Oil	0.10	0.10	0.10	0.10

1. Not available for Rexnord® TableTop® and Multiflex chains.

Regulatory Information

***It is not recommended to accumulate on RubberTop® products; however, these values can be utilized when determining brake belt or "hold back" calculations.

Rexnord is trademark of Rexnord Corporation.


All rights reserved.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

Patent Pending.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

THD

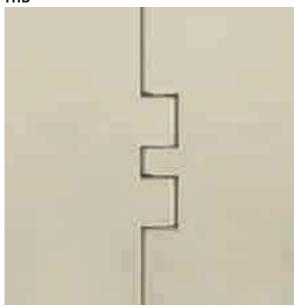

Brief Description

A patented blend of the Rexnord® High Temperature Antimicrobial material. Formulated to inhibit the growth of bacteria, mold and mildew that may cause discoloration, odor or degradation of the Rexnord® MatTop® chain. Allows detection as it passes through a metal detector. Formulated for detection in dry food and frozen food. Retains physical properties at elevated temperatures in both wet and dry environments. A good general purpose conveyor chain material with excellent resistance to chemicals including salts, alcohol, bases and many acids. Developed specifically for chains used in dry snack food and frozen food processing.

Primary Components

Polypropylene (PP) and nonferrous metal particulate Microban® Antimicrobial Product Protection

General Information

Prefix	Material							
		Fahrenheit			Celsius			FDA
		!	max		min	max		Approval
		111111	min dry			dry	wet	
THD	Tan High Temperature Detectable Antimicrobial	+40	+220	+212	+4	+104	+100	***

Friction Factors Between Material and Product

Operating	Product Material									
Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35			
Water	0.19	0.21	0.17	NR	0.25	0.25	0.25			
Soap and Water	0.16	0.14	0.10	NR	0.20	0.20	0.20			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

Thought actors between material and Wearstrips									
Onevetina	Wearstrip Material								
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™					
Dry	0.35	0.30	0.30	0.26					
Water	0.25	0.25	0.25	0.22					
Soap and Water	0.20	0.20	0.20	0.19					
Oil	0.10	0.10	0.10	0.10					

Regulatory Information

***These materials meet the end-test requirements as specified by FDA 21 CFR 177.1520 (c), the FDA requirement for polyolefin materials intended for direct food contact. All components of these materials are either compliant for food contact as listed by the FDA or regulated by the EPA.

Rexnord, TableTop and MatTop are trademarks of Rexnord Corporation.

All rights reserved.

This material will not protect the user against food-borne illness. Always maintain good hygiene, proper cleaning procedures are still required.

Microban is a registered trademark of Microban Products Company. Nylatron is a registered trademark of

Quadrant Engineering Plastics Products.

U.S. Patent 6177113

- 1. Buoyant in water.
- 2. Not available for Rexnord® TableTop® and Multiflex chains.
- 3. The ability to detect plastic particles will vary due to sensitivity of individual metal detectors.



EM - MA - 37

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



Patented Rexnord® Ultra High Strength Material is specially formulated to be used in heavy-duty applications such as pasteurizers, sterilizers and coolers. Has excellent chemical resistance and can be used in high temperature applications in both dry and wet environments.

Primary Components

High strength polypropylene (PP) composite

General Information

Prefix	Matarial	Fahrenheit			Celsius			FDA	
r	Pretix	Material	min	max		min	max		Approval
		min	dry	wet	dry		wet		
U	JHS™	Ultra High Strength (Black)	+40	+220	+212	+4	+104	+100	No

Friction Factors Between Material and Product

Operating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.30	0.29	0.25	0.35	0.32	0.30	0.35			
Water	0.19	0.21	0.19	NR	0.24	0.25	0.25			
Soap and Water	0.16	0.14	0.10	NR	0.19	0.20	0.20			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

Operating	\	Nearstrip M	aterial	
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™
Dry	0.35	0.30	0.30	0.26
Water	0.30	0.25	0.25	0.22
Soap and Water	0.25	0.20	0.20	0.19
Oil	0.10	0.10	0.10	0.10

Regulatory Information

Rexnord, TableTop and UHS are trademarks of Rexnord Corporation.

All rights reserved.

Nylatron is a registered trademark of

Quadrant Engineering Plastics Products.

- 1. Not buoyant in water.
- 2. Not available for Rexnord® TableTop® and Multiflex chains.



USP is specifically formulated for chemically aggressive pasteurizer, warmer and cooler applications. USP offers advantages that include superior resistance to chemicals used in cleaning and boil-out as well as extended chain life in high-temperature environments. USP material remains stronger and more flexible than plain polypropylene in hot, oxidative environments such as pasteurizers or warmers/coolers. The end result is increased reliability throughout the entire life of the chain

Primary Components

Polypropylene (PP) + Chemical Stabilizers

General Information

	Material							
Prefix		F	ahrenhe	it	Celsius			FDA
Prelix		min	max		min	max		Approval
			dry	wet	min	dry	wet	
USP	Ultra Stabilized Polypropylene (Dark Green)	+40	+220	+212	+4	+104	+100	Yes

Friction Factors Between Material and Product

Onerating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.29	0.29	0.24	0.35	0.32	0.28	0.31			
Water	0.19	0.21	0.18	NR	0.24	0.20	0.25			
Soap and Water	0.15	0.14	0.10	NR	0.19	0.15	0.17			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

THOUGHT LUCTORS DOLL	veen material and	**Cuistrips						
Onevetina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.35	0.30	0.30	0.26				
Water	0.30	0.25	0.25	0.22				
Soap and Water	0.25	0.20	0.20	0.19				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR \S 177.

Rexnord and TableTop are trademarks of Rexnord Corporation.


All rights reserved.

Nylatron is a registered trademark of Quadrant Engineering Plastics Products.

- 1. Buoyant in water.
- 2. Not available for Rexnord® TableTop® and Multiflex chains.

USP

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

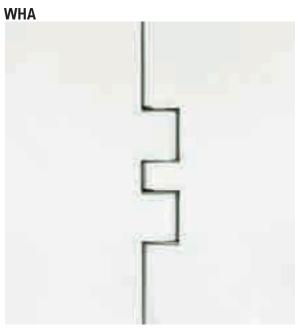



Formulated to inhibit the growth of bacteria, mold and mildew that may cause discoloration, odor or degradation of the Rexnord® MatTop® chain. Retains physical properties at elevated temperatures in both dry and wet environments. A good general purpose conveyor chain material with excellent resistance to chemicals including salts, alcohol bases and many acids. Developed specifically for chains used in food processing.

Primary Components

Polypropylene (PP) Microban® Antimicrobial Product Protection

General Information

Duefin	Material	F	ahrenhe	it	Celsius			FDA
Prefix		min	max		min	max		Approval
		"""	dry	wet	min	dry	wet	
WHA	White High Temperature w/Antimicrobial Additive	+40	+220	+212	+4	+104	+100	***
BHA	Blue High Temperature w/Antimicrobial Additive	+40	+220	+212	+4	+104	+100	***

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.28	0.29	0.22	0.35	0.30	0.30	0.35			
Water	0.19	0.21	0.17	NR	0.25	0.25	0.25			
Soap and Water	0.16	0.14	0.10	NR	0.20	0.20	0.20			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

THOUSANT TOUCHTO BOLL	Trouble Lactore Between Material and Trouberipe									
Operating	Wearstrip Material									
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™						
Dry	0.35	0.30	0.30	0.26						
Water	0.25	0.25	0.25	0.22						
Soap and Water	0.20	0.20	0.20	0.19						
Oil	0.10	0.10	0.10	0.10						

Regulatory Information

***These materials meet the end-test requirements as specified by FDA 21 CFR 177.1520 (c), the FDA requirement for polyolefin materials intended for direct food contact. All components of these materials are either compliant for food contact as listed by the FDA or regulated by the EPA.

Rexnord, TableTop and MatTop are trademarks of Rexnord Corporation. All rights reserved.


This material will not protect the user against food-borne illness. Always maintain good hygiene, proper cleaning procedures are still required.

Microban is a registered trademark of Microban Products Company.

- 1. Buoyant in water.
- 2. Not available for Rexnord® TableTop® and Multiflex chains.



^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

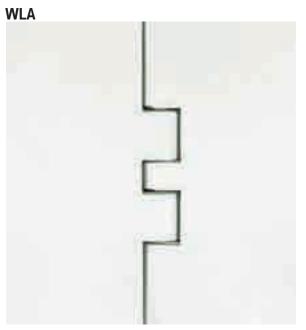



Formulated to inhibit the growth of bacteria, mold and mildew that may cause discoloration, odor or degradation of the Rexnord® MatTop® chain. Retains toughness, impact strength and ductility in both dry and wet conditions to temperatures as low as -100°F (-73°C). Has excellent impact resistance, and because of its inherent ductility, is excellent in applications where other materials may chip or fracture. Chemical resistant to most bleaches, bases, acids and hydrocarbons. Developed specifically for chains used in food processing.

Primary Components

Polyethylene (HDPE)
Microban® Antimicrobial Product Protection

General Information

Prefix								
	Material	F	ahrenhe	it	Celsius			FDA
		min	max		min	max		Approval
		"""	dry	wet	min	dry	wet	
WLA	White Low Temperature w/Antimicrobial Additive	-100	+80	+80	-73	+27	+27	***
BLA	Blue Low Temperature w/Antimicrobial Additive	-100	+80	+80	-73	+27	+27	***

Friction Factors Between Material and Product

Operating	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.22	0.24	0.18	0.30	0.22	0.22	0.28			
Water	0.17	0.17	0.14	NR	0.19	0.19	0.22			
Soap and Water	0.12	0.14	0.10	NR	0.25	0.25	0.15			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

THOUGHT LUCTORS DOLL	veen material and	vvcarstrips						
Onevetina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.28	0.23	0.23	0.21				
Water	0.22	0.20	0.20	0.19				
Soap and Water	0.15	0.15	0.15	0.14				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

***These materials meet the end-test requirements as specified by FDA 21 CFR 177.1520 (c), the FDA requirement for polyolefin materials intended for direct food contact. All components of these materials are either compliant for food contact as listed by the FDA or regulated by the EPA.

Rexnord, TableTop and MatTop are trademarks of Rexnord Corporation. All rights reserved.

This material will not protect the user against food-borne illness. Always maintain good hygiene, proper cleaning procedures are still required.


Microban is a registered trademark of Microban Products Company.

- 1. Buoyant in water.
- 2. Not available for Rexnord® TableTop® and Multiflex chains.



^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



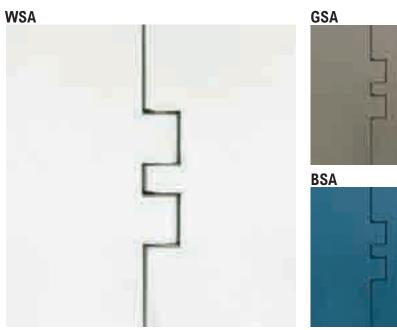

Formulated to inhibit the growth of bacteria, mold and mildew that may cause discoloration, odor or degradation of the Rexnord® MatTop® chain. Retains physical properties in both wet and dry environments and has superior impact resistance over standard acetal. A good chain material where resistance to abrasion and cutting are required. Developed specifically for chains used in the food processing industry.

Primary Components

Cut and abrasive wear resistant acetal (POM) Microban® Antimicrobial Product Protection

General Information

Prefix	Material	F	ahrenhe	it		FDA		
FIEIIX		min	max		min	max		Approval
		111111	dry	wet	min	dry	wet	
WSA	White Cut Resistant w/Antimicrobial Additive	-40	+180	+150	-40	+82	+66	***
GSA	Grey Cut Resistant w/Antimicrobial Additive	-40	+180	+150	-40	+82	+66	***
BSA	Blue Cut Resistant w/Antimicrobial Additive	-40	+180	+150	-40	+82	+66	***

Friction Factors Between Material and Product

Onorotina	Product Material								
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel		
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
Water	0.17	0.18	0.15	NR	0.20	0.20	0.22		
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
Oil				NR			0.10		

Friction Factors Between Material and Wearstrips

Onorotina	1	Nearstrip M	aterial	
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™
Dry	0.30	0.25	0.25	0.20
Water	0.23	0.21	0.21	0.18
Soap and Water	0.15	0.15	0.15	0.15
Oil	0.10	0.10	0.10	0.10

Regulatory Information


***These materials meet the end-test requirements as specified by FDA 21 CFR 177.1520 (c), the FDA requirement for polyolefin materials intended for direct food contact. All components of these materials are either compliant for food contact as listed by the FDA or regulated by the EPA.

Rexnord, TableTop and MatTop are trademarks of Rexnord Corporation. This material will not protect the user against food-borne illness. Always maintain good hygiene, proper cleaning procedures are still required. Microban is a registered trademark of Microban Products Company.



^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

^{1.} Not available for Rexnord® TableTop® and Multiflex chains.

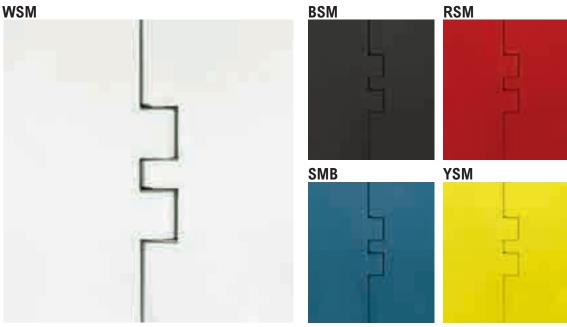

Formulated to be used in applications when superior wear and cut resistance is required. Can be used in both dry and wet conditions and in applications where abrasive wear due to products or environment is a concern. Cut resistant materials are commonly used in the meat processing industry on cutting, boning and trimming lines. Has good impact resistance and is as strong as standard acetal materials.

Primary Components

Cut and abrasive wear resistant acetal (POM)

General Information

Central information									
Prefix	Material	Fahrenheit				FDA			
		min	max		min	max		Approval	
			dry	wet	min	dry	wet		
WSM	White Cut Resistant	-40	+180	+150	-40	+82	+66	Yes	
BSM	Black Cut Resistant	-40	+180	+150	-40	+82	+66	Yes	
SMB	Blue Cut Resistant	-40	+180	+150	-40	+82	+66	Yes	
RSM	Red Cut Resistant	-40	+180	+150	-40	+82	+66	Yes	
YSM	Yellow Cut Resistant	-40	+180	+150	-40	+82	+66	Yes	

Friction Factors Between Material and Product

Onorotina	Product Material									
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel			
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30			
Water	0.17	0.18	0.15	NR	0.20	0.20	0.22			
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15			
Oil				NR			0.10			

Friction Factors Between Material and Wearstrips

THOUGHT TUOLOTO BOLL	voon matoriar and	TTOGTOTTE		Trotton ractoro Bothoon material and Trodrottipo								
Onevetina	Wearstrip Material											
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™								
Dry	0.30	0.25	0.25	0.20								
Water	0.23	0.21	0.21	0.18								
Soap and Water	0.15	0.15	0.15	0.15								
Oil	0.10	0.10	0.10	0.10								


Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord is a trademark of Rexnord Corporation.

All rights reserved.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.

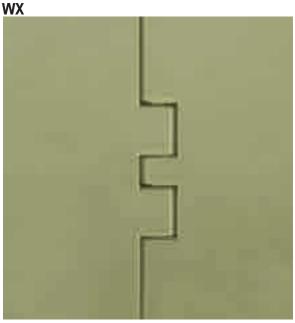



Formulated to be used in abrasive applications where chain is subjected to abrasives such as glass, sand and dirt. May extend chain wear life up to five times compared to acetal materials. Designed to be used in glass handing applications where abrasive shards of glass can wear other plastic chain materials rapidly. Can also be used in other abrasive applications.

Primary Components

Abrasion resistant nylon (PA)

General Information

Prefix	Drofiv	Material -	F	ahrenhe	it	Celsius			FDA
	iviateriai	min	max		min	max		Approval	
			1111111	dry	wet	1111111	dry	wet	
	WX	Green Abrasion Resistant Polyamide	-40	+220	NR	-40	+104	NR	No
	BWX	Black Abrasion Resistant Polyamide	-40	+220	NR	-40	+104	NR	No

Friction Factors Between Material and Product

Onorotina	Product Material								
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel		
Dry	0.25	0.27	0.20	0.33	0.25	0.25	0.30		
Water	NR	NR	NR	NR	NR	NR	NR		
Soap and Water	NR	NR	NR	NR	NR	NR	NR		
Oil				NR					

Friction Factors Between Material and Wearstrips

THOUGHT LUCIOIS DCIV	veen material and	vvcuistrips						
Onevetina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.30	0.25	0.25	0.22				
Water	NR	NR	NR	NR				
Soap and Water	NR	NR	NR	NR				
Oil	NA	NA	NA	NR				

It is important to lubricate side-flexing chains in the corners to reduce noise levels
at speeds in excess of 60 FPM; however water lubrication is unacceptable because it
will cause wear resistant material to swell and lose strength.

Regulatory Information

Rexnord is a trademark of Rexnord Corporation.

All rights reserved.

^{**}Friction of returnable bottles will vary depending on the quality of the glass, the amount of roughed up surface, etc.



Internally lubricated, extra low friction acetal for improved wearlife and high strength.

Primary Components

Internally lubricated acetal (POM)

General Information

Prefix	Material							
		Fahrenheit			Celsius			FDA
		!	max		min	max		Approval
		min	dry	wet	min	dry	wet	
XLA	Internally Lubricated Polyacetal (Grey)	-40	+180	+150	-40	+82	+66	Yes

Friction Factors Between Material and Product

Operating	Product Material								
Operating Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel		
Dry	0.20	0.20	0.15	0.30	0.20	0.20	0.25		
Water	0.15	0.18	0.13	NR	0.18	0.18	0.20		
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
Oil				NR			0.10		

Friction Factors Between Material and Wearstrips

Onevetina	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.25	0.20	0.20	0.16				
Water	0.20	0.18	0.18	0.14				
Soap and Water	0.15	0.15	0.15	0.13				
Oil	0.10	0.10	0.10	0.10				


Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord is a trademark of Rexnord Corporation.

All rights reserved.

^{1.} Used for Low Backline Pressure (LBP) chains.

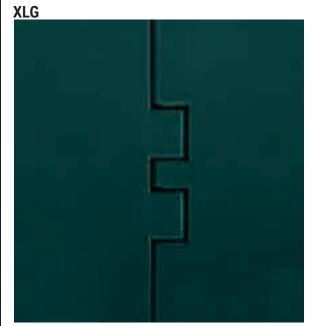

Internally lubricated, extra low friction acetal for improved wear life and high strength.

Primary Components

Internally lubricated acetal (POM)

General Information

Prefix	Material	Temperature						
		Fahrenheit			Celsius			FDA
		min	max		!	max		Approval
		min	dry	wet	min	dry	wet	
XLG	Low Friction Acetal (Green)	-40	+180	+150	-40	+82	+66	Yes

Friction Factors Between Material and Product

Operating	Product Material								
Condition	Aluminum	Returnable Glass Bottles**	Non-Returnable Glass Bottles	Paper	Plastic (crates, shrink wrap, etc)	PET	Steel		
Dry	0.20	0.20	0.15	0.30	0.20	0.20	0.25		
Water	0.15	0.18	0.13	NR	0.18	0.18	0.20		
Soap and Water	0.12	0.14	0.10	NR	0.15	0.15	0.15		
Oil				NR			0.10		

Friction Factors Between Material and Wearstrips

Operating	Wearstrip Material							
Operating Condition	Carbon and Stainless Steel	UHMWPE	Nylatron®	ULF™				
Dry	0.25	0.20	0.20	0.16				
Water	0.20	0.18	0.18	0.14				
Soap and Water	0.15	0.15	0.15	0.13				
Oil	0.10	0.10	0.10	0.10				

Regulatory Information

The Food and Drug Administration (FDA) accepts certain materials for direct food contact. FDA approved material is compliant to FDA 21 CFR § 177.

Rexnord, TableTop and MatTop are trademark of Rexnord Corporation.

All rights reserved.

^{1.} Only available in MCC® TableTop® and MatTop® chains.



REXNORD TableTop AND MatTop APPLICATION INFORMATION SHEET

Rexnord Industries, Inc.

Attn: __

			1272	Phone	rive, Grafton, WI (: 262.376.4700 262.376.4720	53024	
Submitted by:	:					Phone:	
Company:		Contact:				Phone:	
ls this applica	ition	☐ Exsisting a	oplication	□ Re	trofit application	on 🗆	New application
Chain style: Width			ı:	: Material: _			Length:
Any attachme	ents or sp	ecial reqirements	(If so, plea	ise desc	ribe in detail)?	?	
What drive co	onfiguration	on?					
Uni-Directiona	al 🗆		Bi-Direct	ional, Er	nd-Drive 🗆		Bi-Directional, Bottom Drive □
	DIRECTION	0	•	TR	AVEL	•	TRAVEL
		(product descripti					
Product weig	ght (lbs/ft f	or TableTop or lbs/ft² fo	or MatTop):				
Wearstrip ma	aterial: _			Am	bient / Chain	temperatu	ıre:
% of time acc	cumulati	on occurs (% slip)	:	Len	gth of conve	yor accun	nulation occurs:
Number of st	tarts and	l stops per hour:				Speed	d (FPM or MPM):
Lubrication (s	specify):						
Environment	t:	Abrasive: □	Chemica	ıls: □	Bacteria: □	Othe	r: 🗌 (specify)
		it in the application, in considerations (i.					question. transfer, special materials)
ls special cha (i.e. Ultra Violet st	iin materi tabilized (D	al required?_ UV, HUV, or LUV), Ant	i-static (AS), N	lelt Resista	ant (MR), etc.)		
					a conveyor loca		

All items in <u>BOLD</u> will need to be filled in before calculations can be performed.



www.rexnord.com

Why Choose Rexnord?

When it comes to providing highly engineered products that improve productivity and efficiency for industrial applications worldwide, Rexnord is the most reliable in the industry. Commitment to customer satisfaction and superior value extend across every business function.

Delivering Lowest Total Cost of Ownership

The highest quality products are designed to help prevent equipment downtime and increase productivity and dependable operation.

Valuable Expertise

An extensive product offering is accompanied by global sales specialists, customer service and maintenance support teams, available anytime.

Solutions to Enhance Ease of Doing Business

Commitment to operational excellence ensures the right products at the right place at the right time.

REXNORD

Rexnord Company Overview

Rexnord is a growth-oriented, multi-platform industrial company with leading market shares and highly trusted brands that serve a diverse array of global end markets.

Process & Motion Control

The Rexnord Process & Motion Control platform designs, manufactures, markets and services specified, highly engineered mechanical components used within complex systems where our customers' reliability requirements and the cost of failure or downtime are extremely high.

Water Management

The Rexnord Water Management platform designs, procures, manufactures and markets products that provide and enhance water quality, safety, flow control and conservation.

8rxFM-en 02/16